



# nüvi® 3400 series owner's manual



© 2012 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to the Garmin Web site ([www.garmin.com](http://www.garmin.com)) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

# Table of Contents

<b>Getting Started</b> .....	<b>1</b>	<b>Voice Command</b> .....	<b>17</b>
Connecting the Device to Vehicle Power.....	1	About Voice Command.....	17
About myDashboard.....	2	<b>Navigation</b> .....	<b>20</b>
About Sleep Mode.....	4	Starting a Route.....	20
Adjusting the Screen Brightness .....	4	Following an Automobile Route.....	21
Adjusting the Volume.....	4	About Exit Services .....	24
About Automatic Volume .....	4	Avoiding Road Features .....	24
Status Bar Icons .....	5	About Custom Avoidances .....	25
Satellite Signals.....	5	Enabling Advanced Detours .....	26
Using the On-screen Buttons .....	6	Navigating Off Road .....	26
Using the On-screen Keyboard .....	7	Pedestrian Routes.....	27
About Shortcuts.....	7	<b>Map Pages</b> .....	<b>28</b>
<b>Finding Locations</b> .....	<b>8</b>	Customizing the Map.....	28
About Locations.....	8	Viewing Turns.....	30
About Search Tools .....	11	Viewing Current Location Information .....	32
Saving a Home Location .....	14	<b>Hands-Free Phone Calls</b> .....	<b>33</b>
Finding Recently Found Places.....	14	About Hands-Free Calling .....	33
Finding Parking.....	15		

Placing a Call.....	34	Converting Units .....	49
Using In-Call Options .....	35	About Offers .....	50
Saving a Home Phone Number.....	36	Using the Language Guide.....	51
<b>Using the Apps .....</b>	<b>36</b>	<b>About Tracker .....</b>	<b>52</b>
Using Help.....	36	Setting Up Tracker.....	52
About Smartphone Link.....	36	About Followers.....	52
About Garmin Live Services .....	38	Hiding Your Location.....	54
About ecoRoute .....	39	Sending a Location Message .....	54
Viewing myGarmin Messages .....	42	Enabling Your Social Network Accounts for Tracker .....	55
Viewing the Weather Forecast .....	42	<b>Traffic.....</b>	<b>56</b>
About Audiobooks.....	43	Enabling Traffic.....	56
Planning a Trip.....	45	Traffic Data .....	56
Using the Media Player .....	46	Traffic Receiver .....	57
Viewing Pictures .....	47	Traffic on Your Route.....	58
Viewing Previous Routes and Destinations.....	48	Traffic in Your Area .....	59
Using the World Clock .....	48	Understanding Traffic Data.....	59
Setting an Alarm .....	48	About Traffic Cameras.....	59
Finding Parking Prices and Availability .....	48	Traffic Subscriptions .....	60
Finding Your Last Parking Spot .....	49		
Using the Calculator .....	49		

<b>Data Management.....</b>	<b>61</b>	Changing the Fuse in the Vehicle Power Cable .....	71
File Types .....	61	Mounting on Your Dashboard .....	71
About Memory Cards.....	61	Removing the Device, Cradle, and Mount.....	72
Transferring Files from Your Computer .....	62	Updating Maps .....	72
Deleting Files .....	63	Purchasing Additional Maps .....	73
<b>Customizing the Device.....</b>	<b>63</b>	Safety Cameras.....	73
Map and Vehicle Settings .....	63	Custom Points of Interest .....	73
Navigation Settings.....	64	Purchasing Accessories .....	74
Display Settings.....	65	Troubleshooting .....	75
Bluetooth Settings .....	65	<b>Index .....</b>	<b>77</b>
Traffic Settings.....	66		
Units and Time Settings.....	67		
Language and Keyboard Settings .....	67		
Proximity Alerts Settings.....	67		
About Device and Privacy .....	68		
Restoring Settings .....	68		
<b>Appendix .....</b>	<b>68</b>		
Power Cables .....	68		
Caring for Your Device.....	69		
Erasing User Data .....	70		



# Getting Started

## WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

---

- 1 Connect the device to vehicle power (page 1).
- 2 Mount the device (page 1).
- 3 Register the device (page 2).
- 4 Check for updates.
  - Software updates (page 3).
  - Free map update (page 3).

# Connecting the Device to Vehicle Power

## WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

---

Before you use your device on battery power, you should charge it.

- 1 Plug the vehicle power cable ① into the USB port ② on the device.
- 2 Snap the mount onto the suction cup ③.
- 3 Press the suction cup to the windshield, and flip the lever ④ back toward the windshield.
- 4 Fit the bottom of your device into the mount.
- 5 Tilt your device back until it snaps into place.



- 6 Plug the other end of the vehicle power cable into a power outlet in your vehicle.
- 7 If necessary, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.

## About myDashboard

Use myDashboard to register your device, check for software and map updates, access product manuals and support, and more.

## Setting Up myDashboard

- 1 Connect the USB cable to the USB port on the device.
- 2 Connect the USB cable to the USB port on your computer.
- 3 Go to [www.garmin.com/dashboard](http://www.garmin.com/dashboard).
- 4 Follow the on-screen instructions.

## Registering the Device

- 1 From myDashboard, click **Register Now**.
- 2 Follow on-screen instructions.

## Updating the Software

- 1 Open myDashboard ([page 2](#)).
- 2 Under Software Updates, click **Update Now**.
- 3 Follow the on-screen instructions.

## nüMaps Guarantee™

If you register through myDashboard, your device is eligible for one free map update within 90 days of acquiring satellites while you drive.

Go to [www.garmin.com/numaps](http://www.garmin.com/numaps).

## Updating Maps

- 1 Open myDashboard ([page 2](#)).
- 2 Register the device ([page 2](#)).
- 3 Under Map Updates, click **Update Now**.
- 4 Follow the on-screen instructions.

## Turning Off the Device

You can turn off the device completely.

- 1 Hold the **Power** key **1** for 3 seconds.



**NOTE:** If you hold the Power key for less than 4 seconds, the device enters sleep mode.

- 2 Select **Off**.

## Resetting the Device

You can reset your device if it stops functioning. Hold the **Power** key for 10 seconds.

## About Sleep Mode

Use sleep mode to conserve battery power when your device is not in use. Sleep mode uses very little power, and a battery charge lasts for weeks when your device is in sleep mode.

### Entering Sleep Mode

Press the **Power** key.

### Exiting Sleep Mode

While the device is in sleep mode, press the **Power** key and double-tap .

## Adjusting the Screen Brightness

- 1 Select **Settings** > **Display** > **Brightness**.
- 2 Use the slider bar to adjust the brightness.

## Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
  - Use the slider bar to adjust the volume.
  - Select  to mute the device.
  - Select  > **Audio Mixer** and use the slider bars to adjust the volume for navigation prompts, phone, and media.

## About Automatic Volume

Automatic volume allows the device to adjust the volume level based on the background noise in the vehicle. Automatic volume control lowers the volume of the device when background noise is low and raises the volume level when background noise increases.

## Enabling Automatic Volume

Your device can increase or decrease the volume automatically based on the level of background noise.

- 1 Select **Volume** >  > **Automatic Volume**.
- 2 Select **Enabled** > **Save**.

## Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status.
	Bluetooth® technology status (appears when connected to a compatible device).
	Transportation mode indicator.
	Current time.
	Battery status.
	Smartphone Link status (appears when connected to Smartphone Link). See <a href="#">page 37</a> .

## Satellite Signals

After the device is turned on, it begins acquiring satellite signals. The device may need a clear view of the sky to acquire satellite signals. When at least one of the  bars is green, your device has acquired satellite signals.

## Viewing GPS Satellite Signals

For more information about GPS, go to [www.garmin.com/aboutGPS](http://www.garmin.com/aboutGPS).

Hold .

## Transportation Modes

	Automobile mode
	Pedestrian mode

Routing and navigation are calculated differently based on your transportation mode.

For example, in Automobile mode, the estimated time of arrival is calculated using the speed limit of the roads on the route. Pedestrian mode calculates time of arrival based on walking speed.

**NOTE:** Pedestrian routes do not include highways. If you have cityXplorer™ maps loaded

on your device, pedestrian routes may include public transit ([page 27](#)).

## Choosing a Transportation Mode

Select .

## Battery Information

After the device is connected to power, it begins to charge.

 in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, you should fully discharge the battery and then fully charge it. Do not unplug the device until it is fully charged.

## Using the On-screen Buttons

- Select  to return to the main menu.
- Hold  to quickly return to the main menu.
- Select  or  to see more choices.
- Hold  or  to scroll faster.

- Select  to see a menu of options for the current screen.

## Using the On-screen Keyboard

See “Language and Keyboard Settings” to change the keyboard layout ([page 67](#)).

- Select a character on the keyboard to enter a letter or number.
- Select  to add a space.
- Hold  to delete a character.
- Select  to erase the entire entry.
- Select  to select the keyboard language mode.
- Select  to enter special characters, such as punctuation marks.
- Select  to change character capitalization.

## About Shortcuts

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool.

### Adding a Shortcut Icon

The Where To? menu can contain up to 36 shortcut icons.

- 1 Select **Where To?** > **Add Shortcut**.
- 2 Select an item.

### Removing a Shortcut

- 1 Select **Where To** >  > **Remove Shortcut(s)**.
- 2 Select the shortcut to remove.
- 3 Select the shortcut again to confirm.

# Finding Locations

The device offers many methods for finding locations.

- By category ([page 8](#))
- Near another location ([page 10](#))
- By spelling the name ([page 11](#))
- By address ([page 11](#))
- Using the map ([page 22](#))
- Using recently found locations ([page 14](#))
- Using coordinates ([page 12](#))
- Using saved locations ([page 15](#))

## About Locations

The detailed maps loaded in your device contain locations, such as restaurants, hotels, and auto services. You can use categories to browse for nearby businesses and attractions.

## Finding a Location by Category

- 1 Select **Where To?** > **Categories**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

### *Searching Within a Category*

 
To narrow your search results, you can search within some categories.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select the search bar.
- 5 Enter all or part of the name.
- 6 Select .

## Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select the search bar ①.



- 3 Enter a search term.  
Suggested search terms appear below the search bar as you type.
- 4 Select an option:
  - To search for a type of business, enter a category name, such as “movie theaters.”
  - To search for a business by name, enter all or part of the name.

- To search for an address near you, enter the street number and street name.
  - To search for an address in another city, enter the street number, street name, city, and state.
  - To search for a city, enter the city and state.
  - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
    - To search using a suggested search term, select the term.
    - To search using the text you entered, select .
  - 6 If necessary, select a location.

## Changing the Search Area

By default, your device finds locations closest to your current location. You can find a location near another city or location.

- 1 Select **Where To? > Searching Near**.
- 2 Select an option.
- 3 If necessary, select a location.

## Reporting a Closed or Missing Location

If your search results include an outdated or incorrect location, you can report the error to Garmin and remove the location from future searches.

- 1 Find a location ([page 8](#)).
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Edit**.
- 5 Select **Report as Closed** or **Report as Missing**.

This information is sent to Garmin when you connect to Smartphone Link or when you connect your device to myGarmin using your computer ([page 37](#)).

## Editing Location Information

You can change the address or phone number for a location that appears in the search results.

- 1 Find a location.
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Edit**.
- 5 Select **Address** or **Phone Number**, and enter the new information.

## Rating a Point of Interest

You can assign a star rating to a point of interest.

- 1 Find a location ([page 8](#)).
- 2 Select a location from the list.

- 3 Select .
- 4 Select the stars to rate the point of interest.  
The star rating updates on your device.

## About Search Tools

You can search for locations by using the on-screen keyboard or by entering the location's address or coordinates.

## Finding Fuel Stations and Prices

Before you can use this feature, you must subscribe to the Fuel Price service, and your device must be connected to a supported phone running Smartphone Link (page 36). This feature is not available in all areas.

You can find nearby fuel stations and compare fuel prices.

- 1 Select **Where To? > Fuel Prices**.
- 2 If necessary, select  > **Fuel Type**, select a fuel type, and select **Save**.

- 3 Select a fuel station.

## Finding an Address

Before you can find an address, you must add a shortcut to the address search tool (page 7).

**NOTE:** The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To? > Address**.
- 2 Enter the address number, and select **Next**.
- 3 Enter the street name, and select **Next**.
- 4 If necessary, select **Searching In** to change the city, state, or province.
- 5 If necessary, select the city, the state, or the province.
- 6 If necessary, select the address.

## Finding an Intersection

Before you can find an intersection, you must add a shortcut to the intersection search tool ([page 7](#)).

- 1 Select **Where To? > Intersections**.
- 2 Select a state or province.

**NOTE:** If necessary, select **State or Country** to change the country, state, or province.

- 3 Enter the first street name, and select **Next**.
- 4 If necessary, select the street.
- 5 Enter the second street name, and select **Next**.
- 6 If necessary, select the street.
- 7 If necessary, select the intersection.

## Finding a City

Before you can find a city, you must add a shortcut to the cities search tool ([page 7](#)).

- 1 Select **Where To? > Cities**.
- 2 If necessary, enter a city name in search bar and select .
- 3 If necessary, select a city from the list.

## Finding a Location Using Coordinates

Before you can find a location using coordinates, you must add a shortcut to the coordinates search tool ([page 7](#)).

You can find a location using latitude and longitude coordinates. This can be helpful when geocaching.

- 1 Select **Where To? > Coordinates**.
- 2 If necessary, select  **> Format**, select the correct coordinate format for the type of map you are using, and select **Save**.
- 3 Select the latitude coordinate.

- 4 Enter the new coordinate, and select **Done**.
- 5 Select the longitude coordinate.
- 6 Enter the new coordinate, and select **Done**.
- 7 Select **View on Map**.

## Finding a Location by Browsing the Map

Before you can find places included in the map data, such as restaurants, hospitals, and fuel stations, you must enable the map layer for places along the road ([page 28](#)).

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.

Location markers appear on the map for places along the road.

- 3 If necessary, select , and select a category icon to view only a specific category of places.
- 4 Select an option:


- Select a location marker.
- Select a point, such as a street, intersection, or address location.

- 5 If necessary, select the location description to view additional information.

## Finding a Location Using Quick Search

After you have performed a search for a point of interest, certain categories may display a Quick Search list that displays the last four destinations you selected.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If applicable, select a destination from the Quick Search list .

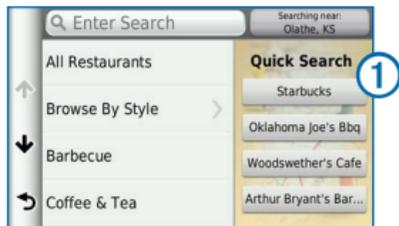

- 4 If necessary, select the appropriate destination.

## Saving a Home Location

You can set your home location for the location you return to most often.

- 1 Select **Where To?** >  > **Set Home Location**.
- 2 Select **Enter My Address, Use My Current Location**, or **Recently Found**.

The location is saved as “Home” in the Saved folder ([page 15](#)).

## Going Home

Select **Where To?** > **Go Home**.

## Editing Your Home Location Information

- 1 Select **Where To?** > **Saved** > **Home**.
- 2 Select  > **Edit**.
- 3 Enter your changes.
- 4 Select **Done**.

## Finding Recently Found Places

Your device stores the last 50 locations you have found.

- 1 Select **Where To?** > **Recent**.
- 2 Select a location.

## Clearing the List of Recently Found Places

Select **Where To?** > **Recent** >  > **Clear** > **Yes**.

## Finding Parking

You can find detailed parking information and pricing information.

- 1 Select **Where To? > Categories > Parking**.
- 2 Select a parking location.

## Setting a Simulated Location

If you are indoors or not receiving satellite signals, you can use the GPS to set a simulated location.

- 1 Select **Settings > Navigation**.
- 2 Select **GPS Simulator**.
- 3 Select **View Map**.
- 4 Select an area on the map.

The address of the location appears at the bottom of the screen.

- 5 Select the address.
- 6 Select **Set Location**.

## Saving Locations

You can save locations so you can quickly find them and create routes to them.

### Saving a Location

- 1 Find a location ([page 8](#)).
- 2 Select a location from the list.
- 3 Select .
- 4 Select  > **Save**.
- 5 If necessary, enter a name, and select **Done**.

### Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

### Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.

- 2 If necessary, select a category, or select **All Categories**.
- 3 Select a location.
- 4 Select **Go!**.

## Editing a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  **> Edit**.
- 6 Select an option:
  - Select **Name**.
  - Select **Phone Number**.
  - To assign categories to the Favorite, select **Categories**.
  - To save a photo with the Favorite, select **Assign Photo** ([page 47](#)).

- To change the symbol used to mark the Favorite on a map, select **Change Map Symbol**.

- 7 Edit the information.
- 8 Select **Done**.

## Assigning Categories to a Saved Location

You can add custom categories to organize your saved locations.

**NOTE:** Categories appear in the saved locations menu after you have saved more than 12 locations.

- 1 Select **Where To? > Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  **> Edit > Categories**.
- 5 Enter one or more category names, separated by commas.

Suggested categories appear below the text bar as you type. You can select a suggested word to use the suggestion.

- 6 Select **Done**.

## Sharing a Saved Location

If you save the location of a business that is not in the map data, you can share the location with Garmin so that it can be added to future map updates and shared with the Garmin community. Shared locations are sent to Garmin when you connect your device to myGarmin using your computer.

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select **Share Place**.
- 6 Enter one or more categories that apply to the location, and select **Done**.

- 7 Select **Share**.

## Deleting a Saved Location

**NOTE:** Deleted locations cannot be recovered.

- 1 Select **Where To? > Saved**.
- 2 Select  **> Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

# Voice Command

## About Voice Command

**NOTE:** Voice Command is not available for all languages and regions, and may not be available on all models.

Voice Command allows you to use your device by saying words and commands. The Voice Command menu provides voice prompts and a list of available commands.

## Setting Your Wakeup Phrase

The wakeup phrase is a word or phrase you can say to activate Voice Command. The default wakeup phrase is **Voice Command**.

**TIP:** You can reduce the chance of accidental Voice Command activation by using a strong wakeup phrase.

1 Select **Apps > Voice Command > Customize Phrase**.

2 Enter a new wakeup phrase.

The device indicates the strength of the wakeup phrase as you enter the phrase.

3 Select **Done**.

## Activating Voice Command

Say your wakeup phrase.

The Voice Command menu appears.

## Voice Command Tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices or the radio, to increase the accuracy of the voice recognition.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the device as needed.
- Increase the length of your wakeup phrase to reduce the chance of accidental Voice Command activation.
- Listen for two tones to confirm when the device enters and exits Voice Command mode.

## Starting a Route Using Voice Command

You can say the names of popular, well-known locations.

- 1 Say your wakeup phrase (page 18).
- 2 Say **Find Place**.




- 3 Listen for the voice prompt, and speak the name of the location.

A list of locations appears.



- 4 Say the line number.

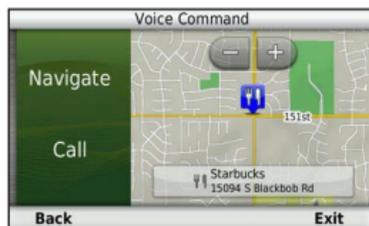

- 5 Say **Navigate**.

## Finding an Address

- 1 Say **Voice Command**.
- 2 Say **Find Address**.
- 3 Speak the entire address.

## Muting Instructions

You can disable the voice prompts for Voice Command without muting the device.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Mute Instructions > Enabled**.

## Disabling Voice Command

You can disable Voice Command, which prevents you from accidentally activating Voice Command while speaking.

- 1 Select **Apps > Voice Command >** .
- 2 Select **Voice Command > Disabled**.

# Navigation

## Starting a Route

- 1 Search for a location ([page 9](#)).
- 2 Select a location.
- 3 Select **Go!**.
- 4 If necessary, select an option.
  - Select **Drive**.
  - Select **Walk**.
  - Select **Public Transit** to calculate a route that combines public transit and walking.

**NOTE:** You must have cityXplorer™ maps loaded to navigate using public transit ([page 27](#)).

- 5 If necessary, select a route.

## Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category, or select **All Saved Places**.
- 3 Select a location.
- 4 Select **Go!**.

## Using Multiple Route Preview

- 1 Find a location ([page 9](#)).
- 2 Select **Routes**.
- 3 Use the on-screen buttons to select a route.
- 4 Select **Go!**.

## Previewing a Route

- 1 Find a location ([page 9](#)).
- 2 Select **Routes**.

## Following an Automobile Route

The route is marked with a magenta line. A checkered flag marks your destination.

As you travel, the device guides you to the destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, the device recalculates the route and provides new directions.



## Using the Navigation Map

- 1 From the main menu, select **View Map**.
- 2 If the zoom controls are hidden, select the map to display the zoom controls.
- 3 Select the map to switch to browsing mode. Map buttons appear.
- 4 Select an option:
  - To zoom in or out, select or .
  - To rotate the map view, select .
  - To switch between North Up and 3-D views, select .
  - To add or remove map layers, select .
  - To view specific location categories, select and select a category icon.
  - To center the map on your current location, select .

- To view shortcuts for map and navigation features, select .

## Using Multi-touch Controls

You can use multi-touch controls to change the map view while using the navigation map (page 21).

- Drag the map to view different parts of the map.
- Double-tap the map to zoom in one level.
- Pinch two fingers together on the screen to zoom out.
- Spread two fingers on the screen to zoom in.
- Drag two fingers left or right to rotate the map.
- Drag two fingers upward on the screen to switch to North Up view.
- Drag two fingers downward on the map to switch to 3-D view.

## Adding a Point to a Route

Before you can add a stop to a route, you must be navigating a route in Automobile mode.

- 1 While navigating a route, select  to return to the main menu.
- 2 Select **Where To?**.
- 3 Search for the location (page 8)
- 4 Select **Go!**.
- 5 Select **Add to Active Route**.

## Taking a Detour

While navigating an automobile route, you can use detours to avoid obstacles ahead of you, such as construction zones.

**NOTE:** If the route you are currently navigating is the only reasonable option, your device might not calculate a detour.

From the map, select  > **Detour**.

## Stopping the Route

From the map, select .

## Updating Speed Limits

### NOTICE

The speed limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

An icon displaying the current speed limit may appear as you travel on major roadways.

- 1 From the map, select  > **Set Speed Limit**.
- 2 Select  and  to set the speed limit.

## Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature ([page 68](#)).

Using the myTrends™ feature, your device predicts your destination based on your travel history, the day of the week, and the time of day. After you have driven to a saved location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel, and traffic information.

Select the navigation bar to view a suggested route to the location.

## About Exit Services

While you navigate a route, you can find gas, food, lodging, and rest rooms near upcoming exits.

Services are listed under tabs by category.

	Gas
	Food
	Lodging
	Restrooms

### Finding Exit Services

- 1 From the map, select  > **Exit Services**.
- 2 Use the arrows to select an upcoming exit.
- 3 Select an exit service tab.
- 4 Select a point of interest.

### Navigating to an Exit

- 1 From the map, select  > **Exit Services** > .
- 2 Select **Go!**.

### Avoiding Road Features

- 1 Select **Settings** > **Navigation** > **Avoidances**.
- 2 Select the road features to avoid on your routes, and select **Save**.

### Avoiding Transit Types

**NOTE:** Transit types are available when cityXplorer maps are loaded ([page 27](#)).

- 1 Select **Settings** > **Navigation** > **Public Transit**.
- 2 Select the transit type to avoid on your routes.
- 3 Select **Save**.

## About Custom Avoidances

Custom avoidances allow you to avoid specific areas and sections of road. You can enable and disable custom avoidances as needed.

### Avoiding an Area

- 1 Select **Settings > Navigation > Custom Avoidances**.
- 2 If necessary, select **Add New Custom Avoidance**.
- 3 Select **Add Avoid Area**.
- 4 Select the upper-left corner of the area to avoid, and select **Next**.
- 5 Select the lower-right corner of the area to avoid, and select **Next**.

The selected area is shaded on the map.

- 6 Select **Done**.

### Avoiding a Road

- 1 Select **Settings > Navigation > Custom Avoidances**.
- 2 Select **Add Avoid Road**.
- 3 Select the starting point of the section of road to avoid, and select **Next**.
- 4 Select the ending point of the road section, and select **Next**.
- 5 Select **Done**.

### Disabling a Custom Avoidance

You can disable a custom avoidance without deleting it.

- 1 Select **Settings > Navigation > Custom Avoidances**.
- 2 Select an avoidance.
- 3 Select  **> Disable**.

## Deleting Custom Avoidances

- 1 Select **Settings > Navigation > Custom Avoidances**.
- 2 Select an option:
  - To delete all custom avoidances, select .
  - To delete one custom avoidance, select the avoidance, and select  > **Delete**.

## Enabling Advanced Detours

Select **Settings > Navigation > Advanced Detours**.

## Using Advanced Detours

Use this feature to detour around a specific section of your trip while you navigate.

- 1 Select a destination, and select **Go!** (page 8).
- 2 From the map, select  > **Detour**

- 3 Select a detour option:
  - **Next .5mi on Route.**
  - **Next 2mi on Route.**
  - **Next 5mi on Route.**
  - **Detour by Road(s) on Route.**
- 4 If necessary, select a road to detour around.

## Navigating Off Road

If you are not following roadways as you navigate, you can use Off Road mode.

- 1 Select **Settings > Navigation**.
- 2 Select **Calculation Mode > Off Road > Save**.

The route will be calculated as a straight line to the location.

## Pedestrian Routes

### Following a Pedestrian Route

In Pedestrian mode, your route is displayed on a two-dimensional map.

If you have cityXplorer maps installed, the device calculates a route that uses a combination of public transit options, such as riding a bus or subway, and walking.

**NOTE:** cityXplorer maps are not included with the device. Go to <http://my.garmin.com> to purchase cityXplorer maps.

**NOTE:** You can change the types of public transit and limit the distance spent walking during a pedestrian route ([page 64](#)).

### Using the Pedestrian Navigation Map

See [page 21](#) for more map functions.



- Select ① to switch between sections of the route.
- Select ② to view the route itinerary.

### About Map Icons

- When you are navigating in Pedestrian mode,  indicates your approximate position and your direction of travel on the map.

- The circle around  indicates the accuracy of your position on the map. A smaller circle means the displayed position is more accurate.
- The yellow icons indicate the transportation method used in each section of the route. For example, when you see , board a bus at that point in the route.
- The black dots on the map show public transit stops along your route.

## Enabling Transit Types

**NOTE:** Transit types are available when cityXplorer maps are loaded ([page 27](#)).

- 1 Select **Settings > Navigation > Public Transit**.
- 2 Select the transit type to include in your routes, and select **Save**.

# Map Pages

## Customizing the Map

### Customizing the Map Layers

You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 From the map, select .
- 2 Select **Map Layers**.
- 3 Select which layers you want to include on the map, and select **Save**.

### Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- 1 Select **Settings > Map and Vehicle > Map Layers**.
- 2 Select the **Trip Log** check box.

## Changing the Map Data Field

- 1 From the map, select the data field in the lower left-hand corner.
- 2 Select a type of data to display.
- 3 Select **Save**.

## Changing the Map Perspective

- 1 Select **Settings > Map and Vehicle > Driving Map View**.
- 2 Select an option:
  - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
  - Select **North Up** to display the map in 2-D with North at the top.
  - Select **3-D** to display the map in three dimensions.

## Customizing Map Buttons

You can include up to three icons on the right side of the main map.

- 1 Select **Settings > Map and Vehicle > Map Buttons**.
- 2 Select an icon, and select **OK**.
- 3 Select .
- 4 Select a different icon.

## Removing Buttons from the Map

You can remove all buttons from the right side of the map.

- 1 Select **Settings > Map and Vehicle > Map Buttons**.
- 2 Select an icon, and touch **OK**.
- 3 Select **Save**.

## Changing the Map Dashboard


- 1 Select **Settings > Map and Vehicle > Dashboards**.
- 2 Use the arrows to select a dashboard.
- 3 Select **Save**.

## Viewing Turns

### Viewing a List of Turns

When you are navigating a route, you can view all of the turns and maneuvers for your entire route and the distance between turns.

- 1 Select the text bar on the top of the map.
- 2 Select a turn.

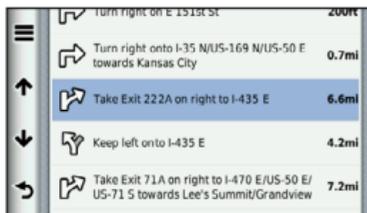

The details for the turn appear. If available, an image of the junction appears for junction on major roadways.


### Viewing the Entire Route on the Map

- 1 While navigating an automobile route, select the navigation bar at the top of the map.
- 2 Select  > **Map**.

### Viewing the Next Turn

While navigating an automobile route, a preview of the next turn, lane change, or other maneuver appears in the upper-left corner of the map. The preview includes the distance to the turn or maneuver and the lane in which you should be traveling, if available.

From the map, select  to view the next turn on the map.

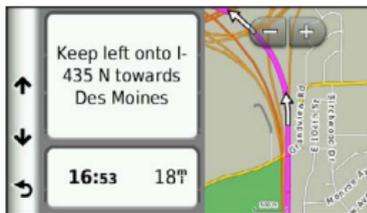

## Viewing Junctions

While navigating an automobile route, you can view the junctions on major roadways. When you approach a junction in a route, the image of that junction appears briefly, if available.

From the map, select  to view the junction, if available.



## Viewing Traffic Alerts

While you navigate an automobile route, a traffic alert may appear.


Select the alert to view more information.

## Viewing Trip Information

The trip information page displays your present speed and provides statistics about your trip.

**TIP:** If you make frequent stops, leave the device turned on so it can accurately measure elapsed time during the trip.

From the map, select  > Trip Computer.

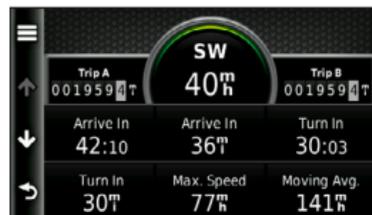

## Resetting Trip Information

- 1 From the map, select  > **Trip Computer**.
- 2 Select an option:
  - When not navigating a route, select **Reset All** to reset every data field, except the speedometer, on the page.
  - Select **Reset Trip Data** to reset the information on the trip computer.
  - Select **Reset Max. Speed** to reset the maximum speed.
  - Select **Reset Trip B** to reset the odometer.

## Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select  > **Where Am I?**

## Finding Nearby Services

- 1 From the map, select  > **Where Am I?**
- 2 Select **Hospitals**, **Police Stations**, or **Fuel** to view the nearest locations in that category.

## Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.

Select **Apps** > **Where Am I?** >  > **Directions to Me.**

# Hands-Free Phone Calls

## About Hands-Free Calling

Using Bluetooth® wireless technology, your device can connect to your mobile phone to become a hands-free device. To determine whether your mobile phone with Bluetooth technology is compatible with your device, go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth).

Your phone may not support all of the hands-free phone features your device provides.

## Enabling Bluetooth Wireless Technology

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

## Pairing Your Phone

Before you can use hands-free calling, you must pair your device with a compatible mobile phone.

Pairing your phone with your device allows your phone and device to recognize each other and connect quickly.

- 1 Place your phone and your device within 33 ft. (10 m) of each other.
- 2 On your device, enable Bluetooth wireless technology ([page 33](#)).
- 3 Select an option:
  - Select **Add Phone**.
  - If you have already paired a different phone, select **Phone** > **+**.
- 4 On your phone, enable Bluetooth wireless technology.
- 5 On your device, select **OK**.  
A list of nearby Bluetooth devices appears.

- 6 Select your phone from the list, and select **OK**.
- 7 If necessary, on your phone, confirm that the device is allowed to connect.
- 8 If necessary, enter the device Bluetooth PIN (**1234**) into your phone.

### Disconnecting Your Phone

- 1 Select **Settings > Bluetooth**.
- 2 Select **Phone > None > Save**.

Your phone is disconnected from your device but remains paired with your device.

### Tips After Pairing the Devices

- After the initial pairing, the two devices can connect automatically each time you turn them on.
- When your phone is connected to your device, you are ready to make phone calls.

- When you turn on the device, it tries to connect to the last phone to which it was connected.
- You might need to set your mobile phone to connect to the device automatically when the device is turned on.

### Receiving a Call

When you receive a call, select an option:

- Select **Answer**.
- Select **Ignore** to ignore the call.

### Placing a Call

#### Dialing a Number

- 1 Select **Phone > Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

## Calling a Contact in Your Phone Book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

1. Select **Phone > Phone Book**.
2. Select a contact.
3. Select **Call**.

## Calling a Point of Interest

- 1 Select **Phone > Points of Interest**.
- 2 Select a point of interest ([page 8](#)).
- 3 Select **Call**.

## Using the Call History

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call

history to be available. Some phones do not support this feature.

- 1 Select **Phone > Call History**.
- 2 Select a category.  
A list of calls appears, with the most recent calls at the top.
- 3 Select a call.

## Using In-Call Options

- 1 While on a call, select .
- 2 Select an option:
  - To transfer audio to your phone, select **Handset**.  
**TIP:** You can use this feature if you want to turn off your device and remain on the call, or if you need privacy.
  - To display a keypad, select **Keypad**.  
**TIP:** You can use this feature to use automated systems, such as voice mail.

- To mute the microphone, select **Mute**.
- To hang up, select **End Call**.

## Saving a Home Phone Number

**TIP:** After you save a home number, you can edit the home number by editing “Home” in your list of saved locations ([page 15](#)).

Select **Phone** >  > **Set Home Number**, enter your phone number, and select **Done**.

## Calling Home

Before you can call home using the Call Home button, you must enter a phone number for your home location.

Select **Phone** > **Call Home**.

# Using the Apps

## Using Help

Select **Apps** > **Help** to view information about using the device.

## Searching Help Topics

Select **Apps** > **Help** > .

## About Smartphone Link

Smartphone Link is a phone application that allows your device to download live data using your phone data connection. Your device transfers data from Smartphone Link using Bluetooth wireless technology.

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provide free and subscription-based plans to view live data on your device, such as traffic data, weather, and fuel prices.

Saved locations and recently found locations are synchronized with your phone each time your device connects to Smartphone Link.

## Downloading Smartphone Link

Smartphone Link supports phones running Android™ operating system version 2.1 or newer.

Download Smartphone Link from the application market on your supported phone. See your phone owner's manual for information on downloading and installing applications.

## Connecting to Smartphone Link

Before you can connect to Smartphone Link, you must download and install the Smartphone Link application on your phone.

- 1 Start Smartphone Link on your phone.
- 2 From your device, select **Settings** > **Bluetooth**, and select the **Bluetooth** check box.

- 3 From your phone, select **Bluetooth Settings**.

- 4 From your phone, enable Bluetooth wireless technology, and scan for nearby Bluetooth devices.

See your phone owner's manual for more information.

- 5 From your phone, select your device from the list of nearby devices.

- 6 Follow the on-screen instructions on your phone and on your device to confirm the pairing request.

 appears in the status bar on your device when Smartphone Link is connected.

## Sending a Location from Your Phone to Your Device

Smartphone Link is registered as a navigation application on your phone.

- 1 From your phone, select the button to start navigating to a location (see the owner's manual for your phone).
- 2 Select Smartphone Link from the application menu.

The next time you connect your device to your phone, the location is transferred to the recently found items on your device.

## Disabling Hands-Free While Connected to Smartphone Link

While the device is connected to the phone and receiving Garmin Live Services, you can disable hands-free calling.

- 1 Select **Apps > Smartphone Link**.
- 2 Select your phone.
- 3 Clear the **Hands-Free Calling** check box.

## About Garmin Live Services

**NOTE:** Smartphone Link supports phones running Android operating system version 2.1 or newer.

Before you can use Garmin Live Services, your device must be connected to a supported phone running Smartphone Link ([page 37](#)).

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provides free and subscription-based plans to view live data on your device, such as traffic data, weather and fuel prices.

Some Garmin Live Services, like Weather, are available as separate apps on your device. Other Garmin Live Services, like Live Traffic, enhance the existing navigation features on your device. Features that require access to Garmin Live Services display the Smartphone Link symbol  and appear only when the device is paired with a phone running Smartphone Link.

## Subscribing to Garmin Live Services

You must subscribe to Garmin Live Services using the Smartphone Link app on your phone.

- 1 Start the Smartphone Link app on your phone ([page 37](#)).
- 2 Select **Garmin Live Services**.  
A list of services and subscription prices appears.
- 3 Select a service.
- 4 Select the price.
- 5 Select **Subscribe**.
- 6 Follow the on-screen instructions.

## About ecoRoute

The ecoRoute™ feature calculates the fuel economy and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute feature is an estimate only. The data is not actually read from the vehicle, unless you are using the ecoRoute HD accessory. To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy ([page 40](#)).

In some areas, an ecoRoute HD accessory is required to use ecoRoute features.

## ecoRoute HD Accessory

When connected to the ecoRoute HD accessory, your device can receive real-time vehicle information, such as error messages, RPM, and battery voltage. Your device includes data read from the vehicle by the ecoRoute HD accessory when calculating ecoRoute data.

Go to [www.garmin.com/ecoroute](http://www.garmin.com/ecoroute) for compatibility and purchasing information.

## Setting up the Vehicle Profile

The first time you use the ecoRoute features, you must enter vehicle information.

- 1 Select **Apps** > **ecoRoute™**.
- 2 Enter fuel and mileage information.

### Changing the Fuel Price

- 1 Select **Apps** > **ecoRoute™** > **At the Pump**.
- 2 Enter the current price of fuel, and select **Next**.
- 3 Select **Yes**.

### Calibrating the Fuel Economy

You can calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. You should calibrate when you fill up your fuel tank.

- 1 Select **Apps** > **ecoRoute™** > **At the Pump**.
- 2 Enter the current fuel price.
- 3 Enter the amount of fuel the vehicle has used since the last time the fuel tank was filled.

- 4 Enter the distance you have travelled since the last time the fuel tank was filled.

- 5 Select **Next**.

The device calculates the average vehicle fuel economy.

- 6 Select **Save**.

### About the ecoChallenge

ecoChallenge helps you maximize the vehicle fuel economy by scoring your driving habits. The higher your ecoChallenge scores, the more fuel you have saved. The ecoChallenge collects data and calculates a score whenever your device is moving and in Automobile transportation mode.

### Viewing ecoChallenge Scores

- View your current score in the  ecoChallenge icon on the map.
- Select  to view detailed scores.

## About the ecoChallenge Score

- **Current**—displays the score for your current driving activity.
- **Overall**—displays an average of the speed, acceleration, and braking score.
- **Speed**—displays your score for driving your vehicle at the optimal speed for conserving fuel (45–60 mph for most vehicles).
- **Acceleration**—displays your score for smooth and gradual acceleration. You lose points for rapid acceleration.
- **Braking**—displays your score for smooth and gradual braking. You lose points for hard braking.

## Removing the ecoChallenge Score From the Map

Select  >  > **Settings** > **Hide** > **Save**.

## Resetting the ecoChallenge Scores

Select  >  > **Reset**.

## Viewing Fuel Economy Information

You can view your fuel consumption, your total fuel cost, and your average fuel economy.

- 1 Select **Apps** > **ecoRoute** > **Fuel Economy**.
- 2 Select a section of the graph to zoom in.

## Mileage Reports

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on the device, a mileage report is created for the distance you traveled.

## Viewing a Mileage Report

You can view saved mileage reports on the device.

**TIP:** You can access mileage reports in the Reports folder on the device drive/volume ([page 62](#)).

- 1 Select **Apps** > **ecoRoute™** > **Mileage Report**.
- 2 Select a report.

## Resetting ecoRoute Information

- 1 Select **Apps** > **ecoRoute™** > **Vehicle Profile**.
- 2 Select  > **Reset**.

## Viewing myGarmin Messages

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([page 37](#)). This feature is not available in all areas.

You can view messages from myGarmin, such as notifications for software and map updates.

- 1 Select **Apps** > **myGarmin**.  
If you have unread messages, the number of unread messages appears on the myGarmin icon.

- 2 Select a message subject.  
The full message appears.

## Viewing the Weather Forecast

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([page 37](#)). This feature is not available in all areas.

- 1 Select **Apps** > **Weather**.  
The forecast for your current location appears.
- 2 Select a day.  
The detailed forecast for that day appears.

## Viewing Weather Near a Different City

- 1 Select **Apps** > **Weather** > **Current Location**.
- 2 Select an option:
  - To view weather for a favorite city, select a city in the list.

- To add a favorite city, select **Add City**, and enter a city name.

## Viewing the Weather Radar

You can view an animated, color-coded radar map of current weather conditions, as well as a weather icon on the map. The weather icon changes to show weather in the vicinity, such as rain, snow, and thunderstorms.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select  **> Weather Radar**.

## Viewing Weather Alerts

While you are traveling with your device, weather alerts may appear on the map. You can also view a map of weather alerts near your current location or near a selected city.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select  **> Weather Alerts**.

## Checking Road Conditions

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select  **> Road Conditions**.

## About Audiobooks

The device can play audiobooks from Audible.com. This feature requires a subscription to Audible.com. Go to [www.audible.com/garmin](http://www.audible.com/garmin) to activate a free 30-day trial subscription.

## Loading Audiobooks onto Your Device

Before you can load audiobooks onto your device, you must subscribe to Audible.com. Go to [www.audible.com/garmin](http://www.audible.com/garmin) for more information.

- 1 Connect your device to your computer ([page 2](#)).
- 2 On your computer, log in to your Audible.com account.

- 3 Follow the instructions from Audible.com to load audiobooks onto your device.

## Playing an Audiobook

- 1 Select **Apps** > **Audible**.
- 2 Select **Browse**.
- 3 Select **Titles, Authors, Narrators**, or **Bookmarks**.
- 4 Select a book.
- 5 Select an option to control playback:
  - To add a bookmark, select .
  - To pause playback, select .
  - To resume playback, select .
  - To move quickly forward or backward in the book, use the slider bar at the top of the page.
  - To go to the next chapter, select .
  - To go to the previous chapter, select .

- To fast forward, hold .
- To rewind, hold .

## Adding a Bookmark

When you play an audiobook, the player automatically resumes the audiobook from the point where you last stopped. You can add a bookmark to mark a certain spot in the audiobook.

While playing an audiobook, select  > **Add Bookmark**.

## Resuming Playback from a Bookmark

- 1 While playing an audiobook, select .
- 2 Select a bookmark.

## Renaming a Bookmark

By default, the device names a bookmark using the time stamp of the bookmark. You can rename a bookmark.

- 1 While playing an audiobook, select  >   
> **Rename Bookmarks**.
- 2 Select a bookmark.
- 3 Enter a name, and select **Done**.

## Deleting a Bookmark

- 1 While playing an audiobook, select  >   
> **Delete Bookmarks**.
- 2 Select a bookmark.

## Planning a Trip

You can use the trip planner to create and save a trip with multiple destinations.

- 1 Select **Apps** > **Trip Planner**.
- 2 Select .
- 3 Select **Select Start Location**.
- 4 Search for a location ([page 8](#)).
- 5 Select **Select**.
- 6 To add additional locations, select .

- 7 Select **Next**.
- 8 Enter a name, and select **Done**.

## Editing a Trip Itinerary

- 1 Select **Apps** > **Trip Planner**.
- 2 Select a saved trip.
- 3 Select an option:
  - Select a location in the trip to change the arrival or departure time.
  - Select a location in the trip, and then select **Duration** to record how long you will stay at a location.
  - Select a travel time to change the transportation mode or route preference for that portion of the trip.
  - Select **Map** to view the trip on the map.

## Navigating to a Saved Trip

- 1 Select **Apps** > **Trip Planner**.
- 2 Select a saved trip.

- 3 Select **Go!**.
- 4 If prompted, select a route ([page 20](#)).

## Editing a Saved Trip

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select .
- 4 Select an option:
  - Select **Rename Trip**.
  - Select **Edit Destinations** to add and delete locations, or to change the order of locations.
  - Select **Delete Trip**.
  - Select **Optimize Order** to arrange the stops on your trip in the most-efficient order.

## Using the Media Player

The media player may not be available on all models.

The device can play mp3 files. Some models can play mp4 files. See [page 62](#) to add files to your device.

- 1 Select **Apps > Media Player**.
- 2 Select an option:

- To play a song, select .
- To adjust the volume, select .
- To toggle between songs, select  and .
- To shuffle songs, select .
- To repeat the playlist, select .
- To repeat a song, select .

## Browsing Music Files

You can browse to find other songs you have loaded on the device.

- 1 Select **Apps > Media Player**.
- 2 Select **Browse**.
- 3 Select an option.

## Viewing Pictures

View pictures that you have stored in the device or on a memory card. See [page 61](#) for more information about loading pictures on the device.

- 1 Select **Apps > Picture Viewer**.
- 2 Use the arrows to scroll through the images.
- 3 Select a picture.

## Viewing a Slideshow

- 1 Select **Apps > Picture Viewer**.
- 2 Select .

While a slideshow is playing, you can select the screen to stop the slideshow.

## Setting a Picture as Wallpaper

- 1 Select **Apps > Picture Viewer**.
- 2 Select a picture.
- 3 Select  **> Set as Wallpaper**.
- 4 Use the on-screen buttons to adjust the wallpaper.
- 5 Select **Save**.

## Deleting Pictures

- 1 Select **Apps > Picture Viewer**.
- 2 Select a picture.
- 3 Select  **> Delete > Yes**.

## Viewing Previous Routes and Destinations

Before you can use this feature, you must enable the travel history feature ([page 66](#)).

You can view your previous routes and places you have stopped on the map.

Select **Apps > Where I've Been**.

## Using the World Clock

- 1 Select **Apps > World Clock**.
- 2 If necessary, select a city, enter a city name, and select **Done**.

## Viewing the World Map

Select **Apps > World Clock >** .

Nighttime hours appear in the shaded area of the map.

## Setting an Alarm

- 1 Select **Apps > Alarm Clock**.
- 2 Set a time.
- 3 Select the **Alarm On** check box.

## Finding Parking Prices and Availability

Before you can use this feature, you must subscribe to the Dynamic Parking service, and your device must be connected to a supported phone running Smartphone Link ([page 37](#)). This feature is not available in all areas.

You can find detailed parking information, including parking availability in nearby garages, and pricing information.

- 1 Select **Apps > Parking**.
- 2 Select a parking location.

## Finding Your Last Parking Spot

When you remove your device from the vehicle mount while the device is on, your current location is saved as a parking spot.

Select **Apps > Last Spot**.

### Saving a Parking Spot

- 1 Select **Apps > Last Spot**.
- 2 Select **Parking** or **Last Spot**.
- 3 Select  **> Save**.
- 4 If necessary, enter a name.

## Using the Calculator

Select **Apps > Calculator**.

### Converting Units

- 1 Select **Apps > Unit Converter**.

- 2 If necessary, select the button next to **Convert**, select a measurement category, and select **Save**.
- 3 If necessary, select a unit button, select a unit of measurement, and select **Save**.
- 4 Select the field below the unit you want to convert.
- 5 Enter the number, and select **Done**.

### Setting Currency Conversion Rates Manually

You can update the currency conversion rates manually so that you are always using the most-current rates.

- 1 Select **Apps > Unit Converter**.
- 2 Select the button next to **Convert**.
- 3 Select **Currency**, then select **Save**.
- 4 If necessary, select a currency button, select a different currency, and select **Save**.

- 5 Select the button at the bottom of the screen that displays the currency conversion rate.
- 6 Select the box next to a currency.
- 7 Enter a value, and select **Done**.
- 8 Select **OK**.

## About Offers

If your device package includes a traffic receiver, you will receive location-relevant offers and coupons. Ad-based traffic information is available only in North America.

**NOTE:** The traffic receiver must be connected to external power and you must be in a coverage area to receive ad-based traffic information.

See our privacy statement at [www.garmin.com/privacy](http://www.garmin.com/privacy).

## Viewing Offers



Do not attempt to write down coupon codes while driving.

- 1 Select an offer that appears on the screen to search for the nearest location related to that offer.
- 2 If available, select  to view a coupon code.
- 3 Write down the code and present it when you arrive at the location.

## Viewing an Offer List

Select **Apps > Offers** to view a list of the offers you have received.

## Disabling Traffic and Offers

To disable offers, you must disable traffic.

- 1 Select **Settings > Traffic**.
- 2 Select the **Live Traffic** check box.

## Using the Language Guide

Use the Language Guide to look up and translate words or phrases.

Select **Apps > Language Guide**.

### Selecting Languages in the Language Guide

You can select the languages you want to translate when translating words and phrases.

- 1 Select **Apps > Language Guide > Words and Phrases**.
- 2 Select  **> Language**.
- 3 Select **From**, select the language to translate from, and select **Save**.
- 4 Select **To**, select the language to translate to, and select **Save**.

### Translating Words and Phrases

- 1 Select **Apps > Language Guide > Words and Phrases**.

- 2 Select a category and subcategories.
- 3 If necessary, select , enter a keyword, and select **Done**.
- 4 Select a word or a phrase.
- 5 Select  to listen to the translation.

### Using a Bilingual Dictionary

- 1 Select **Apps > Language Guide > Bilingual Dictionaries**.
- 2 Select a dictionary.
- 3 If necessary, select , enter a word, and select **Done**.
- 4 Select a word.
- 5 Select  to listen to the translation.

# About Tracker

## NOTICES

Use caution when sharing your location information with others.

Before you can use this feature, your device must be connected to a supported smartphone running Smartphone Link ([page 37](#)). This feature is not available in all areas.

Tracker allows you to report your location, follow others, and allow others to follow your location. Tracker is available on select Garmin GPS devices and as an application for select mobile phones.

## Setting Up Tracker

- 1 Select **Apps > Tracker > Get Started**.
- 2 Follow the on-screen instructions.

## Changing Your Nickname

The first time you power on your device, you are prompted to enter the nickname that identifies you when you use Tracker.

- 1 Select **Apps > Tracker >  > Profile**.
- 2 Beside **Nickname**, select **Edit**.
- 3 Enter a nickname, and select **Done**.

## Viewing Your Tracker ID

Your Tracker ID identifies your device uniquely to other Tracker users. Other users can use your Tracker ID to invite you as a follower.

Select **Apps > Tracker >  > Profile**.

## About Followers

You can invite another person to follow your location for a specified period of time. When that time expires, the follower can no longer view your location.

You can invite a follower using an email address or a Tracker ID. If you invite a follower using an email address, that person must follow you using the Garmin website. If you invite a follower using a Tracker ID, that person can follow you using Tracker.

## Following Others

Before you can follow someone using your device, that person must invite you to follow him or her using your Tracker ID.

- 1 Select **Apps > Tracker >  View**.
- 2 Select a person.

The location of the selected person appears on the map.

## Viewing Followers

You can view a list of users who are currently following you.

Select **Apps > Tracker >  View**.

## Inviting a Follower

You can invite another person to follow your location for a specified period of time.

- 1 Select **Apps > Tracker > Follow Me**.
- 2 Select an option:
  - Select the check box next to each recipient.
  - Select **Enter Email or Tracker ID**, and enter the recipient email address or Tracker ID ([page 52](#))

**NOTE:** The Tracker ID is case-sensitive.
- 3 Select **Next**.
- 4 Select an option:
  - Select a message.
  - Select **Enter Message**, and enter a customized message.
- 5 Drag **Hours** and **Minutes** to select a duration, and select **Next**.

6 Select **Send**.

### **Canceling a Follower**

When you cancel a follower, that person can no longer view your location.

1 Select **Apps > Tracker >  View**.

2 Select .

3 Select one or more followers.

4 Select **Cancel Tracking**.

## **Hiding Your Location**

You can hide your location from people who are following you.

Select **Apps > Tracker > Hide Me**.

## **Sending a Location Message**

You can send a customized location message to another user.

1 Select **Apps > Tracker > Here I Am**.

2 Select an option:

- Select the check box next to each recipient.
- Select **Enter Email or Tracker ID**, and enter the recipient email address or Tracker ID.

The Tracker ID is case-sensitive.

3 Select **Next**.

4 Select an option:

- Select a message.
- Select **Enter Message**, and enter a customized message.

5 Select **Send**.

## **Enabling Your Social Network Accounts for Tracker**

Before you can post your location on social networks using Tracker, you must enable your social network accounts in Smartphone Link.

- 1 From your phone, launch Smartphone Link.
  - 2 Select the menu button on your phone.
  - 3 Select **Settings**.
  - 4 Select the **Social Network** check box.
  - 5 Select **Social Network Accounts**.
  - 6 Select the check box next to the social networks that should be enabled in Tracker.
  - 7 If necessary, follow the on-screen prompts to authenticate the selected accounts.
- 4 Select an option:
    - Select a message.
    - Select **Enter Message**, and enter a customized message.
  - 5 Drag **Hours** and **Minutes** to select a duration, and select **Next**.
  - 6 Select **Send**.

## Posting Your Location to Social Networks

You can post your location on social networks for a specified period of time. During that time, anyone who can view your posts on the social network will be able to view your location.

- 1 Select **Apps > Tracker > Follow Me**.
- 2 Select one or more social networks.
- 3 Select **Next**.

## Traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Traffic information may not be available in all areas or countries.

Your device can receive traffic information using a compatible Garmin traffic receiver or a traffic subscription from Garmin Live Services ([page 37](#)). A traffic receiver is included in some

packages. It is built into the vehicle power cable. The traffic receiver and device must be powered and in data range of a station transmitting traffic data to receive traffic information. You do not need to activate the subscription included with your traffic receiver.

For information about traffic receivers and coverage areas, go to [www.garmin.com/traffic](http://www.garmin.com/traffic).

## Enabling Traffic

- 1 Select **Settings > Traffic**.
- 2 Select **Live Traffic**.

## Receiving Traffic Data Using a Traffic Receiver

- 1 Connect the traffic receiver to an external power source.
- 2 Connect the traffic receiver to the device.

**NOTE:** Heated (metallized) windshields could degrade the performance of the traffic receiver.

## Traffic Receiver



①	Mini-USB connector
②	External antenna connector
③	Internal antenna
④	Power LED
⑤	Vehicle power adapter

## Receiving Traffic Data Using Smartphone Link

You can purchase a traffic subscription to receive traffic data using Smartphone Link. When your device is connected to Smartphone Link and within a traffic coverage area, your device will begin displaying traffic information. Traffic data is not available in all areas.

- 1 From your phone, purchase a traffic subscription from Garmin Live Services ([page 39](#)).
- 2 Connect your device to Smartphone Link ([page 37](#)).

## About the Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.

Color	Severity	Meaning
Green	Low	Traffic is flowing freely.
Yellow	Medium	Traffic is moving but there is a delay. There is moderate traffic congestion.
Red	High	Traffic is not moving or moving slowly. There is a severe delay.
Gray	No signal	Traffic information is not available.

## Traffic on Your Route

When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, your device automatically recalculates the route.

The traffic icon  changes color to indicate the severity of traffic conditions on your route or on the road you are currently traveling.

Your device may route you through a traffic delay if a better alternative route does not exist. The delay time is added into your estimated time of arrival automatically.

### Viewing Traffic on Your Route

- 1 While navigating a route, select .
- 2 Select **Traffic on Route**.

A list of traffic events appears, organized by their location on the route.

- 3 Select an event.

### Manually Avoiding Traffic on Your Route

- 1 From the map, select .
- 2 Select **Traffic On Route**.
- 3 If necessary, use the arrows to view other traffic delays on your route.
- 4 Select  > **Avoid**.

### Taking an Alternate Route

- 1 While navigating an automobile route, select .
- 2 Select **Alternate Route**.
- 3 Select a route.

### Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the map, select .
- 2 Select **Traffic Conditions**.

## Traffic in Your Area

### Searching for Traffic Delays

- 1 From the map, select .
- 2 Select **Traffic Conditions** > .
- 3 Select an item in the list to view delays on the road.
- 4 If there is more than one delay, use the arrows to view additional delays.

### Viewing a Traffic Incident on the Map

- 1 From the map, select .
- 2 Select **Traffic Conditions**.
- 3 Select a traffic icon.

## Understanding Traffic Data

The traffic legend explains the icons and colors used on the traffic map.

- 1 From the map, select .
- 2 Select **Traffic Legend**.

## About Traffic Cameras

Before you can use this feature, you must subscribe to the photoLive service, and your device must be connected to a supported phone running Smartphone Link ([page 37](#)). This feature is not available in all areas.

Traffic cameras provide live images of traffic conditions on major roadways and intersections. You can save cameras that you want to view regularly.

### Saving a Traffic Camera

- 1 Select **Apps > MyCameras**.
- 2 Select **Add Camera**.
- 3 Select a road.
- 4 Select an intersection.
- 5 Select **Save**.

## Viewing a Traffic Camera

Before you can view a traffic camera, you must save a traffic camera.

- 1 Select **Apps > myCameras**.
- 2 Select a camera.

## Traffic Subscriptions

### Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your device acquires satellite signals while receiving traffic signals from the pay service provider.

## Lifetime Subscriptions

Some models include subscriptions to lifetime features.

LT	This model includes a lifetime traffic subscription and a traffic receiver.
LMT	This model includes a nüMaps Lifetime™ subscription, lifetime traffic subscription ( <a href="#">page 72</a> ), and a traffic receiver.

### Adding a Subscription

You can purchase traffic subscriptions for other regions or countries.

**NOTE:** You can also purchase a traffic subscription using Garmin Live Services ([page 39](#)). Traffic subscriptions purchased through Garmin Live Services require a connection to Smartphone Link, but do not require a traffic receiver ([page 37](#)).

- 1 From the main menu, select **Settings > Traffic**.

- 2 Select an option:
  - For non-North American units, select **Subscriptions** > **+**.
  - For North American units, select **+**.
- 3 Write down the FM traffic receiver unit ID.
- 4 Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic) to purchase a subscription and get a 25-character code.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.
- 5 Select **Next** on the device.
- 6 Enter the code.
- 7 Select **Done**.

## Data Management

You can store files, such as JPEG image files, on your device. The device has a memory card slot for additional data storage.

**NOTE:** The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

### File Types

The device supports the following file types:

- JPEG and JPG image files ([page 47](#))
- Maps and GPX waypoint files from Garmin mapping software, including MapSource®, BaseCamp™, and HomePort™ ([page 72](#))
- GPI custom POI files from Garmin POI Loader ([page 73](#))

## About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software ([www.garmin.com/trip\\_planning](http://www.garmin.com/trip_planning)). In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

### Installing a Memory Card

The device supports microSD™ and microSDHC memory cards.

- 1 Insert a memory card into the slot on the device.
- 2 Press it in until it clicks.

## Transferring Files from Your Computer

- 1 Connect the device to your computer ([page 2](#)).

Your device and memory card appear as removable drives in My Computer in Windows and as mounted volumes on Mac computers.

**NOTE:** Some computers with multiple network drives cannot display nüvi drives. See your operating system Help file to learn how to map the drives.

- 2 On your computer, open the file browser.
- 3 Select the file.
- 4 Select **Edit > Copy**.
- 5 Open the **Garmin** or memory card drive or volume.
- 6 Select **Edit > Paste**.

The file appears in the list of files in the device memory or on the memory card.

### Disconnecting the USB Cable

- 1 Complete an action:

- For Windows computers, click the eject icon  in your system tray.
  - For Mac computers, drag the volume icon to the **Trash** .
- 2 Disconnect the cable from your computer.

## Deleting Files

### NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

## Customizing the Device

- 1 Select **Settings**.

- 2 Select a setting category.
- 3 Select the setting to change it.

## Map and Vehicle Settings

Select **Settings** > **Map & Vehicle**.

- **Vehicle**—changes the icon to represent your position on the map. Go to [www.garmin.com](http://www.garmin.com) for more icons.
- **Driving Map View**—sets the perspective on the map.
- **Pedestrian Map View**—sets the perspective on the map.
- **Map Detail**—sets the level of detail on the map. More detail may cause the map to draw slower.
- **Map Theme**—changes the color of the map data.

- **Map Buttons**—sets which icons are included on the map. Up to three icons can be included on the map.
- **Map Layers**—sets the data that appears on the map (page 28).
- **Dashboards**—sets the map dashboard layout.
- **myMaps**—sets which installed maps the device uses.

## Enabling Maps

**TIP:** To purchase additional map products, go to [www.garmin.com/maps](http://www.garmin.com/maps).

- 1 Select **Settings > Map and Vehicle > myMaps**.
- 2 Select a map.

## Navigation Settings

Select **Settings > Navigation**.

- **Calculation Mode**—sets route preference.

- **Avoidances**—sets road features to avoid on a route.
- **Custom Avoidances**—allows you to avoid specific roads or areas.
- **Advanced Detours**—sets the length of a detour.
- **Limit Walking**—controls the maximum walking distance included in a pedestrian route.
- **Public Transit**—enables or disables transit types.
- **Safe Mode**—disables all functions that require significant operator attention.
- **GPS Simulator**—stops the device from receiving a GPS signal, and saves battery power.

## Route Preferences

Select **Settings > Navigation > Calculation Mode**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

- **Faster Time**—calculates routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—calculates routes that are shorter in distance but can take more time to drive.
- **Less Fuel**—calculates routes that could use less fuel than other routes.
- **Off Road**—calculates a direct line from your location to your destination.

## Display Settings

Select **Settings** > **Display**.

- **Color Mode**—sets a light background (**Day**), a dark background (**Night**), or automatically switches between the two based on the sunrise time and the sunset time for your current location (**Auto**).

- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power.
- **Display Timeout**—sets the amount of idle time before your device enters sleep mode.
- **Screenshot**—allows you to take a picture of the device screen. Screenshots are saved in the **Screenshot** folder of the device storage.

## Bluetooth Settings

Select **Settings** > **Bluetooth**.

- **Bluetooth**—enables the Bluetooth component.
- **Add Phone** or **Phone**—manages connections between your device and mobile phones with Bluetooth wireless technology.
- **Friendly Name**—allows you to enter a friendly name that identifies your devices with Bluetooth technology.

## Managing the Bluetooth Device List

You can add, disconnect, or delete phones that your device detects while Bluetooth is enabled.

- 1 Select **Settings** > **Bluetooth** > **Phone**.
- 2 Select an option:
  - Select a phone for your device to connect with.
  - Select  to add a phone to the menu.
  - Select  to delete a phone from the device memory.
  - Select **None** to drop your current connection

## Disabling Bluetooth

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

## Traffic Settings

Select **Settings** > **Traffic**.

- **Live Traffic**—enables traffic
- **Subscriptions**—lists current traffic subscriptions.
- **trafficTrends™**—see [page 66](#).

## Enabling Traffic

The traffic receiver is included in some device packages.

Select **Settings** > **Traffic** > **Live Traffic**.

## About Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to [www.garmin.com/traffic](http://www.garmin.com/traffic).

## Viewing Traffic Subscriptions

Select **Settings** > **Traffic** > **Subscriptions**.

## trafficTrends

When the trafficTrends feature is enabled, your device records historic traffic data and uses

that data to calculate more-efficient routes. This information is sent to Garmin when you connect your device to myGarmin™ using your computer.

**NOTE:** Different routes may be calculated based on traffic trends for the day of the week or the time of day.

### ***Disabling trafficTrends***

To prevent your device from recording or sharing traffic data, you must disable trafficTrends.

Select **Settings > Traffic > trafficTrends**.

## **Units and Time Settings**

Select **Settings > Units and Time**.

- **Current Time**—sets the device time.
- **Time Format**—allows you to select a 12-hour, 24-hour, or UTC display time.
- **Units**—sets the unit of measure used for distances.

## **Language and Keyboard Settings**

Select **Settings > Language**.

- **Voice Language**—sets the language for voice prompts.
- **Text Language**—sets all on-screen text to the selected language.

**NOTE:** Changing the text language does not change the language of user-entered data or map data, such as street names.

- **Keyboard Language**—sets the language for your keyboard.
- **Keyboard Layout**—sets the keyboard layout.

## **Proximity Alerts Settings**

Select **Settings > Proximity Alerts**.

- **Audio**—sets the tone of an alert.
- **Alerts**—alerts you when you approach custom safety cameras.

## About Device and Privacy

Select **Settings > Device**.

- **About**—displays the software version number, the unit ID number, and information on several other software features.
- **EULAs**—displays the end-user license agreements that apply to your choice.

**NOTE:** You need this information when you update the system software or purchase additional map data ([page 73](#)).

- **Position Reporting**—allows the device to collect your speed, direction, and location information and share it with strategic partners and service providers.
- **Travel History**—allows the device to record information for the myTrends ([page 23](#)), Where I've Been ([page 48](#)), and Trip Log ([page 28](#)) features.
- **Clear Travel History**

## Restoring Settings

You can restore a category of settings or all settings to the factory default values.

- 1 Select **Settings**.
- 2 If necessary, select a settings category.
- 3 Select  > **Restore**

## Appendix

### Power Cables

Your device can be powered three ways.

- Vehicle power cable
- USB cable
- AC adapter (optional accessory)

## Caring for Your Device

### **NOTICE**

Avoid dropping your device and operating it in high-shock and high-vibration environments.

---

Do not expose the device to water.

---

Contact with water can cause this device to malfunction.

---

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

---

Never use a hard or sharp object to operate the touchscreen, or damage may result.

---

## Cleaning the Outer Casing

### **NOTICE**

Avoid chemical cleaners and solvents that can damage plastic components.

---

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

## Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, use water, isopropyl alcohol, or eyeglass lens cleaner.
- 3 Apply the liquid to the cloth.
- 4 Gently wipe the screen with the cloth.

## Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device at <http://my.garmin.com>.

## Erasing User Data

This process erases all items you have saved to the device.

- 1 Turn the device on.
- 2 Hold your finger on the lower-right corner of the device screen.
- 3 Keep your finger pressed until the pop-up window appears.
- 4 Select **Yes** to clear all user data.

All original settings are restored.

## Extending the Battery Life

- Keep your device away from extreme temperatures.
- Put the device in sleep mode ([page 4](#)).
- Decrease the screen brightness ([page 4](#)).
- Do not leave your device in direct sunlight.
- Decrease the volume ([page 4](#)).
- Disable Bluetooth ([page 66](#)).
- Shorten the display timeout time ([page 65](#)).

## Changing the Fuse in the Vehicle Power Cable

### NOTICE

When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position. The vehicle power cable does not work unless it is assembled correctly.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

- 1 Unscrew the end piece ①.

**TIP:** You may need to use a coin to remove the end piece.

- 2 Remove the end piece, the silver tip ②, and the fuse ③.
- 3 Install a 2 A fast-blow fuse.



- 4 Place the silver tip in the end piece.
- 5 Screw the end piece back into the vehicle power cable ④.

## Mounting on Your Dashboard

### NOTICE

The permanent mounting adhesive is extremely difficult to remove after it is installed.

Use the enclosed mounting disk to mount your device to the dashboard and comply with certain state regulations.

- 1 Clean and dry the dashboard where you are placing the disk.
- 2 Remove the backing from the adhesive on the bottom of the disk.
- 3 Place the disk on the dashboard.
- 4 Remove the clear plastic cover from the top of the disk.

- 5 Place the suction cup mount on top of the disk.
- 6 Flip the lever down (toward the disk).

## Removing the Device, Cradle, and Mount

### Removing the Device from the Cradle

- 1 Press up on the tab on the top of the cradle.
- 2 Tilt the device forward.

### Removing the Cradle from the Mount

- 1 Turn the cradle to the right or left.
- 2 Apply pressure until the socket on the cradle releases the ball on the mount.

### Removing the Suction Cup Mount from the Windshield

- 1 Flip the lever on the suction cup mount toward you.
- 2 Pull the tab on the suction cup toward you.

## Updating Maps

You can update the maps on your device. For more information, go to [www.garmin.com/mapupdates](http://www.garmin.com/mapupdates), and select **Map Update User Guide**.

### About nüMaps Lifetime

Some models include subscriptions to nüMaps Lifetime, which provides quarterly map updates for the life of your device. For terms and conditions, see [www.garmin.com/us/maps/numaps\\_lifetime](http://www.garmin.com/us/maps/numaps_lifetime).

LM	This model includes a nüMaps Lifetime subscription.
LMT	This model includes a lifetime traffic subscription, nüMaps Lifetime subscription, and a traffic receiver.

## Purchasing Additional Maps

- 1 Go to your device product page on the Garmin web site ([www.garmin.com](http://www.garmin.com)).
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

## Safety Cameras

### CAUTION

Garmin is not responsible for the accuracy of, or the consequences of using, a custom POI or safety camera database.

Safety camera information is available in some locations. Check <http://my.garmin.com> for availability. For these locations, the nüvi includes the locations of hundreds of safety cameras. Your nüvi alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

## Custom Points of Interest

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

### Installing a POI Loader

You can create or download custom POI lists and install them on your device using POI Loader software.

- 1 Go to [www.garmin.com/extras](http://www.garmin.com/extras).
- 2 Click **Services > POI Loader**.
- 3 Install the POI Loader onto your computer.

## Using the POI Loader Help Files

For more information on the POI Loader, refer to the Help file.

With the POI Loader open, click **Help**.

## Finding Extras

- 1 Select **Where To? > Categories > Custom POIs**.
- 2 Select a category.

## Purchasing Accessories

Go to <http://buy.garmin.com>.

## Troubleshooting

Problem	Solution
My device is not acquiring satellite signals	<ul style="list-style-type: none"><li>• Verify the GPS simulator is turned off (<a href="#">page 64</a>).</li><li>• Take your device out of parking garages and away from tall buildings and trees.</li><li>• Remain stationary for several minutes.</li></ul>
The suction cup will not stay on my windshield.	<ol style="list-style-type: none"><li>1 Clean the suction cup and windshield with rubbing alcohol.</li><li>2 Dry with a clean, dry cloth.</li><li>3 Mount the suction cup (<a href="#">page 1</a>).</li></ol>
The device does not charge in my vehicle.	<ul style="list-style-type: none"><li>• Check the fuse in the vehicle power cable (<a href="#">page 71</a>).</li><li>• Verify the vehicle is turned on and is supplying power to the power outlet.</li><li>• Your device can only charge between 32°F and 113°F (between 0°C and 45°C). If the device is placed in direct sunlight or in a hot environment, it cannot charge.</li></ul>
My battery does not stay charged for very long.	To maximize the time between changes, turn down the backlight ( <a href="#">page 65</a> ).
My battery gauge does not seem accurate.	Allow the unit to fully discharge, and fully charge it (without interrupting the charge cycle).
How do I know my device is in USB mass storage mode?	When your device is in USB mass storage mode, a picture of a device connected to a computer is shown on the device screen. Also, you should see two new removable disk drives listed in <b>My Computer</b> .

<p>The device is connected to the computer, but it will not go into mass storage mode.</p>	<ol style="list-style-type: none"> <li>1 Disconnect the USB cable from your computer.</li> <li>2 Turn off the device.</li> <li>3 Plug the USB cable into a USB port on your computer and into your device. The device automatically turns on and goes into USB mass storage mode.</li> <li>4 Verify your device is connected to a USB port and not a USB hub.</li> </ol>
<p>I cannot see any new removable drives in my list of drives.</p>	<p>If you have several network drives mapped on your computer, Windows can have trouble assigning drive letters to your device drives. Refer to your operating system Help file to learn how to map or assign drive letters.</p>
<p>My phone will not connect to the device.</p>	<ul style="list-style-type: none"> <li>• From the main menu, select <b>Tools &gt; Settings &gt; Bluetooth</b>. The Bluetooth field must be set to <b>Enabled</b>.</li> <li>• Turn on your phone and bring it within 33 feet (10m) of the device.</li> <li>• Go to <a href="http://www.garmin.com/bluetooth">www.garmin.com/bluetooth</a> for more help.</li> </ul>

# Index

## Symbols

2-D, 3-D map view **29**

## A

accessories **74**

adding a point **22**

addresses **11**

alerts

    safety camera **73**

audiobook **43**

    bookmark **44**

    loading **43**

    playing **44**

automatic volume **4**

    enabling **5**

avoiding

    public transit types **24, 28**

    roads **25**

    theft **70**

    traffic **58**

## B

battery **75**

Bluetooth technology **33–83**

    friendly name **65**

    pairing with phone **33**

    settings **65**

brightness **65**

## C

calculator **49**

calls

    answering **34**

    hanging up **35**

    home **36**

    muting **36**

caring for your device **69**

category

    searching within **8**

charging your device **1, 75**

cityXplorer maps **20, 27**

cleaning your device **69**

computer, connecting **2**

converting

    currency **49**

    units **49**

coordinates **12**

current location, directions to **32**

current location, saving **15**

customizing the device **63–70**

custom POIs **74**

## D

dashboard disk **71**

deleting

    all user data **70**

    character **7**

    files **63**

    pictures **47**

    recent finds list **14**

    saved locations **17**

    trips **46**

detailed maps **61, 64**

detours **22**

    advanced **26**

diacritical characters **7**

display settings **24, 28**

display timeout **65**

driving directions **30**

## E

ecoRoute 39–42

calibrate fuel economy 40

ecoChallenge score 40

fuel economy information 41

mileage report 41

vehicle profile 39

editing

change categories 16

change map symbol 16

destinations 46

home location 14

saved locations 16

saved trip 46

extras 74

## F

feedback on POI's 10

files

deleting 63

supported types 61

finding locations

by address 11

by coordinates 12

recent selections 14

saved locations 15

fuel prices 11

fuel stations 11

fuse, changing 71

## G

Garmin Live Services 38

subscribing 39

geocaching 12

go home 14

GPS

settings 64

simulator 15

## H

Help 36

home

phone number 36

setting a location 14

## I

intersection, finding 12

## J

JPEG image files 61

junction view 31

## K

keyboard 7

language mode 7, 67

## L

latitude and longitude 12

locations 8, 10

report a closed location 10

report a missing location 10

## M

maps

adding 73

data layout 29

detail level 63

errors 10

purchasing 72

theme 63

view 29

MapSource 73

- mass storage mode **61**
- measurements, converting **49**
- memory card **61**
- mileage report **41**
- mounting the device
  - on dashboard **71**
  - on windshield **75**
  - removing from mount **72**
- multi-touch controls **22**
- mute
  - phone call **36**
- myDashboard **2**
- myGarmin messages **42**

## N

- navigation **21**
  - off road **26**
  - pedestrian **27**
- nearby services **32**
- next turn **30**
- nüMaps Lifetime **72**

## O

- offers **50**

- disabling **50**
  - viewing **50**
- off-road navigation **26, 65**
- on-screen buttons **6**

## P

- pairing a mobile phone **33**
- parking **15**
  - last spot **49**
  - prices and availability **48**
  - saving **49**
- pedestrian mode
  - settings **24, 28**
- picture viewer **47**
- PIN
  - Bluetooth **34**
- points of interest
  - finding **8**
  - POI loader **61**
- predictive routing **23**
- protecting your device
  - 69**
- public transit
  - avoidances **24, 28**

- city maps **27**

## R

- recalculating routes **22**
- recently found locations **14**
- registering the device **2**
- removing the mount **72**
- renaming trips **46**
- resetting
  - home location **14**
  - the max speed **32**
  - trip data **32**
- routes
  - off road **26, 65**
  - stopping **23**

## S

- safe mode **64**
- satellite signals **5**
- Saved Locations **15–16**
- saving
  - your current location **15**
- school zone database **74**
- screen

- brightness 65
- screenshots 65
- search bar 9
- sending a location 37
- settings 63–83
- shortcuts
  - adding 7
  - removing 7
- Smartphone Link 36
  - connecting 37
  - downloading 37
- software
  - version 68
- speech recognition 17
- speed limit
  - icon 23
- storing the device 69
- system settings 64

## T

- text language 67
- time settings 67
- tools 36–41
- Tracker 52

- following others 52
- hiding your location 54
- ID 52
- inviting followers 53
- nickname 52
- sending location message 54
- sharing your location 55
- viewing followers 53

## Track Up 29

- traffic 56–83
  - activating a subscription 60, 66
  - adding traffic subscriptions 66
  - icons 56
  - incidents 57
  - receiver 57
  - trafficTrends 66

- traffic alerts 31
- traffic cameras 59
- transportation mode 6
- trip computer 31
  - resetting information 23
- trip log 28, 68
- trip planner 45

- troubleshooting 75
- turn-by-turn directions 30
- turn list 30

## U

- unit converter 49
- unit ID 68
- updating
  - maps 3
  - software 3
- USB 75
- user data, deleting 70

## V

- voice command
  - activating 18
  - icons and tones 18
  - navigating with 19
  - tips for using 18
  - wakeup phrase 18
- voice language 67
- voice mail 35
- volume
  - adjusting 4

audio mixer **4**  
automatic **4**

## **W**

weather  
    radar **43**  
weather forecast **42**  
Where Am I? **32**  
Where I've Been  
    enabling **68**  
Where To?  
    customization **7**  
where to menu **7**  
    customization  
        shortcut icon, adding **7**  
        shortcut icon, removing **7**  
world clock **48**



# www.garmin.com/support



913-397-8200  
1-800-800-1020



00 32 2 672 52 54



0180 5 / 42 76 46 - 880



00800 4412 454  
+44 2380 662 915



0808 2380000  
+44 (0) 870.8501241



00 45 4810 5050



00 39 02 3669 9699



00 35 1214 447 460



1-866-429-9296



00 358 9 6937 9758



0800-0233937



00 34 902 007 097



43 (0) 3133 3181 0



00 331 55 69 33 99



815 69 555



00 46 7744 52020

## Garmin International, Inc.

1200 East 151st Street,  
Olathe, Kansas 66062, USA

## Garmin (Europe) Ltd.

Liberty House, Hounslow Business Park  
Southampton, Hampshire, SO40 9LR UK

## Garmin Corporation

No. 68, Zhangshu 2nd Road, Xizhi Dist.  
New Taipei City, 221, Taiwan (R.O.C.)

Garmin®, the Garmin logo, nüvi®, and MapSource® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. BaseCamp™, HomePort™, cityXplorer™, ecoRoute™, nüMaps Guarantee™, nüMaps Lifetime™, myGarmin™, and trafficTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Windows® is a registered trademark of Microsoft Corporation in the United States and/or other countries. Mac® is a trademark of Apple Computer, Inc. microSD™ is a trademark of SD-3C, LLC. Audible.com® and AudibleReady® are registered trademarks of Audible, Inc. © 1997–2005 Audible. HD Radio™ is a proprietary trademark of iBiquity Digital Corporation. Android is a trademark of Google Inc."

