




Printing a Mounting Template

NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.

1 Select **File > Print**.

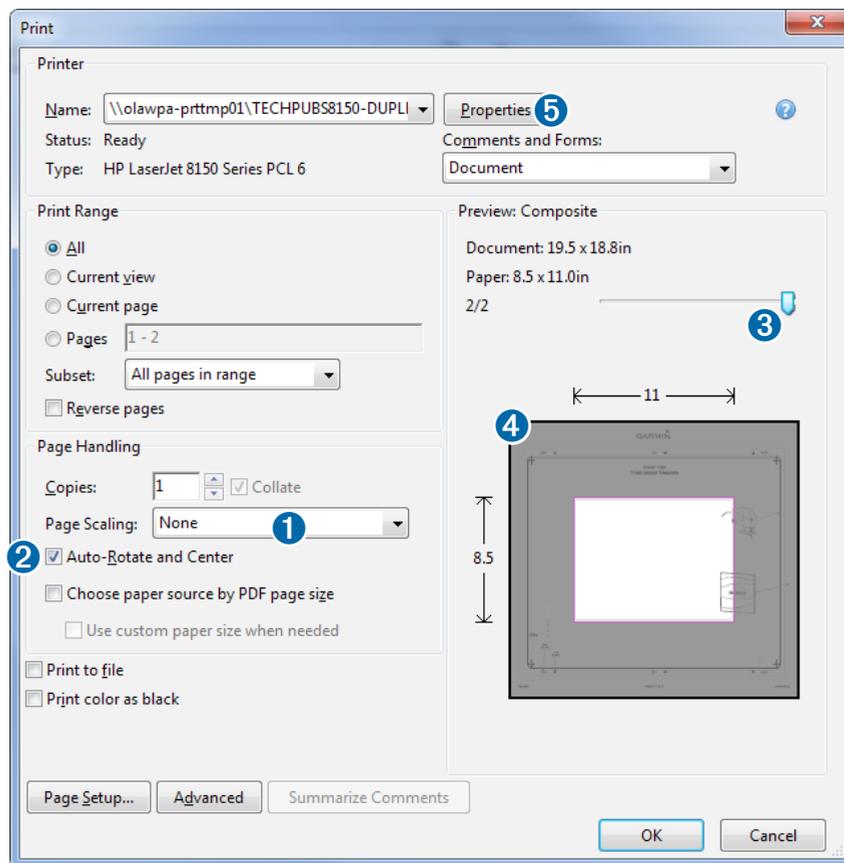

2 Select **None** for **Page Scaling** ①.

3 Ensure the check mark is next to **Auto-Rotate and Center** ②.

4 Drag the arrow ③ to the right, to view page 2 in the window below.

4 Verify that the paper size is larger than the template ④.

In this example, the paper is not larger than the template.


5 If the paper size is not large enough, select **Properties** ⑤ and select a **Page Size** that is larger than the template.

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.



GMR® Fantom 4/6 Mounting Template

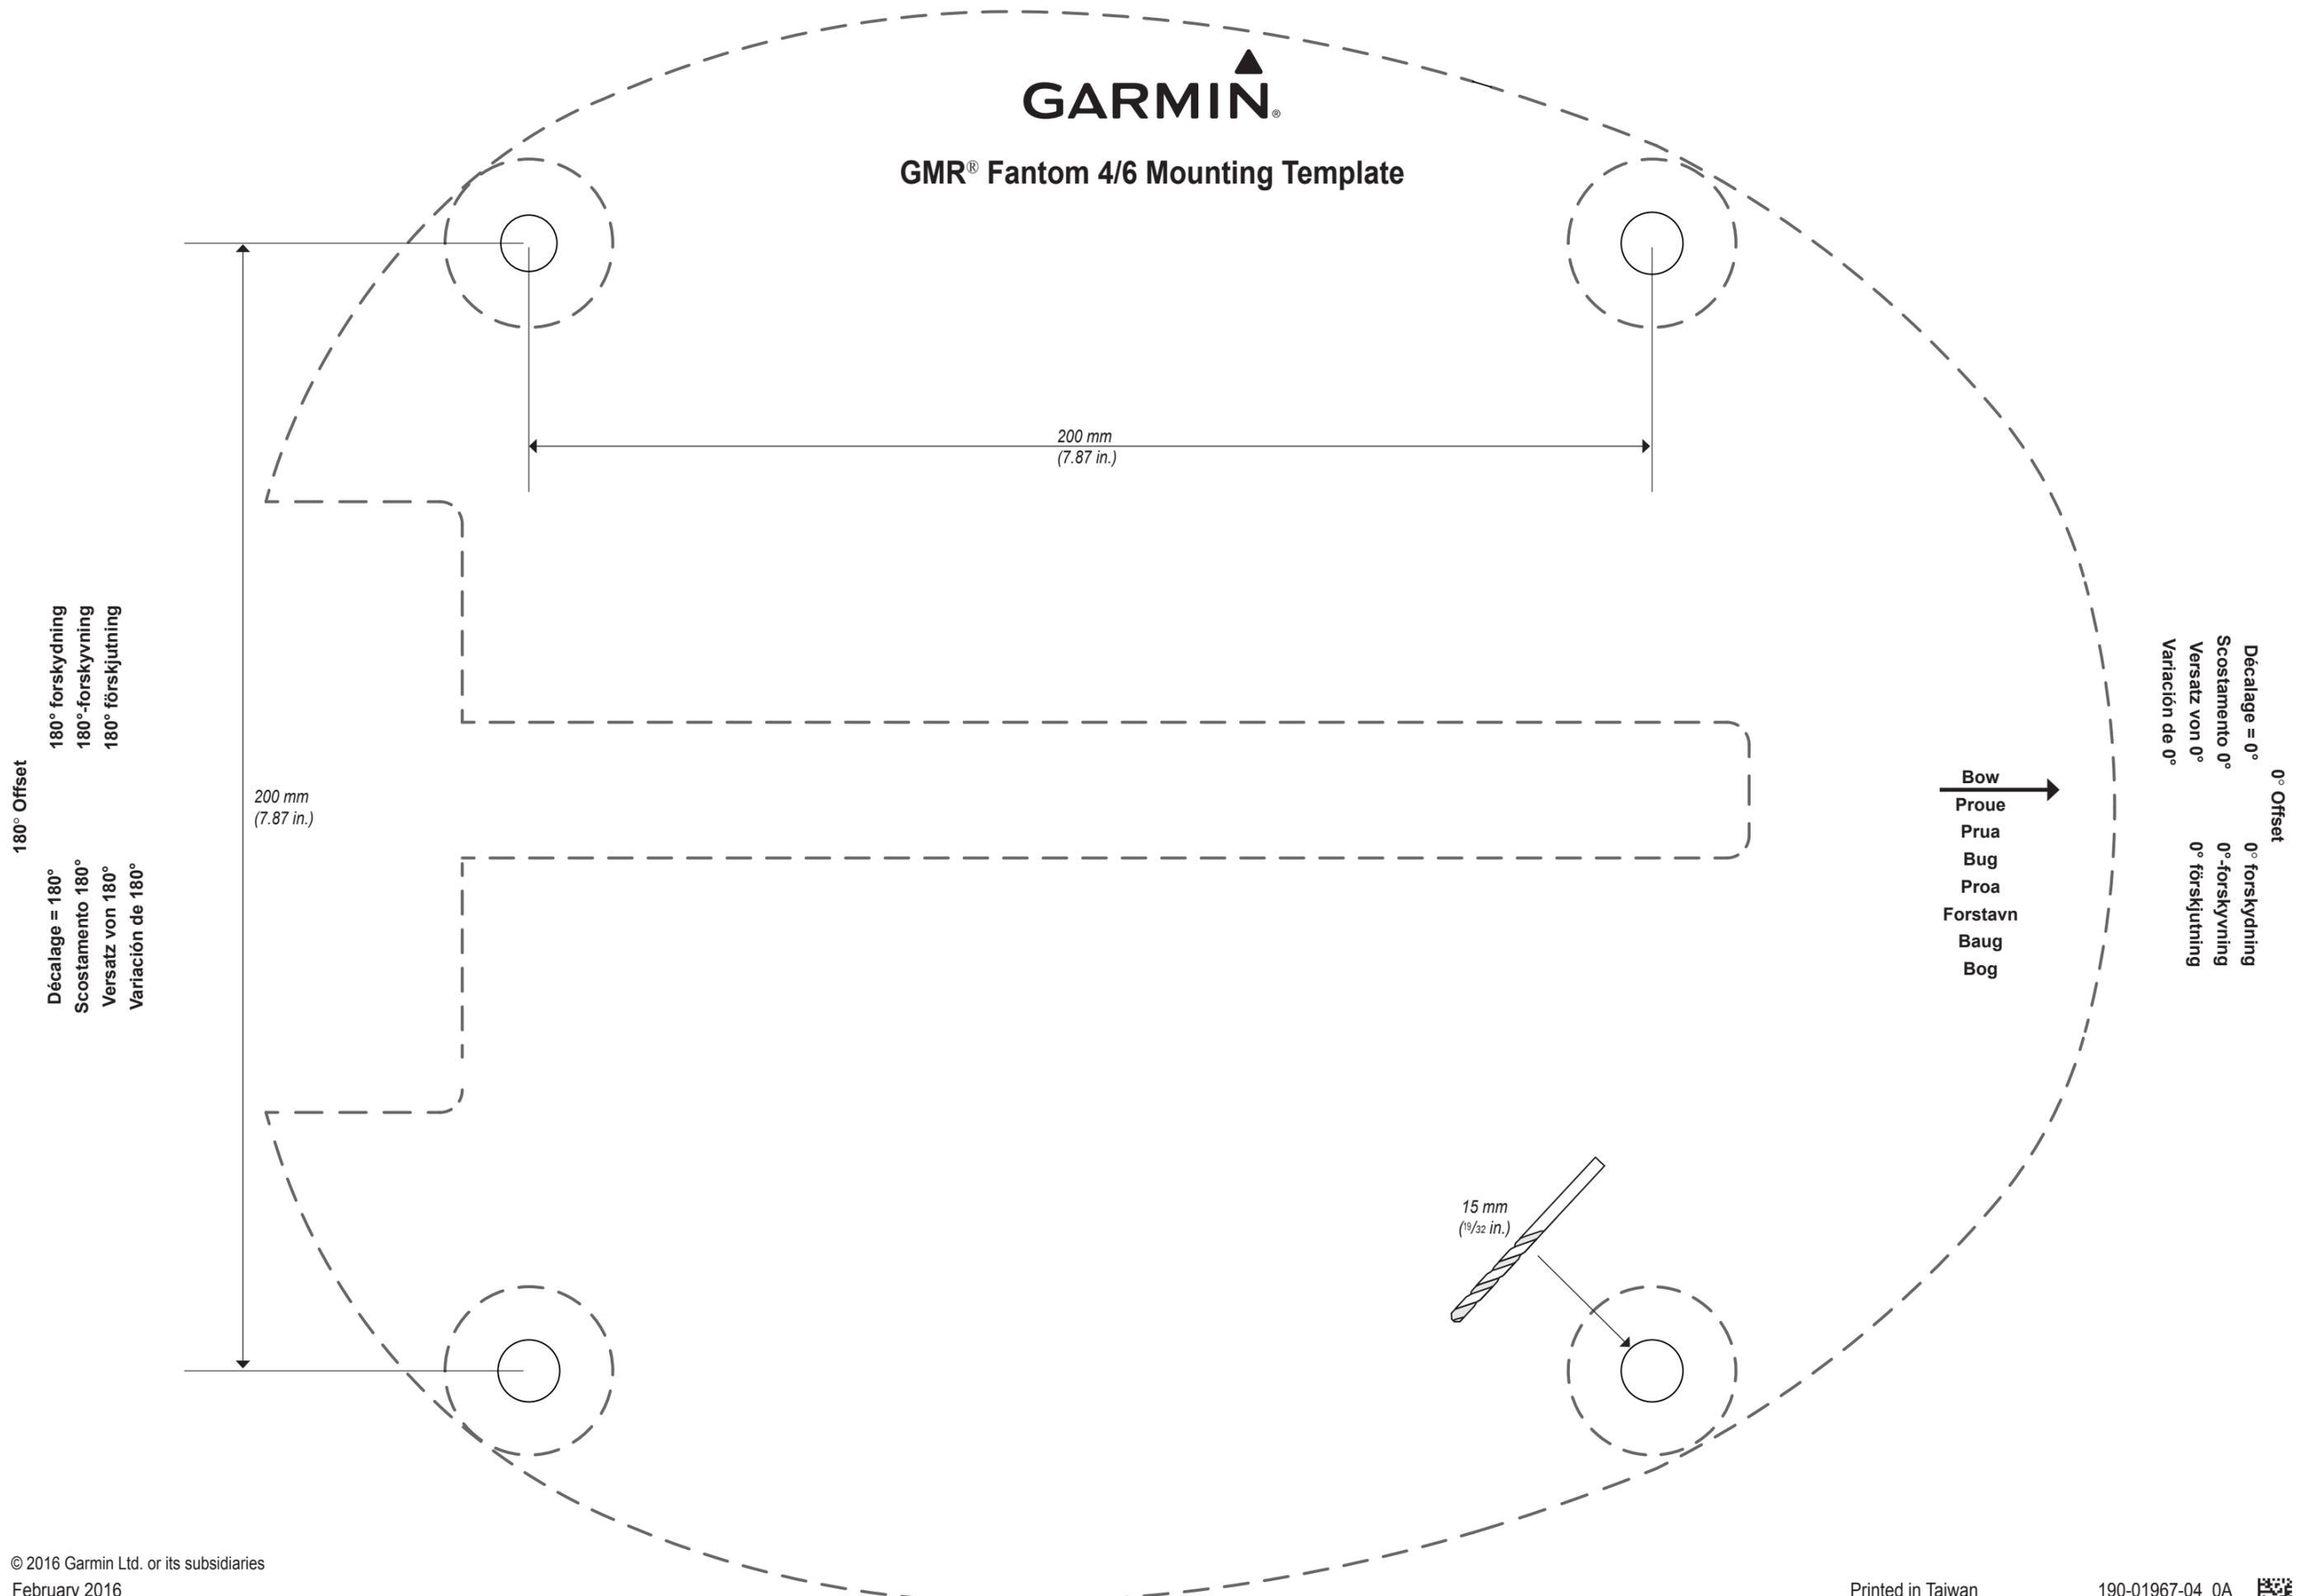

180° Offset

180° forskydning
180°-forskyvning
180° förskjutning

Décalage = 180°
Scostamento 180°
Versatz von 180°
Variación de 180°

0° Offset

0° forskydning
0°-forskyvning
0° förskjutning

Décalage = 0°
Scostamento 0°
Versatz von 0°
Variación de 0°

Bow
Proue
Prua
Bug
Proa
Forstavn
Baug
Bog

