



iQue[®] 3000

integrated handheld

quick reference guide



Table of Contents

Get Started	1	Save a Route	18
Open the GPS Antenna	1	Open a Saved Route.....	19
Acquire Satellite Signals.....	1	Edit a Saved Route	20
Buttons and Pages	2	Create and Save a New Route	21
Find a Restaurant	3	Avoids	22
Follow Your Route on the Map	4	Avoid Roads and Areas.....	22
Find	5	Avoid Areas	23
Find an Address.....	5	Avoid Roads	24
Search Near Other Places.....	6	View and Edit Avoidances	25
Find by Spelling	7	Tools and Settings	26
Save Places	8	Browse the Map	26
View Recent Finds	8	Use Tools	27
Save Places	8	Change Settings	27
My Locations and Address Book	10	Appendix	28
Assign a GPS Location	11	FCC Compliance.....	28
Route from the Address Book.....	12	Limited Warranty	29
Route from the Date Book	13	Contact Garmin.....	30
Routes	14	Index	31
Route to Home	14		
Take a Detour	15		
Add Stops to Your Route	16		

More Information

For more information about navigating with the iQue 3000, touch **Help** on the main page of the QueNav software. For information about using the Palm OS® software on your iQue 3000, refer to the *iQue 3000 Operating Instructions* on your Setup DVD-ROM.



Warning

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When installing the iQue 3000 in a vehicle, place the unit securely so that it does not interfere with vehicle operating controls or obstruct the driver's view of the road (see diagram).

Do not mount where driver's field of vision is blocked.



Do not place unsecured on the vehicle dash.

Do not mount in front of an airbag field of deployment.

Always operate the vehicle in a safe manner. Do not become distracted by the iQue 3000 while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the iQue 3000

while driving, and use voice prompts when possible. Do not enter destinations, change settings, or access any functions requiring prolonged use of the unit's controls while driving. Pull over in a safe and legal manner before attempting such operations.

When navigating, carefully compare information displayed on the iQue 3000 to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

The iQue 3000 contains a non-user-replaceable, rechargeable lithium-ion battery. The battery may present a risk of fire or chemical burn if mistreated.

- Do not remove from the unit, heat unit above 140°F (60°C), or incinerate.
- Dispose of the unit properly. Contact your local waste disposal department for information on properly disposing of lithium-ion batteries.

WARNING: This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our Web site at <http://www.garmin.com/prop65>.



Caution

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The iQue 3000 is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the iQue 3000 only as a navigational aid. Do not attempt to use the iQue 3000 for any purpose requiring precise measurement of direction, distance, location, or

topography. This product should not be used to determine ground proximity for aircraft navigation.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government's system is subject to changes which could affect the accuracy and performance of all GPS equipment, including the iQue 3000. Although the iQue 3000 is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

Map Data Information: One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some extent. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

Notice to State of California Drivers: California Vehicle Code Section 26708 (a) (1) provides that “No person shall drive any motor vehicle with any object or material placed, displayed, installed, affixed, or applied upon the windshield or side or rear windows.” Drivers in California should not use the suction mount on their windshield or side or rear windows. Garmin does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice. A disk for attaching the suction mount to your vehicle’s dashboard is enclosed.

Open the GPS Antenna

To navigate with your iQue 3000, press the **Power** button  on the top of the iQue to turn it on. Gently pull the antenna up until it is parallel to the ground.

Acquire Satellite Signals

Go outdoors where you have a clear view of the sky to acquire satellite signals. This process may take several minutes the first time you acquire signals. To view satellite signal information, touch the signal strength bars  on the main page.

For troubleshooting information, refer to the Help files on your iQue 3000. From the main page, touch **Help**.



Buttons and Pages


After you open the GPS antenna, the main page of the GPS software, QueNav, opens automatically. To return to this page at any time, press the **Que** button.



QueNav Main Page

Other Programs

To use other programs on your iQue 3000, touch the Home icon . For more information about other programs, refer to the *iQue 3000 Operating Instructions*, located on your iQue 3000 DVD-ROM.

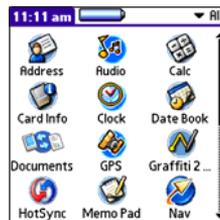

Other Programs

Find a Restaurant



Touch **Where to?**



Touch **Food, Hotels...**



Touch **Food & Drink.**



Touch **All Categories**, or select another category.



Touch the restaurant you want to go to.



Touch **Go!**

Tip: Touch the screen with your fingernail or the tip of your finger.

Follow Your Route on the Map

From the main page, touch **View Map**. Follow the purple line on the Map page to your destination.

Hear directions

To hear driving directions, touch . Or, press and hold the **Que** button.

View upcoming turns

Touch the directions bar to view the next turn. Touch **Back** to return to the map. Touch **Arrival Time** on the Map page to view all turns in the route.

View trip information

Touch **Speed** to view the Trip Computer page.

If you go off route

If you stray from the route shown on the map, the iQue 3000 recalculates and gives new route instructions.

Stop your route


To stop following your route, touch . Then touch **Stop**.




Map Page

Find an Address

From the main page, touch **Where to?** > **Addresses**.

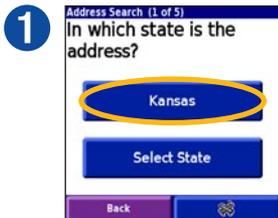

Select a state.

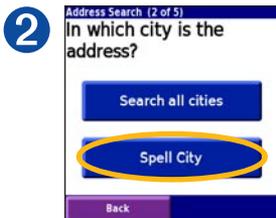

Touch **Spell City**.
Enter a city name.



Enter the number of the address.
Touch **Next**.



Enter the street name.
Touch **Done**. Select a street.




If necessary, touch the correct address.



Touch **Go!**.

Search Near Other Places

When searching for a place, you can narrow your search by touching **Near**.

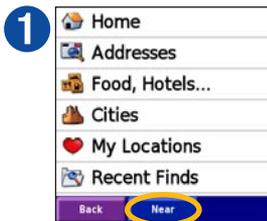

Touch **Where to?** > **Near**.



Select an option.
Then touch **Done**.

Near Current Location—your iQue 3000 automatically uses this option.

Near Current Road/Route—find places near the road or route you are currently following.

Near Route Destination—find places near the destination of the route you are currently following.

Near Other—find places that are located in a different city or a different part of the country. Touch **Near Other** > **Spell City** to search near another city. Touch **Browse Map** to search near a place you specify on the map.



Find by Spelling



Touch **Where to?** >
Food, Hotels....



Touch **Spell Name**.
Enter the name and
touch **Done**.

You can also find by spelling in any search category.



Touch **Spell**.




Enter all or part of the
name of the place and
touch **Done**.



Select the place
from the list.

View Recent Finds

Your iQue 3000 stores a list of the last 40 places you have recently searched for.

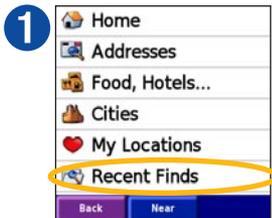

Touch **Where to?** >
Recent Finds.



Select a place.

Save Places

You can save places you find so you can easily retrieve them later. All saved places are stored in My Locations.



Search for a place as described previously. Then touch **Options**.



Touch **Save to My Locations**. Then touch **OK**.

Save Your Current Location


You can save your current location in My Locations. From the main page, touch **Tools > Where Am I?** Then touch **Save**.

Find and Route to Saved Places


To find and go to your saved places, touch **Where to? > My Locations**.

Edit Saved Places

You can change the name or symbol of a saved place. From the main page, touch **Tools > Manage My Data > My Locations**.

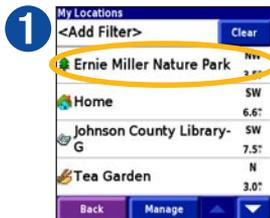

Touch the saved place you want to edit.

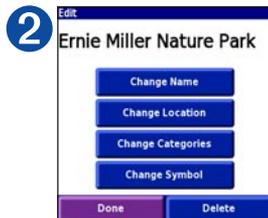

Select an option.
To delete the saved place, touch **Delete**.

My Locations and Address Book

All of the places you save in My Locations also appear as entries in the Address Book.



To open the Address Book, touch the **Home** icon .



Tap the upper-right corner and select **All**.




Touch **Address**.

You can create routes to entries in your Address Book. See pages 11-12 for more information.


For more information about using the Address Book, refer to the *iQue 3000 Operating Instructions*, located on your iQue 3000 DVD-ROM.

Assign a GPS Location


You can assign a “GPS location” to any entry in your Address Book. Then, you can create a route directly to that entry. Address Book entries that already have a GPS location assigned to them are marked with flags.

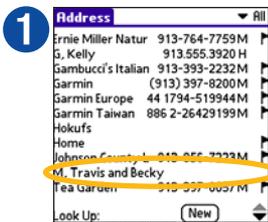


In the Address Book, tap an entry without a flag.

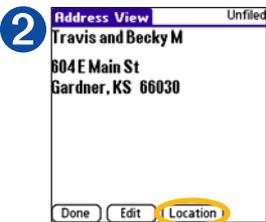

Tap **Location**.

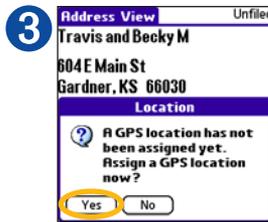

Tap **Yes**.

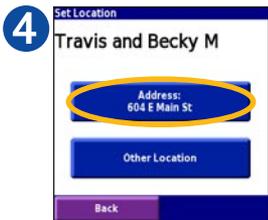

Tap the address, or select another option.



Select the correct address, if necessary.




Touch **Select**.

Note: If your Address Book entry does not already contain an address, you will see different options in step 4.

Route from the Address Book

After you assign a GPS location to an entry in the Address Book, you can easily create a route to it.

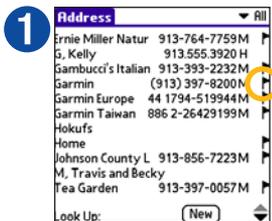

In the Address Book, tap the flag next to the entry you want to route to.




Touch **Go!**

For detailed information on assigning, changing, or removing GPS locations, refer to the Help files on your iQue 3000. From the main page, touch **Help**.

Route from the Date Book

You can assign a GPS location to an appointment in your Date Book and route to it.

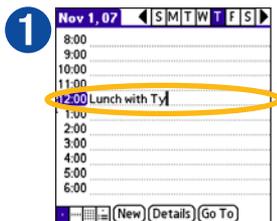

In the Date Book, tap an appointment to assign a GPS location.




Tap the **Menu** icon .




Tap the **Que** menu. Then tap **Set Location**.



Search for a location and touch **Select**.

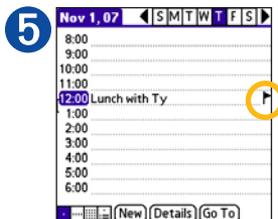


To route to the appointment, tap the **Go!**

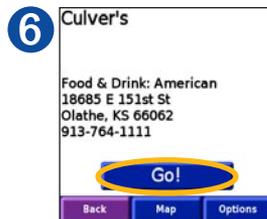


Touch **Go!**

Route to Home

You can save a special place in My Locations called Home. Then, you can easily route to Home.

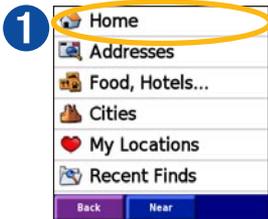

1 Touch **Where to?** >
Home.

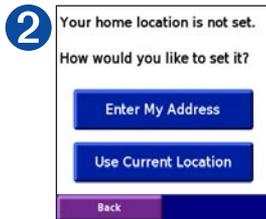

2 Select an option.

After you set your Home Location, you can route home by touching **Where to?** > **Home.**


To change your Home Location, delete Home from My Locations (see page 9). Then follow the steps to set a new Home Location.

Take a Detour

If you need to take a detour from your current route, select **Detour** from the main page. The iQue calculates a new route and provides you with new instructions. The iQue 3000 attempts to get you back on your original route as soon as possible.



Touch **Detour**.

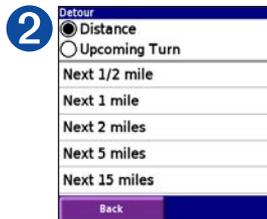

Touch **Distance** or **Upcoming Turn** and select an option.

Distance—select the portion of your current route that you want to avoid.

Upcoming Turn—select the turn you want to avoid from the list.

On some routes, the route you are currently taking might be the only reasonable option. In this case, you cannot take a detour.

Add Stops to Your Route

You can add extra stops, called via points, to your route. Enter the places you want to go, and the iQue 3000 can determine the most logical order for your stops. You must have an active route to add a via point. You can add up to 48 via points to a route.




Touch **Arrival Time**.



Touch **Edit**.



Touch **(Tap to add new via)**.

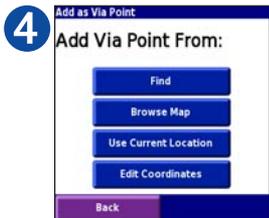

Select an option.
Search for a place to add to your route.




Touch **Select**.



Repeat these steps to add more stops.
Then touch **Done**.

Rearrange Stops

After you add stops to your route, you can arrange the order of the stops. From the main menu, touch **Tools** > **Route Details**. Then touch **Edit**.

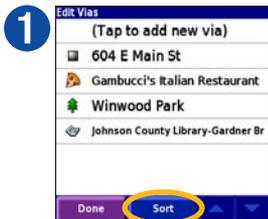


Touch **Sort** to arrange the points automatically.



Touch **Yes**.



To reorder points manually, touch a via point in the list to move it.

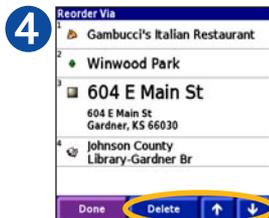

Touch the arrows to move the point up or down. To delete it, touch **Delete**.

Save a Route

You can save the route you are currently navigating and use it again later.



Touch **Tools > Manage My Data > Routes**.



Touch **Save Active Route**.



Touch **OK**.

Open a Saved Route



Touch **Tools** >
Manage My Data
 > **Routes**.



Touch **View Routes**.



Touch the route
 you want to use.



Touch **Go!**

Edit a Saved Route



Touch **Tools** >
Manage My Data >
Routes.



Touch **View**
Routes.



Touch the route
 you want to edit.



Touch **Edit**.



Touch an option and
 make changes.

Create and Save a New Route

You can create and automatically save a complex route. Touch **Tools** > **Manage My Data** > **Routes**.



Touch **Create New Saved Route**.




Select an option. Then select your starting point.



Select an option. Then select your ending point.



Select intermediate (via) points as necessary.

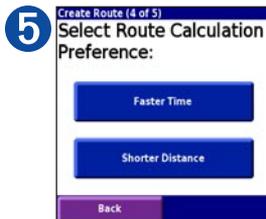

Select your preference.



Touch **Go!** or **Save**.

Avoid Roads and Areas


You can exclude specific road types, roads, or areas from all of your routes.



Touch **Settings**.



Touch **Routing**.

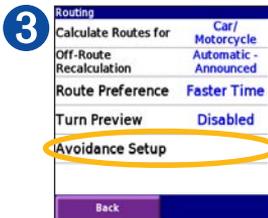

Touch **Avoidance Setup**.



To avoid specific roads and areas, touch **Custom**.


Refer to the following pages for instructions on avoiding roads and areas.

Avoid Areas

You can draw a box on the map to select an area you want to avoid.



Touch **Settings** >
Routing > **Avoidance Setup**.

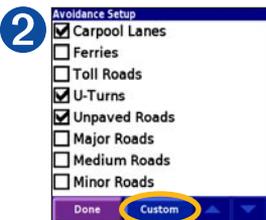

Touch **Custom**.



Touch **Add New Area**.



Touch a corner of
the area you want
to avoid, then touch
Next.




Touch the opposite corner
of the area you want
to avoid. Touch **Next**.



Touch **OK**.

Avoid Roads

You can select a section of one or more roads to avoid.

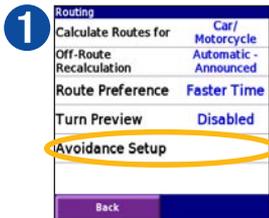

Touch **Settings** >
Routing > **Avoidance Setup**.



Touch **Custom**.



Touch **Add New Road**.



Touch the starting point of the road you want to avoid, then touch **Next**.




Touch the ending point of the road you want to avoid, then touch **Next**.



Touch **OK**.

View and Edit Avoidances

You can view, rename, or delete your avoidances.

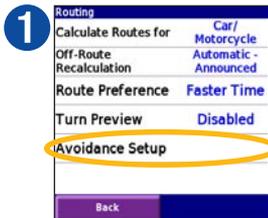


Touch **Settings** > **Routing** > **Avoidance Setup**.




Touch **Custom**.



Touch **View List**.

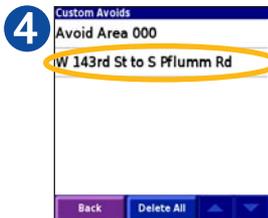

Touch the avoidance you want to edit.

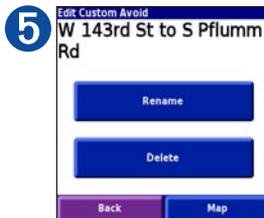

Select an option.

To deactivate an avoidance, touch **Settings** > **Routing** > **Avoidance Setup**, then uncheck the avoidance.

Browse the Map

To view other parts of the map beyond your current location, touch **Tools > Browse Map**. Touch the map anywhere to place an arrow on the map. Touch and drag the map to view other areas.



Touch to center the map on your location.



Touch to zoom in.



Touch to zoom out.




Touch and drag to zoom in on an area.



Touch to measure distance. Touch the first point on the map. Then touch the pin . Touch the place you want to measure to. View the distance in the bar at the bottom of the page.



Touch anywhere on the map. An arrow appears. Touch  to view information about that point.

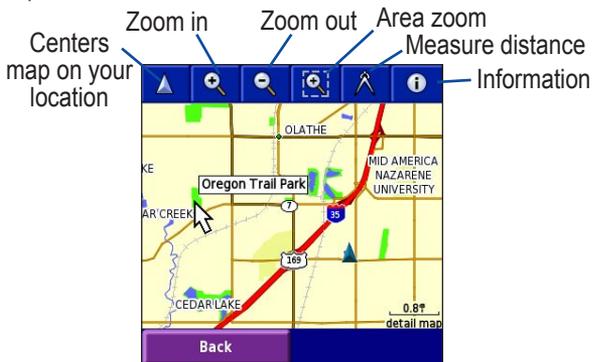

Use Tools

Route Details

To view Route Details, touch **Arrival Time** on the Map page. You can also touch **Tools > Route Details**. From this page, touch any turn to view details about that turn. If you do not have an active route, Route Details are unavailable.

Trip Computer

To view the Trip Computer page, touch **Speed** on the map. You can also touch **Tools > Trip Computer**.

Where Am I?

To view the Where Am I? page, touch **Tools > Where Am I?** From this page, you can save your current location as a favorite. See page 9 for information.

Change Settings

From the main page, touch **Settings**.

Settings > Map

Change map orientation and other map settings.

Settings > System

Turn on WAAS/EGNOS and change units of measure, location format, and grid.

Settings > Routing

Change vehicle type and change how routes are calculated.

Settings > Display

Adjust backlight and change text language and color mode.

Settings > Audio

Adjust volume and change voice language.

Settings > About

View unit ID, software version, and base map version.

FCC Compliance

The unit complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE.

These limits are designed to provide more reasonable protection against harmful interference in a residential installation and are more stringent than “outdoor” requirements.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The unit does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment and void your warranty and your authority to operate this device under Part 15 regulations.



Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will at its sole option repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS,

WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. The unit should be securely packed with the tracking

number clearly written on the outside of the package. The unit should then be sent, freight charges prepaid, to any Garmin warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs. Garmin International, Inc. Tel. 913/397.8200. Garmin (Europe) Ltd. Tel. 44/0870.8501241

Online Auction Purchases: Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

International Purchases: A separate warranty is provided by international distributors for units purchased outside the United States. This warranty is provided by the local in-country distributor, and this distributor provides

local service for your unit. Distributor warranties are only valid in the area of intended distribution. Units purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

Contact Garmin

If you encounter any difficulty while using your iQue 3000, or if you have any questions, in the U.S.A. contact Garmin Product Support at 913/397.8200 or 800/800.1020, Monday–Friday, 8 AM–5 PM Central Time; or visit us online at <http://www.garmin.com/contactUs>. In Europe, contact Garmin (Europe) Ltd. at 44/0870.8501241.

- A**
 - Address, finding 5
 - Address Book
 - and GPS locations 11
 - and My Locations 10
 - opening/viewing 10
 - routing to entries in 12
 - Avoiding roads and areas 22–25
- B**
 - Browse the map 26
 - Buttons 2
- C**
 - Contact Garmin 30
 - Current location, saving 9
- D**
 - Date Book 13
 - Detour 15
- F**
 - FCC Compliance 28
 - Finding
 - by spelling 7
 - My Locations 9
 - near other places 6
 - recent finds 8
 - saved places 9
- G**
 - GPS location 11, 13
- H**
 - Home 14
- M**
 - Map
 - browsing 26
 - changing settings 27
 - Measuring distance 26
 - My Locations
 - and Address Book 10
 - deleting 9
 - editing 9
 - saving 8
- N**
 - Near, finding 6
- R**
 - Recent Finds 8
 - Routes
 - adding stops to 16
 - creating 21
 - editing 20
 - saving 18
 - viewing saved 19
 - Route Details 27
 - Routing to Home 14
- S**
 - Saving places 8
 - Settings, changing 27
 - Spelling 7
- T**
 - Trip Computer 27
- V**
 - Via points 16
 - Volume, changing 27
- W**
 - WAAS/EGNOS 27
 - Warranty, Limited 29
 - Where am I? 27
- Z**
 - Zooming 4, 26

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.



© Copyright 2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K.

Garmin Corporation
No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

Part Number 190-00537-02 Rev. A