


Printing a Mounting Template

NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your hoat

1 Select File > Print.

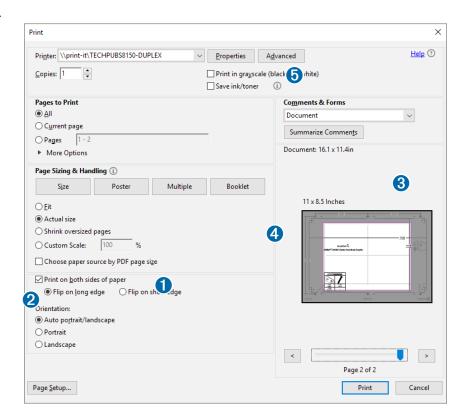

- 2 Select None for Page Scaling 1.
- 3 Ensure the check mark is next to Auto-Rotate and Center 2.
- 4 Drag the arrow 3 to the right, to view page 2 in the window below.
- 4 Verify that the paper size is larger than the template 4.
 In this example, the paper is not larger than the template.
- 5 If the paper size is not large enough, select **Properties 6** and select a **Page Size** that is larger than the template.

NOTICE

Fusion is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

FUS GN®

Signature Series 10" Subwoofer

Ø 223 mm (8.75 in.)

© 2020 Garmin Ltd. or its subsidiaries