

Printing a Mounting Template

NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.


If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.

- 1 Select File > Print.
- 2 Select Actual Size 1 for Page Sizing & Handling.
- 3 Drag the arrow 2 to the right, to view page 2 in the window below.
- 4 Verify that the paper size is larger than the template ³.In this example, the paper is not larger than the template.
- 5 If the paper size is not large enough, select Properties 4 and select a Paper Size that is larger than the template.

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

Print	×
Printer: \\print-it\TECHPUBS8150-DUPLEX V Properties Ag	ivanced Help ⑦
Save ink/toner	
Pages to Print	Co <u>m</u> ments & Forms
● <u>A</u> II	Document ~
O C <u>u</u> rrent page	Summarize Commen <u>t</u> s
○ Pages 1 - 2	Document: 16.1 x 11.4in
 More Options 	bocument, for the first
Page Sizing & Handling 🕕	
Size Poster Multiple Booklet	
O <u>Fit</u>	11 x 8.5 Inches
Shrink oversized pages	
Custom Scale: 100 %	0.40% A
Choose paper source by PDF page size	and the set of the set
✓ Print on <u>b</u> oth sides of paper	
Flip on long edge	
Orientation:	
Auto portrait/landscape	
○ Portrait	
○ Landscape	
	Page 2 of 2
Page <u>S</u> etup	Print Cancel

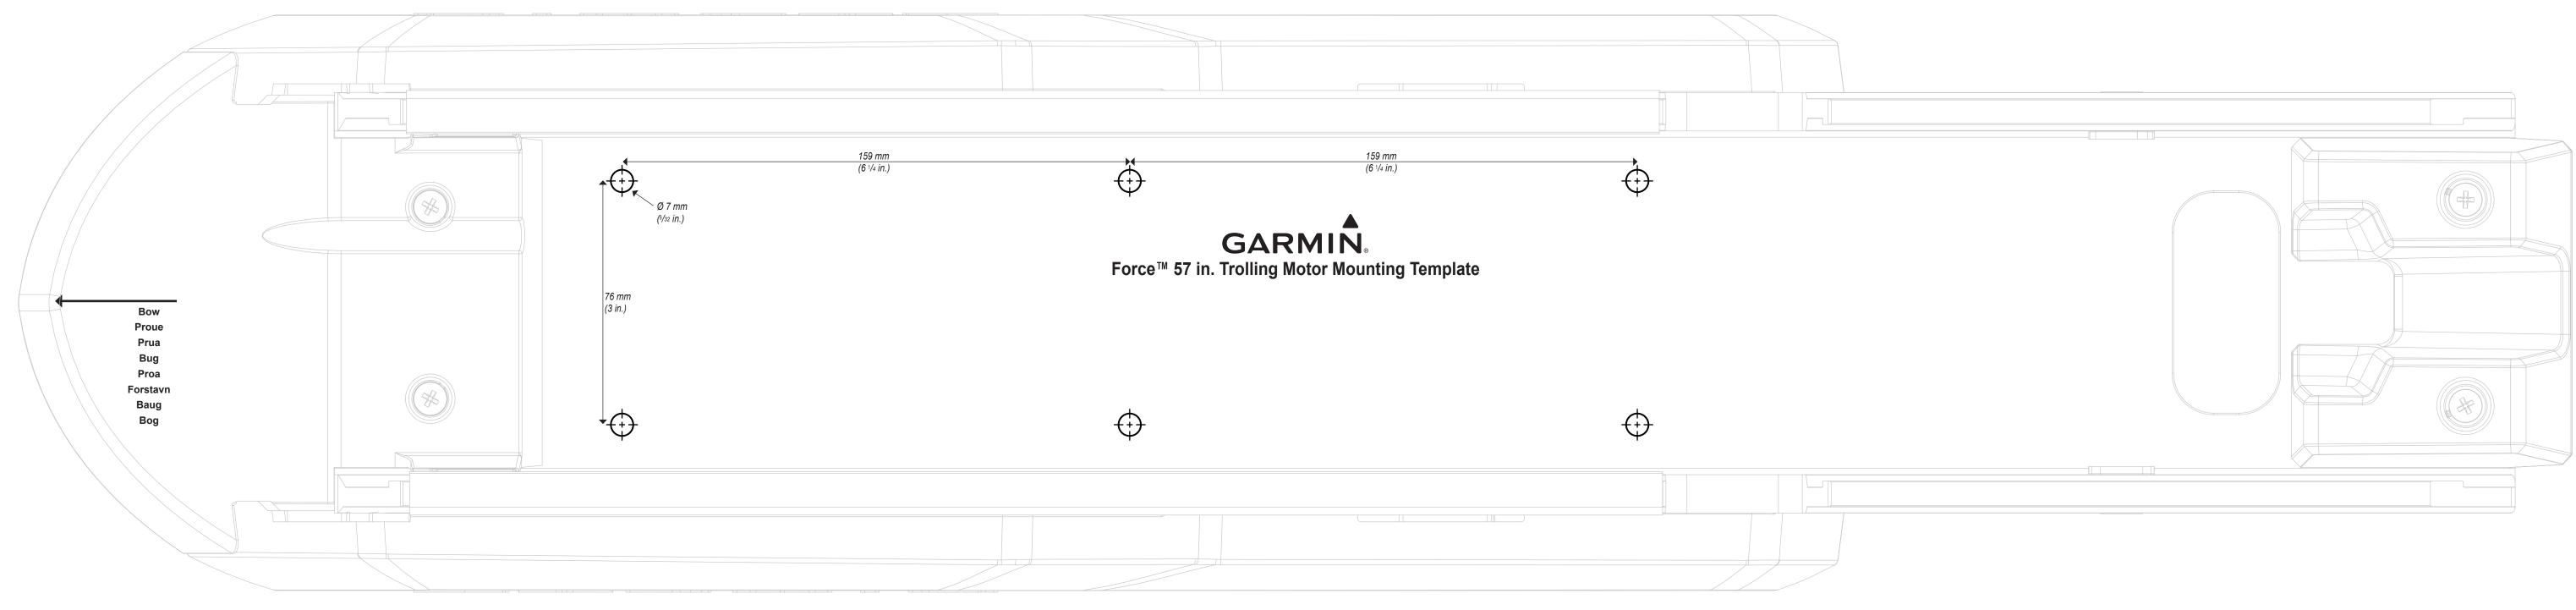

© 2020 Garmin Ltd. or its subsidiaries January 2020

Printed in Taiwan