

GARMIN[▲]

Garmin Pilot for Android™



Copyright © 2012-2023 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of Software version 8.3.11 or later. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions. Some differences may also be observed when comparing the information in this manual to your device.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Contact Garmin Product Support at fly.garmin.com

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Contact Garmin Product Support at fly.garmin.com

Garmin (Europe) Ltd., Liberty House, Hounslow Business Park
Southampton, Hampshire SO40 9LR U.K.
Contact Garmin Product Support at fly.garmin.com

Garmin Corporation, No. 68, Zhangshu 2nd Road, Xizhi District, New Taipei City, Taiwan
Contact Garmin Product Support at fly.garmin.com

Web Site Address: flygarmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin®, SafeTaxi®, FliteCharts®, and VIRB® are registered trademarks of Garmin Ltd. or its subsidiaries. Garmin Pilot™, D2™, D2 Air™, Marq™, & PlaneSync™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google, Inc.

Canadian Radar is provided by Environment Canada.

©2023 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Other trademarks and trade names are those of their respective owners.



WARNING: Do not rely solely upon the indicators shown on the Panel Display Pane to maneuver the aircraft.



WARNING: The altitude displayed by Garmin Pilot™ on the Panel Page is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters. Always use pressure altitude displayed by the aircraft altimeter when determining or selecting aircraft altitude.



WARNING: Do not use outdated database information. Databases used in the Garmin Pilot™ must be updated regularly in order to ensure the information remains current. Pilots using any outdated database do so entirely at their own risk.



WARNING: To aid in device security, use a properly supported device that is dedicated to the aircraft and not shared with personal use.



WARNING: To reduce the risk of unsafe operation, carefully review and understand all aspects of Garmin Pilot™ User documentation and the Pilot's Operating Handbook of the aircraft. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from Garmin Pilot™ to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



WARNING: Garmin Pilot™ has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by Garmin Pilot™. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



WARNING: For safety reasons, Garmin Pilot™ operational procedures must be learned on the ground.



WARNING: The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of Garmin Pilot™ utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by Garmin Pilot™ can be misused or misinterpreted and, therefore, can become unsafe.



WARNING: Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.



WARNING: Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.



WARNING: Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.



WARNING: Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft



WARNING: Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.



WARNING: Use of an unapproved wireless device inserted into the SD card slot of your Garmin navigator may induce a malfunction, may cause damage to the unit, will void the Garmin warranty, and may nullify the airworthiness approval of the installation. The only wireless device currently certified for use in a compatible Garmin avionics system SD card slot is the Garmin Flight Stream 510. Do not insert an unapproved wireless device into the SD card slot of your Garmin avionics system.



NOTE: All visual depictions contained within this document, including screen images of Garmin Pilot™ panel and displays, are subject to change and may not reflect the most current Garmin Pilot™ software and aviation databases.



NOTE: Temporary Flight Restriction (TFR) data is provided by the FAA and may not be updated outside of normal business hours. Confirm data currency through alternate sources and contact your local FSS for interpretation of TFR data.



NOTE: The navigation databases used in Garmin navigation systems contain Special Procedures. Prior to flying these procedures, pilots must have specific FAA authorization, training, and possession of the corresponding current, and legitimately-sourced chart (approach plate, etc.). Inclusion of the Special Procedure in the navigation database DOES NOT imply specific FAA authorization to fly the procedure.

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, COMPONENT OR SYSTEM MANUFACTURED OR SOLD BY GARMIN ("THE GARMIN PRODUCT"), YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Garmin Ltd. and its subsidiaries ("Garmin") grants you a limited license to use the software embedded in the Garmin Product (the "Software") in binary executable form in the normal operation of the Garmin Product. Title, ownership rights, and intellectual property rights in and to the Software remain with Garmin and/or its third-party providers. You acknowledge the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge the structure, organization, and code of the Software are valuable trade secrets of Garmin and/or its third-party providers and the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to reproduce, decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

Rev	Date	Change Summary
Z	August, 2023	<ul style="list-style-type: none"> Updated for Application version 8.3.11 Enhanced Field Condition (FICON) NOTAMs MARQ Aviator Gen2 Support Enhanced Flight Data Log Visualization Enhanced Downloads Interface Enhanced Database Concierge GDL 60 Support PlaneSync™ Capability
Y	July, 2022	<ul style="list-style-type: none"> Updated for Application version 8.2.1 Enhanced Terminal NOTAMs Enhanced Airport Information Page Enhanced Database Concierge for Flight Stream 510
W	November, 2021	<ul style="list-style-type: none"> Updated for Application version 8.1 D2 Air X10 Support Graphical NOTAMs for NAVAIDs Enhanced Trip Planning Enhanced Dialogue(s) Google In-App Purchases
V	September, 2021	<ul style="list-style-type: none"> Updated for Application version 8.0 Graphical NOTAMs for Obstacles & Airspace New User Set-up Guide Enhanced Route Data & Chart Downloads for Active Flight Plan
U	February, 2021	<ul style="list-style-type: none"> Updated for Application version 7.7 Enhanced Start-up Experience Enhanced Aviation Database via ADB2 Integration Microsoft Flight Sim 2020 Integration Enhanced Data Sync Settings Procedure Selector (SID's & STAR's) Enhanced NOTAM Widget
T	October, 2020	<ul style="list-style-type: none"> Updated for Application version 7.6.1 Visited Airports Aerial Airport View via Google Maps

S	October, 2020	Updated for Application version 7.6 D2 Air Support Aera 760 Support Tab Bar Enhanced Demo Mode
R	July, 2020	Updated for Application version 7.5 European Autorouting
Q	February, 2020	Updated for Application version 7.4 Enhanced Air Data & Analytics Emergency Button Chart Annotations GI 275 Support Enhanced Flight Profile View
P	November, 2019	Updated for Application version 7.3 Images Refreshed Throughout Bug Fixes Throughout GNC 355 Support Clearance Delivery Phone Numbers Removal of FAA Domestic Filing Form Type to Support The ICAO Filing Mandate. Flight Profile View Enhanced Air Data & Analytics Enhanced Connex Screen
N	July, 2019	Updated for Application version 7.2 Advanced Aircraft Performance Weight & Balance Storm Cell Movement Area Forecast Discussion D2 Delta PX Support MARQ Aviator Watch Support Weather Imagery Quick Fuel Set Added SiriusXM Lightning, TFRs, Echo Tops, Winds Aloft, & Icing GPS175/GNX375 Support Model Output Statistics (MOS) Base Reflectivity Radar FBO Fees

M	March, 2018	<p>Updated for Application version 6.3</p> <ul style="list-style-type: none"> Worldwide Winds Aloft Coverage Icing Forecast Radar & Infrared Satellite Color Palettes Chart Overlays Enhanced Stadium TFRs Glide Range Ring Logbook Tracks Auto-Download Pilot Updates D2® Charlie Series Watch Support Split-Screen Synthetic Vision Checklists GDL 51/51R Support GDL 52/52R Support Virb 360 Camera Support Logbook Photos Logbook Auto-Logging FastFind Predictive Waypoint Entry Helicopter Charts Units Preferences Nearest (NRST) Navigation Functionality Airspace Altitude Labels Highest Point Along Route Synthetic Vision
L	November, 2016	<p>Updated for Application version 5.4.4</p> <ul style="list-style-type: none"> Flight Stream 510 Integration Logbook Features D2® Bravo & Bravo Titanium Pilot Watches Support Enhanced Map PIREP Overlay Sequential Chart Navigation & Chart Printing Features Best Runway Recommendations Added to Airport Information & Airports Widget
K	April, 2016	<p>Updated for Application version 5.2.1</p> <ul style="list-style-type: none"> Aera 660 Support. Added Altitude to PIREP Map Overlay. Personal Minimums Added to Pilot Profile. Enhanced & Synchronized Chart Functionality. Enhanced Bookmarks Functionality for Flight Plans.

J	April, 2016	<p>Updated for Application version 5.1</p> <ul style="list-style-type: none"> GTX 345 Support Enhanced Trip Planning Procedures Added Traffic Alerts Leidos Flight Service Integration Enhanced Charts Enhanced Scratch Pad Added Screen Lock Added Light & Dark Modes Added Night Mode for SafeTaxi Added VIRB Integration Added Google Maps™ Service in Airport Info Added Airport Widget to Split-screen Added Demo Mode Added Warnings for Trips with Airports Below VFR/IFR mins
H	August, 2015	<p>Updated for Application version 4.3</p> <ul style="list-style-type: none"> Enhanced GDL 39 Support Added Connex Features Added Flight Stream Support Added Alternate Colors for Flight Conditions Added Airport Facilities Directory Added Support for Alternate Storage Locations (e.g. SD cards) Added G3X Touch Support Added GLO Support Added Terrain & Obstacles Database
G	April, 2014	<p>Updated for Application version 3.0</p> <ul style="list-style-type: none"> Added Support for Offline Vector Maps Added Distance Measuring Tool Added Fuel Range Rings Added Track Vector Added Extended Runway Centerlines Added Auto-zoom Added Map Decluttering Option
F	January, 2014	<p>Updated for Application version 2.8</p> <ul style="list-style-type: none"> Added GDL 39 Support (3D) Enhanced Attitude Indicator Display in Navigation Panel Enhanced Airport Information with 'Right' Traffic Patterns

E	November, 2013	<ul style="list-style-type: none"> Updated for Application version 2.7 Added Proposed Routes Added Keep Screen On Added Decoded TAFs Added D2® Watch Support
D	July, 2013	<ul style="list-style-type: none"> Updated for Application version 2.6 Added Airspace Widget Added Combined Map Layers Changed Trip Planning to File & Brief Added Routes to File & Brief Added Display Time Format Added Tools Menu for Alerts Configuration (Time/Distance) Added Custom Ownship Icons
C	May, 2013	<ul style="list-style-type: none"> Updated for Application version 2.4 Added Scratch Pad Added Split-Screen Traffic Enhanced Trip Planning
B	January, 2013	<ul style="list-style-type: none"> Updated for Application version 2.3 Enhanced Airport Information Page Chart Next Cycle Downloads
A	December, 2012	Initial Release

- OVERVIEW** 1
 - Plan File Fly Log** 1
 - Features** 1
 - About This Handbook** 2
 - Android™ Tricks for Pilots 2
 - New User Set-Up Guide 6
 - Help File 10
 - Map Pane Controls 25
 - Map/Chart Selection and Settings 26
 - General 31
 - Pilot and Aircraft Info 42
 - User Content 46
 - Units 47
 - Data Services 48
 - GPS 50
 - Flight Simulation Integration 50
 - Downloads 52
 - Subscriptions 53
 - Sync 55
 - Synthetic Vision (Premium Subscription)** 56
 - Synthetic Vision Operation 57
 - Logbook** 62
 - Flight Log Entries 62
 - Flight Log Fields 66
 - Logbook Photos 67
 - Logbook Auto-Logging 68
 - Logbook Tracks 69
 - Endorsements 71
 - Currency 73
 - Reports 74
 - Logbook Settings 80
 - Weight and Balance** 85
 - Downloads** 88
 - Chart Updates 91
 - Checklists** 108
- PLAN** 109
 - FastFind Predictive Waypoint Entry** 109
 - Flight Plan** 110
 - Actions Menu 113
 - Advanced Aircraft Performance 133
 - Demo Mode 134
 - Airport Information 139

FILE	171
Trip Planning	171
Preparing to File.....	172
Planning a Trip.....	174
European Autorouting.....	179
Navlog.....	186
Brief.....	189
File Flight Plan.....	190
FLY	192
Map Page	192
Map Pane Controls.....	193
Map Settings.....	194
Overlays.....	202
Radar/IR Color.....	202
Opacities.....	203
Ownship/Route.....	203
Distance Measuring Tool.....	234
Split-Screen.....	235
Weather Sources.....	249
Widgets.....	251
Weather Map Overlays.....	255
Weather Product Age and Source.....	256
Weather Products.....	256
Data Link Traffic (Optional)	281
System Status.....	284
Traffic Description.....	285
Terrain	290
Terrain Information.....	291
Obstacle Information.....	294
Terrain and Obstacle Alerts (Optional).....	294
Charts	297
Scratch Pad	307
CONNEXT	309
Status	309
Situational Data Status.....	309
ADS-B Status.....	311
SiriusXM Status.....	313
Features	314
Flight Plan Transfer.....	314
SiriusXM Audio.....	317
Database Concierge.....	321

- Devices** 329
 - Pairing a Device 329
 - Troubleshooting a Device..... 329
 - Garmin Pilot Compatible Watch 329
 - Flight Stream 331
 - GDL 39 332
 - GDL 51/51R 335
 - GDL 52/52R 335
 - GDL 60 336
 - GLO 338
 - aera 660/760 338
 - G3X Touch 339
 - GTX 345/45R 341
 - GPS 175/GNC 355/GNX 375 341
 - GI 275 342
- SUBSCRIPTIONS** 346
 - Geo-Referenced FliteCharts** 346
 - SafeTaxi**..... 346
- APPENDIX A: LICENSE AGREEMENT AND WARRANTY** 348
 - Contact Garmin** 348
 - End-User License Agreement 348
 - AOPA Airport Directory Notice 351
 - SiriusXM Satellite Radio Service Agreement..... 351
 - Weather Data Warranty 352
- INDEX** Index-1
 - Index**..... Index-1

OVERVIEW

PLAN FILE FLY LOG

Garmin Pilot™ is the most comprehensive suite of tools for the Android designed specifically for general aviation and corporate pilots. Flight planning, DUAT(S) filing, charts, interactive maps, weather briefing resources, navigation capabilities, and a digital logbook; it's all included. The app's intuitive interface closely resemble those on the newest Garmin touchscreen avionics for seamless transition from preflight to in-flight. Plan, file, fly with Garmin Pilot.

FEATURES

- Charts: VFR Sectionals, TAC, low and high IFR en-route, airport diagrams and approach procedures. Automatically generated binders instantly organize charts for the current flight plan.
- Optional geo-referenced Garmin FliteCharts® and Garmin SafeTaxi® both show aircraft position on approach charts or taxiways.
- Weather Maps: Animated radar, AIRMETS, SIGMETs, Lightning, PIREPs, METARs, TAFs, Winds Aloft, TFRs, Lightning, Infrared and Visible Satellite.
- Extensive textual and graphical products: AIRMETS, SIGMETs, PIREPs, METARs, TAFs, Winds Aloft, and NOTAMs.
- Dynamic weather overlays with the current route displayed on the map
- AOPA Airport Directory and Fuel Prices
- Flight plan filing via a Filing Service Provider
- Comprehensive weather data direct from the National Weather Service and Environment Canada



NOTE: All visual depictions contained within this document, including screen images of Garmin Pilot™, are subject to change and may not reflect the most current Garmin Pilot™ software and aviation databases.

ABOUT THIS HANDBOOK

This operating handbook is designed to provide a comprehensive guide to help with understanding how to use Garmin Pilot for reviewing aviation weather, airport information, creating and filing flight plans, and for viewing charts, maps, and navigation data in-flight.

ANDROID™ TRICKS FOR PILOTS

Android tablets are offered by a variety of manufactures and features can vary widely. It is important to know the features of a tablet before using Garmin Pilot for navigation. Some tablets are offered with one or two connectivity options; Wi-Fi or Wi-Fi + Cellular. It is also important to know which connectivity option is available before using Garmin Pilot for navigation.

There are also a few things to know about a tablet's basic features and settings that will enhance the Garmin Pilot experience. Some features of this application will vary between handsets and tablets. These features are not hidden, but they may not be immediately apparent. It is recommended to get completely familiar with the tablet and its features by reading the User's Guide for the tablet and/or the User's Guide for the tablet's Android version.

GPS

Global Positioning System (GPS) receiving capability is optional on some Android tablets. Garmin Pilot can be used without GPS for flight planning, but the navigation features will be inoperative. If the tablet does not include a GPS receiver, a Garmin GLO™ portable GPS and GLONASS receiver, or a Garmin GDL 39 or GDL 39 3D portable GPS and ADS-B receiver will be required to take advantage of the navigation features of Garmin Pilot. Alternative or third-party GPS sources known to work with Garmin Pilot are: Bad Elf, Dual Electronics XGPS150 Universal Bluetooth GPS, and GNS 5870 MFI Bluetooth GPS receiver. Other portable GPS sources may also work with Garmin Pilot.

DISPLAY ORIENTATION

Many devices have a default setting that will enable the unit to automatically rotate the display to either portrait or landscape according to which edge of the unit is facing upward. This automatic setting can be quite troublesome in the cockpit as the solid-state accelerometers are very sensitive to movement and can cause the display to rotate unexpectedly.

The primary means of enabling/disabling the rotation lock is via the Settings Menu. Each device may have other options to lock the display orientation, consult the User's Guide.

Locking Display Orientation:

- 1) On the Android device, from the Home Screen, touch the top of the screen and pull down to display the **Settings Menu**.




indicates the device screen will rotate.



indicates the device screen is locked.

- 2) Touch to Toggle the device screen, as desired.

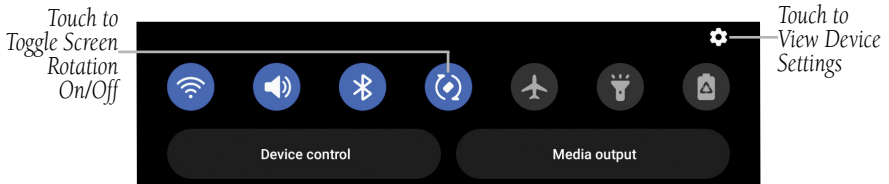

Android Device - Pull Down Settings Menu

GLARE REDUCTION

One limitation of some devices in the cockpit is glare. There are number of ways to mitigate the effects of glare using aftermarket screen protectors and similar products. However, one can do reasonably well by simply adjusting the display brightness.

Adjusting Display Brightness:

- 1) On the Android device, touch **Settings > Display > Brightness Level**.
 - 2) Use the slider control to manually adjust the display brightness.
- Or:** Within Garmin Pilot, touch **Home > Brightness** under the Tools section and use the slider control to set the desired display brightness.




NOTE: Some Android devices have an "Automatic brightness" setting. It may be necessary to turn this off to manually adjust the device's screen brightness.

GENERAL GARMIN PILOT OPERATING GUIDELINES

Garmin Pilot by default will open on the Map Page. If the application has been recently used it will resume on the most recently viewed page. From any page, it is possible to access any desired feature by touching, flicking, and/or dragging a finger on the active areas of the display that appear as buttons, slide controls, flick lists, text fields, or icons. As with most applications, text fields automatically open a QWERTY keyboard for easy text entry.

Also like other applications that use maps, panning is done by "touch-dragging" a finger across the display, and magnifying or zooming is done by double-touching the display, by pinching, or use the **+** button. Reversing the pinch gesture or touching the **-** will de-magnify or zoom out. Additionally, double-touching the screen will increase magnification in 50% intervals and center the map over the area tapped.

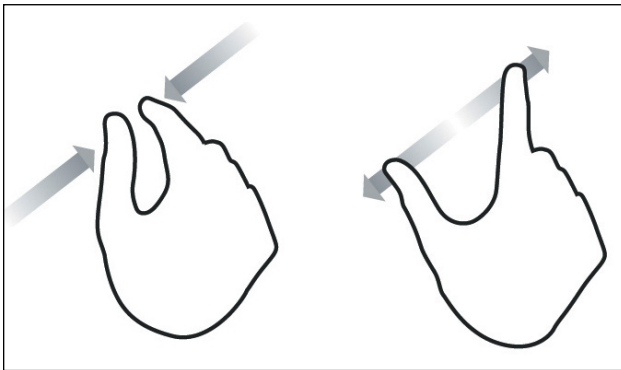

Pinch Zoom

Garmin Pilot can be used in either portrait or landscape orientation and will respond to the Android's automatic orientation feature. The map may be displayed in either full screen or Split-Screen in either orientation. The lower half of the display in portrait orientation or second (non-map) display in landscape orientation has the following functions; Widgets, Panel, Charts, SafeTaxi, Traffic, VIRB, Terrain, Checklist, or Synthetic Vision. To streamline navigation throughout the app, Garmin Pilot now offers a Tab Bar at the bottom of the screen, which may be used as an alternative to the Home Screen Main Menu.

Displaying Tab Bar:



NOTE: *Classic Garmin Pilot Home Menu will be discontinued in upcoming software updates. Users are encouraged to use the new Tab Bar navigation style going forward.*

- 1) Touch **Settings > General**.
 - 2) Touch **Tab Bar** to adjust the Interface Style. Tap **Classic** to return to the legacy Home Screen Menu interface style.
- Panel Mode is customizable and can be configured to display an instrument panel with virtual instruments to indicate GPS altitude, ground speed, vertical speed, course, and lateral deviation as well as a table with multiple configurable data fields for monitoring navigation data.
 - Widget Mode enables a series of customizable data windows called 'Widgets' to be displayed. Widgets offer quick access to a variety of aviation weather products (METARs, TAFs, Winds Aloft, NOTAMs, etc...) for nearby or selected airports.

Charts, SafeTaxi, Traffic when viewed in split-screen, have the same function, navigation, and capabilities as the full screen versions of these products, just displayed in half screen. Garmin Pilot requires a data connection for downloading maps and other data prior to departure, but once everything needed for the flight is downloaded, it is ready to navigate. The Downloads Menu in the Garmin Pilot settings options will indicate when new downloadable data products are available upon connection to the Internet.



NOTE: *With some of their newer devices, Android is moving away from buttons, both physical or virtual, and replacing their functionality with gesture-based navigation by default. Navigating within Garmin Pilot will differ accordingly throughout depending on your device settings.*

GETTING STARTED

GARMINPILOT

Garmin Pilot is fully functional immediately upon installation, but there are a few things that can be set up in order to optimize performance right away. For those using Garmin Pilot for the first time, there is a New User Set-Up Guide feature that will provide additional assistance. Simply choose 'Yes, help me get started' from the greeting page on a new installation of Garmin Pilot and answer a handful of questions in the set-up wizard to customize your Garmin Pilot experience.

NEW USER SET-UP GUIDE

INTRODUCTION

- The first page of the New User Set-Up Guide provides a link to the License Agreement, where the 'End User License Agreement' can be viewed. After viewing, touch **Agree And Continue**.
- The second page requests Location Permission, touch **Ok** to continue.
- The third page starts the Required Downloads necessary before using Garmin Pilot, touch **Start** to continue. A 'Downloading' icon should now be displayed in the top portion of the screen.
- The fourth page allows the user to continue with the New User Set-Up Guide by touching **Yes, Help Me Get Started**. If the User already has a sign-in associated with Garmin Pilot, touch **No, Take Me To Sign In** to skip the New User Set-Up Guide and enter the appropriate credentials.

CUSTOMIZATION

If the User selected **Yes, Help Me Get Started**, the New User Set-Up Guide continues with the second phase, customization. There are four main sections within the second phase: **Pilot Information**, **Add An Aircraft**, **How You Fly**, and **Where You Fly**.

Entering Pilot Information:

- 1) Complete the Name, Phone, and Address text boxes on the Contact Information page.
- 2) Touch **Personal Minimums**. The settings entered will tell Garmin Pilot when to alert the User if VFR, IFR, or Wind Limitations are exceeded for a flight plan.
- 3) Touch **VFR Minimums** and enter the desired limitations.
- 4) Touch **IFR Minimums** and enter the desired limitations.
- 5) Touch **Wind Limits** and enter the desired limitations.
- 6) Touch **OK** to save and continue. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

Entering Aircraft Information:


- 1) If able, select an aircraft from the list to load specific information necessary for accurate calculations throughout Garmin Pilot.
- 2) If the desired aircraft is not available on the list provided, touch **Aircraft Not Found?** and enter the appropriate information. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

Entering 'How You Fly' Information:

- 1) If the User will be using Garmin Pilot for Visual Flight Rules (VFR), touch **VFR**.
- 2) If the User will be using Garmin Pilot for both VFR and Instrument Flight Rules (IFR), touch **VFR / IFR**. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

Entering 'Where You Fly' Information:

- 1) Set the radius of the area most often flown by adjusting the slider.
- 2) Touch **OK** to save and continue. When the information is successfully entered and saved, a green checkmark will be displayed next to the section.

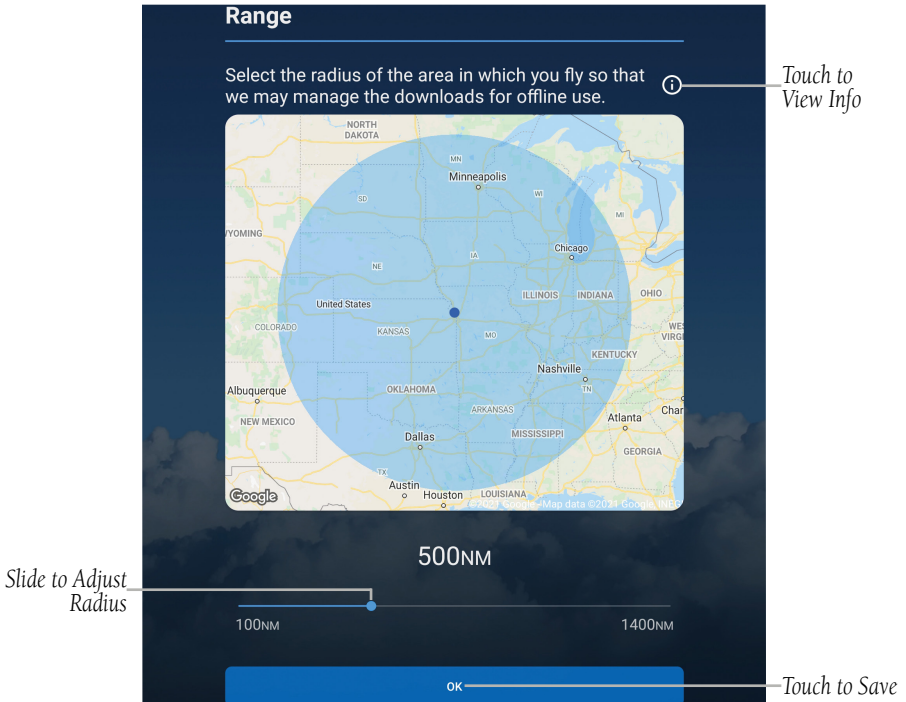

New User Set-Up Guide - 'Where You Fly' - Range

Once the four Customization sections are completed, Garmin Pilot will recommend downloads based upon the New User's information. If necessary, the User can adjust the 'Where You Fly' radius by touching **Adjust Typical Flying Radius**. To start the recommended downloads, touch the checkbox next to 'Download Additional Data (xxxMB)'.




NOTE: Downloads may also be set-up and/or adjusted at a later date by selecting 'Downloads' from the More menu.



NOTE: A Wi-Fi connection is recommended for all Downloads.

Once the User completes the New User Set-Up Guide and/or enters the necessary Sign In credentials, the best place to start is with the highly intuitive Settings Menu, which can be found by momentarily touching the Home Button and then the Settings Icon. The Settings Menu is always available from the Home Button.

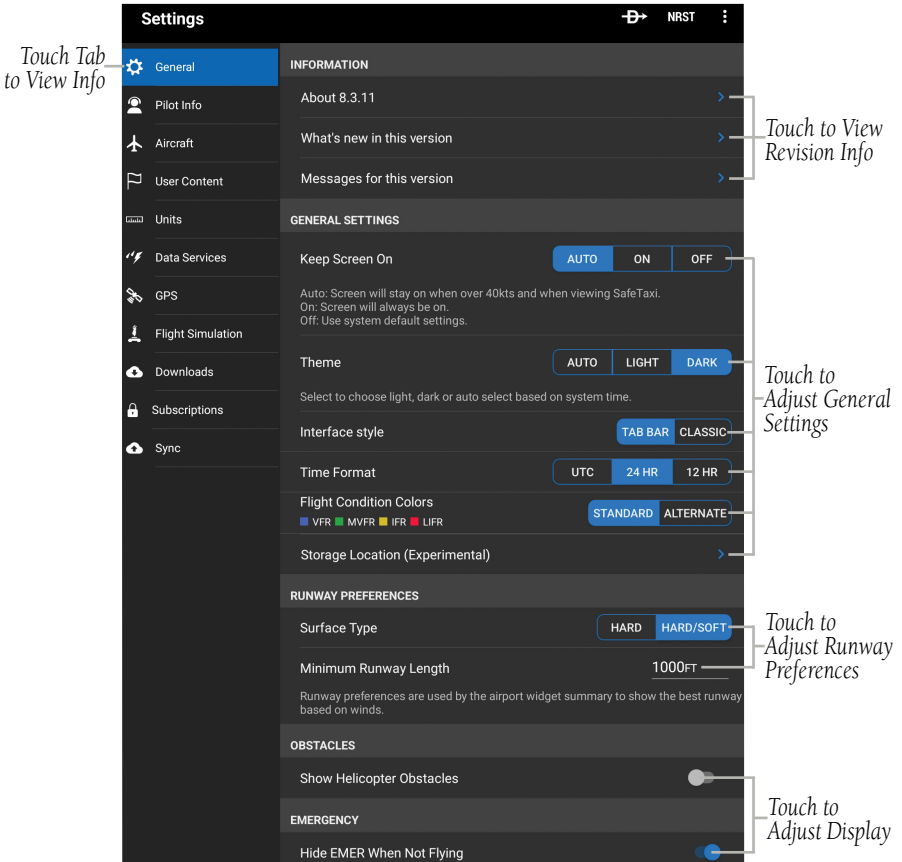

Settings - General

From the Settings Menu it is possible to set up or change the time format, input pilot profile and aircraft information, manage user waypoints, set up the preferred flight plan filing service, manage data subscriptions and much more. All of these and more selections are available by touching the tab associated with the desired function. The show/hide features like the Navigation Information (on the map display) can be accessed in the Map Context Menu (⋮) located in the upper right of the navigation bar.

HELP FILE

The content of the User's Guide is mirrored in the in-app help file providing context sensitive instructions for getting the most out of a Garmin Pilot subscription. The help file can be accessed from any page, by touching the Map Context Menu (☰) located in the Navigation Bar and then touching **Help** in the page sensitive menu. Alternatively, the Help file can be accessed from the Home Button (☰) as well. Navigating within the Help File is as easy as touching any of the hyperlinks.

Accessing the Help File:

Touch **Menu > Help**. The Help File will open to context sensitive content.

USER'S GUIDE

The Full Manual is a PDF formatted User's Guide for Garmin Pilot. The first time the file is accessed, the device will ask to choose a default PDF viewer. The Full Manual has a linked table of contents, index, and Bookmarks for easy navigation. The Full manual can also be downloaded from www.garmin.com.



NOTE: *The Full Manual will open to the most recently accessed page. Use the Bookmarks or Page Slider to quickly navigate the file.*

Accessing the Full Manual:

- 1) Touch **Menu > Help**.
- 2) Touch **Download** to download, touch **View**, to view the manual once downloaded. Anytime an updated manual is available the View button will revert to a Download button.

Accessing the Full Manual at www.garmin.com:

- 1) Open www.garmin.com in a web browser.
- 2) In the top right corner of the page hover the pointer over **Support**.
- 3) Select **Aviation Support**.
- 4) Scroll down and select **Aviation Manuals**.
- 5) Type "Garmin Pilot" into the **Enter a Product Name or Serial Number** search bar.
- 6) From the next drop down menu select **Garmin Pilot™**.
- 7) Select the desired User's Guide to download, e.g. Garmin Pilot for Android User's Guide.


NAVIGATION BAR

Garmin Pilot's user interface is comprised of icons and active areas that provide access to the various features and functions of the application. The Navigation Bar, located at the top of every page, provides access to many of the basic functions.



HOME BUTTON

The Home Button (☰) is the primary means of accessing many of the features of Garmin Pilot. The Home Button provides quick access to the various pages within Garmin Pilot.

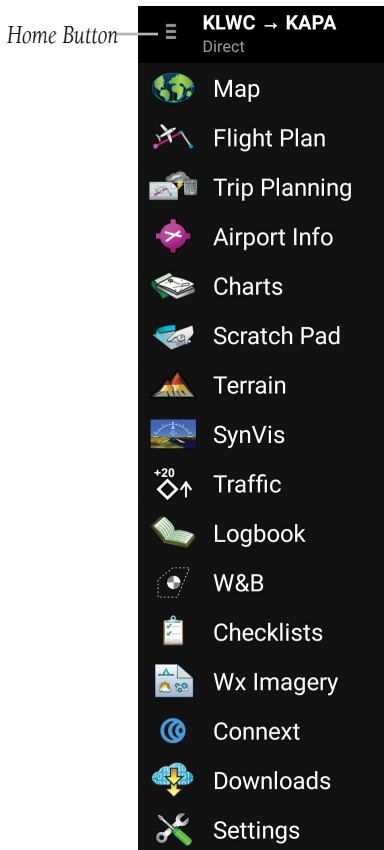












Home Menu

HOME BUTTON ICONS



NOTE: *Classic Garmin Pilot Home Menu will be discontinued in upcoming software updates. Users are encouraged to use the new Tab Bar navigation style going forward.*

Touch the following icon to display the associated function:

	Map	Displays the Map Page, which provides full en-route navigation capabilities on a moving map.
	Flight Plan	Displays the Active Flight Plan Page, where flight plans can be created, stored, shared, modified, and reversed.
	Trip Planning	Displays the Trip Planning Page, which manages all of the trip planning details for each trip.
	Airport Info	Displays the Airport Information Page, which includes basic airport info, frequencies, runways, procedures, weather, NOTAM's, FBO's, fuel prices/fees, FAA remarks, & Nav Aids.
	Charts	Displays the Charts Page, where various navigational charts can be viewed when properly downloaded.
	Scratch Pad	Displays the Scratch Pad Page, which allows the pilot to quickly draw or write down information on the device screen.
	Terrain	Displays the Terrain View, which displays altitudes of terrain and obstructions relative to the aircraft position and altitude.
	Synthetic Vision	Displays the Synthetic Vision View, which depicts a forward-looking attitude display of the topography immediately in front of the aircraft.
	Traffic	Displays the Dedicated Traffic Page.
	Logbook	Displays the Logbook Page, which allows the pilot to record pertinent flight information such as currency, endorsements, and photos.
	Weight & Balance	Displays the Weight & Balance, which is calculated to determine if the airplane is properly loaded within CG limits.

	Checklists	Displays the Checklists Page where specific aircraft electronic checklists can be viewed to ensure proper flight procedures.
	WX Imagery	Displays the Weather Imagery Page, providing various meteorological data for both real-time and forecast weather events.
	Connex	Displays the Connex Page, which allows the wireless sharing of data between devices via Bluetooth®, or, if properly equipped, Wi-Fi.
	Downloads	Displays the Downloads Page, which automatically downloads file updates and next cycles as they become available.
	Settings	Displays the Settings Page, which includes General, Pilot Info, Aircraft, User Waypoints, Units, Weather Data, GPS, Downloads, Subscriptions, & Sync.
Home Button Icons		

TOOLS


The Tools options at the bottom of the Home menu provides access to Demo Mode, Stopwatch, Lock Screen option, Full Screen option, Brightness options, Alerts, and the Help file.

STOPWATCH

The Stopwatch feature changes the title bar to display a standard stopwatch, showing hours, minutes and seconds.

Using the Stopwatch:

- 1) Touch **Home > Stopwatch**.
- 2) Touch the **Start/Pause** button to start the timer.
- 3) Touch the **Start/Pause** button again to pause the timer.
- 4) Touch the **Reset button** at any time to reset the timer to zero.
- 5) Touch **Home > Stopwatch** to disable the stopwatch and return the title bar to normal display.

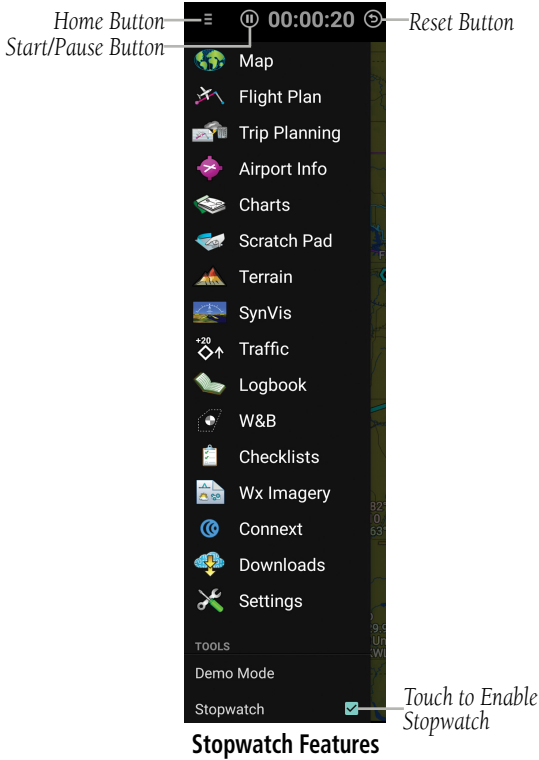


LOCK SCREEN

The Lock Screen feature keeps the current map or chart from moving in case the screen is accidentally touched while displaying important information.

Locking the Screen:

- 1) Touch **Home** > **Lock Screen**. The title bar turns gray to show the screen is locked. A 'Screen Locked' message is displayed if the map or chart is swiped.
- 2) Touch to unlock the screen and return to normal function.

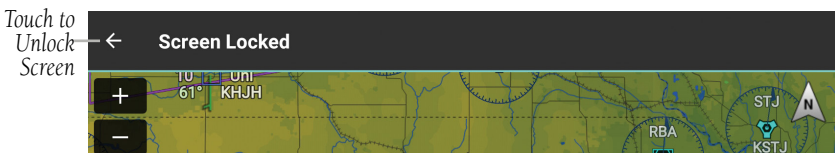

Locked Map Screen

FULL SCREEN

The Home Menu provides access to the Full Screen mode. Simply touch **Home > Full Screen** to activate.




NOTE: *Not all screens/devices support full screen mode. This setting will reset upon app start.*

Full Screen Mode Actions

- 1) Swipe down from the top of the screen to view navigation controls.
- 2) Swipe in from the left to open the Home Menu.
- 3) To exit Full Screen Mode, swipe in from the left to open the Home Menu and un-check the box next to Full Screen Mode.

BRIGHTNESS

The Home Menu provides access to the display brightness control. Simply touch **Home > Brightness** to display a display brightness slider and set the desired display brightness. Move the slider to the right to increase display brightness or left to decrease brightness.

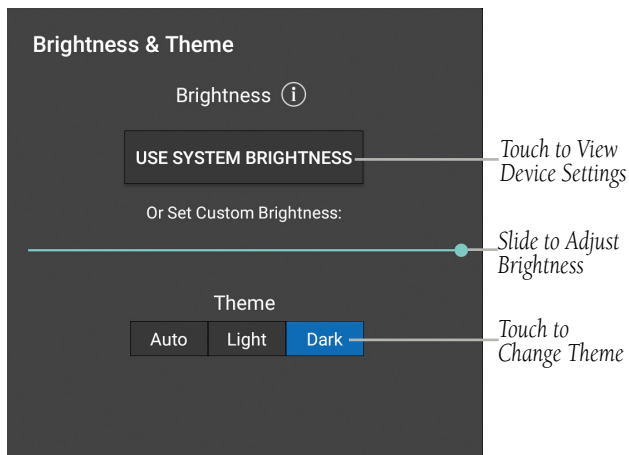


Brightness & Theme Settings



NOTE: *To enable the in application brightness settings some Android devices may require disabling the "Automatic brightness" setting for the system brightness.*

ALERTS


Create Alerts based on time or location. Alerts that are based on time, can range from 10 seconds to several hours. Time alerts can also be set to repeat. Location based Alerts can be set At, Before, or After a Flight Plan Waypoint.

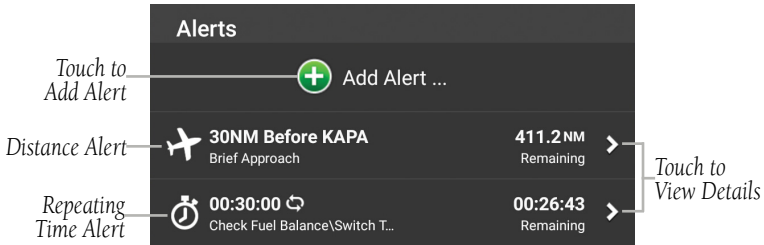

Alerts - Main

Creating a time based alert:


- 1) Touch **Home** > **Alerts** > **Add Alert**.
- 2) Touch **Time** > **Tap to Set**.
- 3) Enter the desired count down time (HH:MM:SS).
- 4) If desired, use the Repeating **On/Off** switch, to enable/disable repeating.
- 5) If desired, touch the **Alert Message (Optional)** button and use the keypad to enter a custom message.
- 6) Touch **Save**.

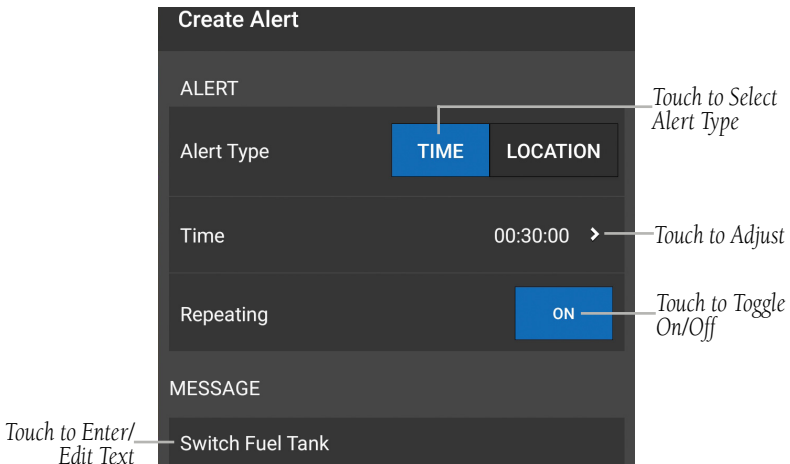

Create Alert - Time Based

Creating a location based alert:

- 1) Touch **Home** > **Alerts** > **+ Add Alert**.
- 2) Touch **Location**.
- 3) Touch the **Relationship** field and select **Before**, **At**, or **After**.
- 4) Touch the **Distance** field, and use the keypad to set the desired distance in nautical miles.
- 5) Touch the **Waypoint** field, and select the desired waypoint from the list.
- 6) If desired, touch the **Alert Message (Optional)** button, and use the keypad to enter a custom message.
- 7) Touch **Save**.

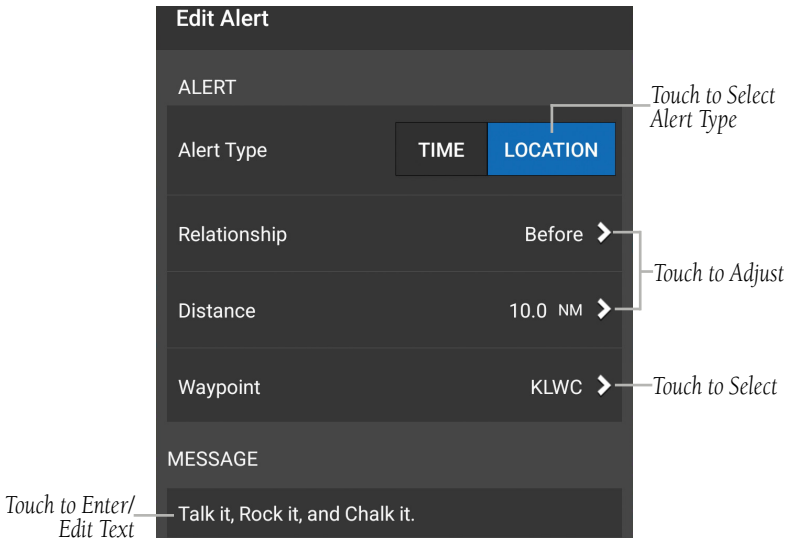


Create Alert - Location Based

Editing Alerts:

- 1) Touch **Home** > **Alerts** > **Edit**.
- 2) Touch the desired alert for the list.
- 3) Touch the desired field(s) to edit.
- 4) Touch **Save**, to save changes.

Deleting Alerts:


- 1) Touch **Home** > **Alerts** > **Edit**.
- 2) Touch > **Delete** to delete the Alert.

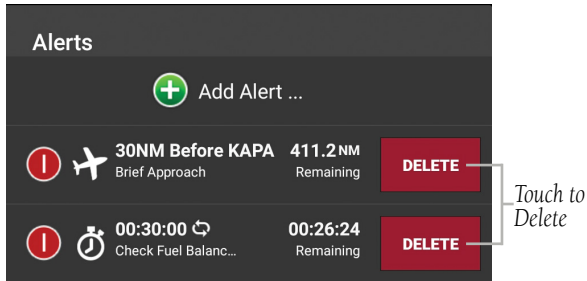

Deleting Alert

DIRECT-TO

The Direct-To button can be accessed from any page, and provides a quick and easy way to navigate direct to any waypoint (e.g., Flight Plan Waypoint, Nearest Waypoints, or User Waypoints). When Direct-To is active, the user can cancel Direct-To or re-activate Direct-To at any time. Re-activating Direct-To will calculate the direct to from the current position.

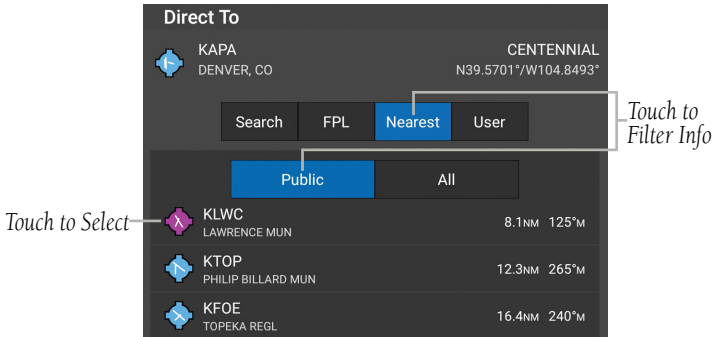

Direct-to Menu - Nearest - Public

NEAREST


The nearest navigation button located on the top menu bar can be accessed from any page, and provides a quick and easy way to locate airports, NAVAIDs, Intersection, User Waypoint, ARTCC, FSS, and Airspace.



NOTE: *Garmin Pilot requires a GPS enabled device and a valid GPS fix to use Nearest.*

Displaying the nearest airport:

- 1) Touch **NRST** > **Type** > **Airport**.
- 2) If including in nearest search, touch to toggle the **Private**, **Military**, **Seaplane**, or **Heliport** switches ON/OFF, as desired.
- 3) Touch once to select the Nearest Airport from the list, and touch again to display the airport information.

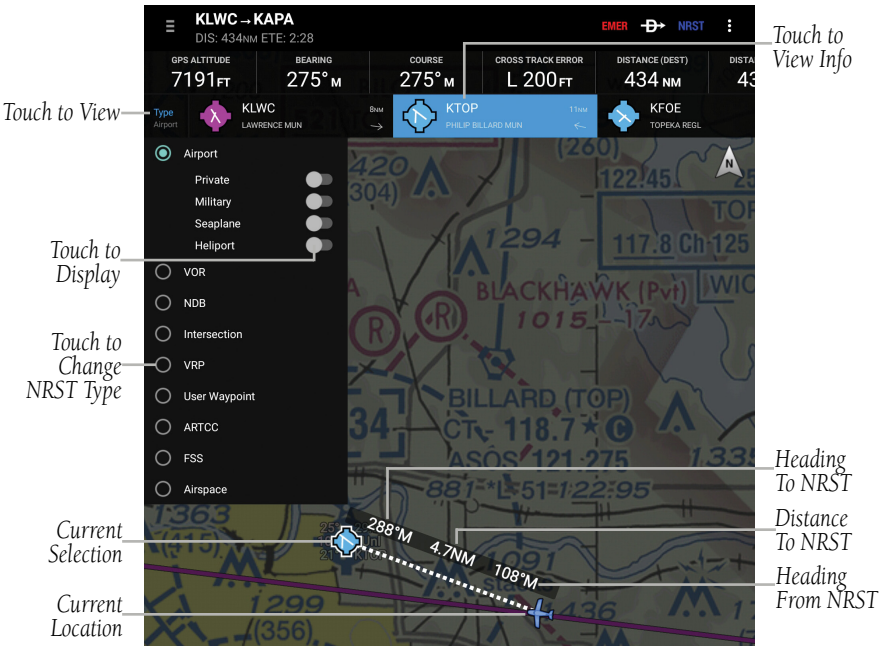

Nearest Airports

Displaying Nearest VOR, NDB, Intersection, VRP, or User Waypoint:

- 1) Touch **NRST** > **Type**.
- 2) Touch **VOR, NDB, Intersection, VRP, or User Waypoint**.
- 3) Touch the nearest 'VOR', 'NDB', 'Intersection', 'VRP', or 'User Waypoint' from the list to display the navigation information.

Displaying Nearest ARTCC or FSS:

- 1) Touch **NRST** > **Type**.
- 2) Touch **ARTCC or FSS**.
- 3) Touch the nearest 'ARTCC' or 'FSS' from the list.
- 4) Touch again to display additional information.

Displaying Nearest Airspace:


- 1) Touch **NRST** > **Type**.
- 2) Touch **Airspace**.
- 3) Touch the nearest 'Airspace' from the list.
- 4) Touch again to display additional information.

Setting Nearest Airport Runway Surface Type:

- 1) Touch **Home** > > **General**.
- 2) Touch **Hard**, or **Hard/Soft** in the Runway Surface Type field.

Setting the nearest airport minimum runway length:

- 1) Touch **Home** > > **General**.
- 2) Touch the Minimum Runway Length field to enter a value.

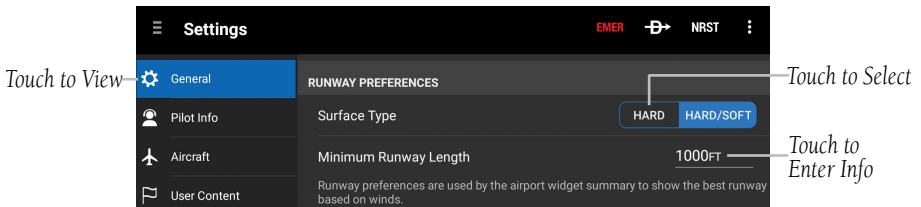


Settings - General - Runway Preferences

EMERGENCY MODE

The red Emergency (EMER) button located on the Navigation Bar can be accessed from any page and provides a quick way to reduce the pilot's workload in an emergency situation. The EMER button will display the following:

- The Glide Range Ring using terrain and winds aloft data.
- The Emergency checklist in Split-Screen mode if configured.

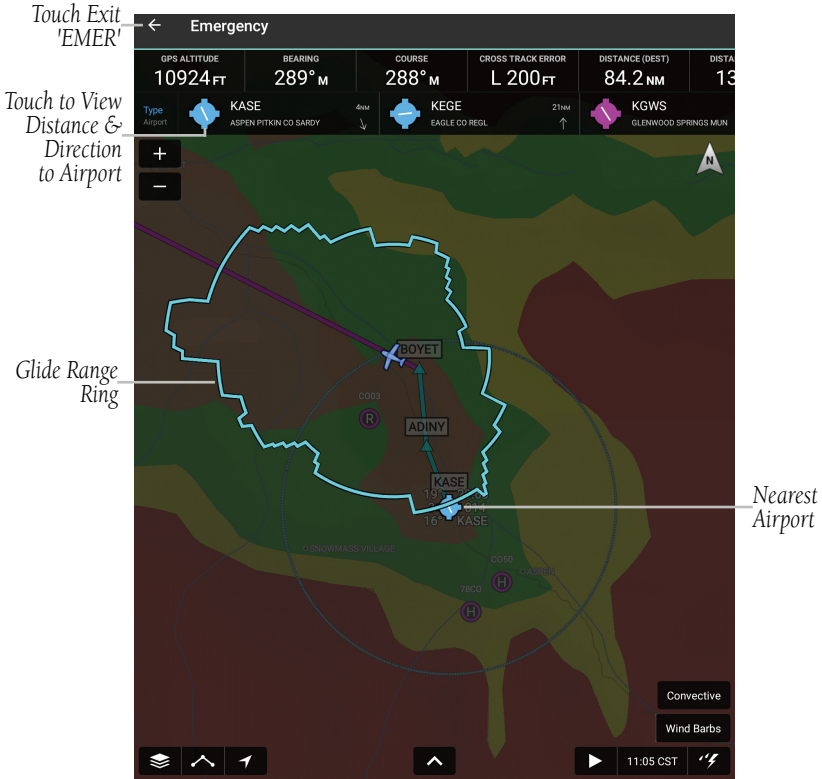

Emergency Mode (EMER) - Glide Range Ring


The EMER button can be configured to be displayed only when in flight.

Setting the EMER button to be displayed only when in flight:

- 1) Touch **Home** > > **General**.
- 2) Scroll to the **Emergency** section.
- 3) Touch to toggle the **Hide EMER When Not Flying** button, as desired.

MENU

The Menu Button provides a page-sensitive menu structure. Each page has specific menu options that control, search, navigate, or display page-sensitive menu items. For example, the data bar fields can be displayed on the Map Page by touching the 'Show Navigation Info' checkbox. Touch each data field to change the navigation data displayed.

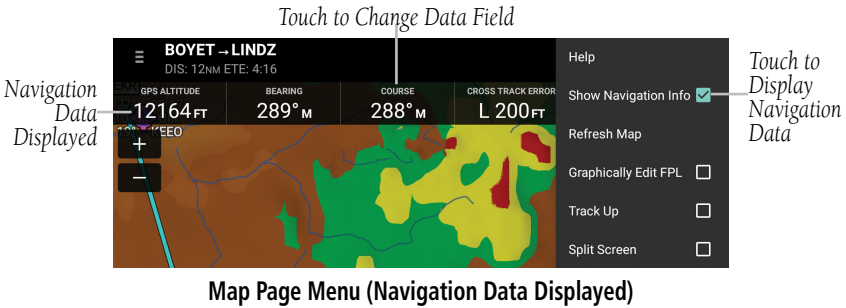

GLIDE RANGE RING



NOTE: To enable the Glide Range Ring on the Map, the User must have a valid premium subscription, an updated terrain database downloaded, and the Glide Ratio setting toggled 'On' for the selected Aircraft in the active Flight Plan.

This feature is an aid to estimate accessible airports and terrain if the aircraft were forced into glide circumstances. The displayed ring updates in real time, derived from the selected aircraft's altitude, speed, and performance details. Since Garmin Pilot supports multiple aircraft, the Glide Range Ring refers to the current active flight plan to determine which aircraft performance details to calculate the ring shape.

The Glide Range Ring requires glide performance details to be specified in Garmin Pilot's settings. This is accessed through **Home** > > **Aircraft**. Touch on an aircraft (not aircraft type) to edit its details, and scroll down to the Glide section to specify the **Glide Ratio** and **Best Glide Speed**. Refer to the aircraft documentation for these values.

The **Glide Range Buffer** setting can be used to shrink the Glide Range Ring in situations where glide performance is expected to be less than ideal, perhaps due to shifting winds. Increasing this setting will decrease the size of the Glide Range Ring. Enabling **Shape Glide Ring for Terrain** will alter the shape of the Glide Range Ring to show intersection with terrain.

Enabling **Shift Glide Ring for Wind** will factor in local wind conditions when calculating the Glide Range Ring shape. Note the Glide Range Ring uses the most recent weather data, which may be outdated if Garmin Pilot does not have access to real time weather data over Wi-Fi or with outboard hardware such as a GDL 39.

Enabling/Disabling the Glide Range Ring:

- 1) Touch > **Ownship/Route**.
- 2) Touch to toggle **Display Glide Range Ring**, as desired.



Map - Ownship/Route - Glide Range Rings











Navigation Data	Description
Altitude	The current GPS altitude or geometric height above MSL in feet.
Bearing	The compass direction from the present position to a destination waypoint.
Course	The magnetic direction from the last waypoint to the active waypoint.
Cross Track Error	The distance and direction, left or right, the aircraft is from the desired course in nautical miles.
Distance (Dest)	The distance to the destination waypoint in the Active Flight Plan.
Distance (Next)	The distance to the next waypoint in the Active Flight Plan.
ETA (Dest)	The estimated time at which the aircraft should reach the destination waypoint, based upon current speed and track.
ETA (Next)	The estimated time at which the aircraft should reach the next waypoint, based upon current speed and track.
ETE (Dest)	The estimated time it takes to reach the destination waypoint from the present position, based upon current ground speed.
ETE (Next)	The estimated time it takes to reach the next waypoint from the present position, based upon current ground speed.
Ground Speed	The velocity the aircraft is traveling relative to the ground.
Heart Rate *	Heart rate from a wrist or chest heart rate monitor.
Latitude	Current latitude.
Longitude	Current longitude.
Next Waypoint	Next waypoint on the route of flight.
Pitch	Current pitch. (GDL 39 3D only)
Pulse Oximeter**	Displays the saturation of oxygen in the blood.
Roll	Current roll. (GDL 39 3D only)
Time	Current time.
Track	The direction of aircraft movement relative to the ground.
Vertical Speed	The rate of climb or descent (GPS-derived).
Wx-Wind	The wind speed/direction at the nearest weather reporting station.
Wx-Visibility	The visibility at the nearest METAR reporting station.
Wx-Altimeter	The altimeter setting at the nearest METAR reporting station.
Wx-Ceiling	The ceiling at the nearest METAR reporting station.

*D2 Bravo Titanium, D2 Charlie series, and D2 Delta series. **D2 Air, D2 Delta PX, D2 Mach series, MARQ® Aviator series.


Navigation Data Field Options

MAP PANE CONTROLS

The Map Pane has a number of buttons that control the Base Map, Map Overlays and center map and split-screen. The table below shows the Map Pane Controls.


Control	Icon	Description
Map Settings		Map/Chart Selection/Settings, Map Overlay Selection, Overlay Opacity Settings, and General Map Settings
Center on Aircraft		Centers the Map Pane on the current GPS location. Highlighted in blue when selected.
		
Center on Route		Centers the entire route in Map Pane. Highlighted in blue when selected.
		
Zoom In		Zooms In on the map
Zoom Out		Zooms out on the map
Split-Screen		Selects full screen map or partial map with Widgets, Panel, Charts, and SafeTaxi.
Map Orientation		Toggles map orientation from north up to track up. The Icon is blue when track up is active.
Filter Settings		Displays a list of active and upcoming Airspace & NOTAM filters along with the ability to adjust filter display settings.

Map Pane Controls

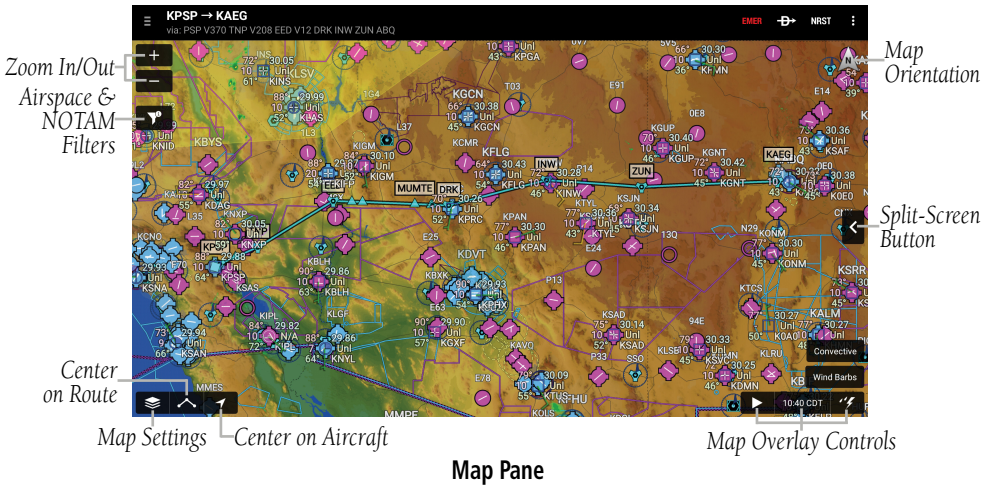

MAP/CHART SELECTION AND SETTINGS

There are three maps and three charts available for display on the Map Page. The following charts are available for viewing in the map area: Sectional TAC, IFR Low, and IFR High. Charts are high-resolution color images that resemble the paper version of the National Aeronautical Navigation Products (AeroNav) published charts. The Roads/Borders Map is a very basic map showing major roads, bodies of water, borders and Flight Plan information. Both IFR and VFR maps are vector-based interactive maps that are populated with aeronautical information such as airports, navigation aids, maximum and minimum airspace altitudes, airspaces, and victor airways.

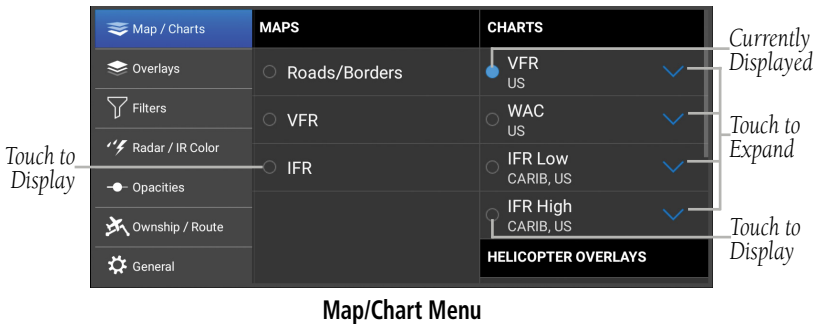

Selecting a Helicopter Chart Overlay:




NOTE: A chart basemap must be selected to display helicopter overlays.



NOTE: For information on downloading Helicopter Charts, refer to 'Downloads', discussed later in this section.

- 1) After downloading the desired Helicopter Charts, touch > **Map/Chart**.
- 2) Touch a chart basemap (**VFR**, **IFR Low**, or **IFR High**).
- 3) Touch a Helicopter Overlay (**U.S. VFR Helicopter**, **Gulf VFR Helicopter**, or **Gulf IFR Helicopter**).

Touch Tab to View Info

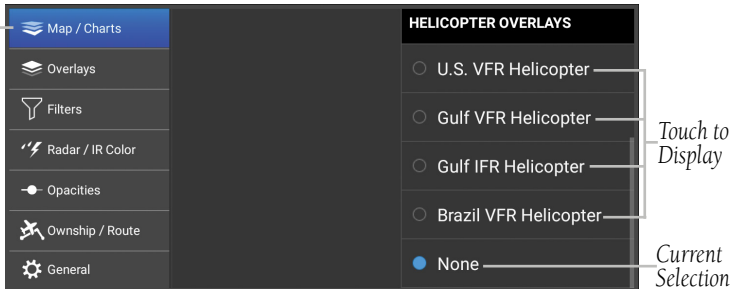


Selecting Helicopter Chart Overlay



VFR Helicopter Chart Overlay

Accessing Advanced Map Settings:

- 1) Touch > **Map/Chart** > **Map Name** > .
- 2) Touch **General, Airports, Nav Aids, Airspaces, or Cities**.
- 3) Use the sliders and selection buttons to set Visibility Ranges and Label Sizes for map features.
- 4) To give the new settings a name, Touch **General > Map Name**, and use the keyboard to enter a name.
- 5) Touch **Done** to save and exit, or touch **Restore Defaults** to restore the default Map Theme setting.

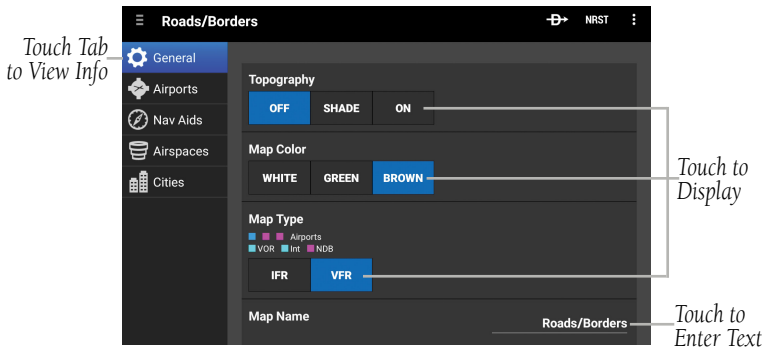

Advanced Map Settings - General

Map Setting Categories	Map Item	Options			
General	Topography	Off, Shade, or On			
	Map Color	White, Green, or Brown			
	Map Type	IFR, or VFR			
	Map Name	User Defined Name			
Airports	Visibility Range	Large Airports	Med Airports	Small Airports	Pvt Airports
		Off - 200 nm	Off - 50 nm	Off - 20 nm	Off - 20 nm
		Heliports	Seaplane Bases	SafeTaxi	
	Off - 20 nm	Off - 50 nm	Off - 2 nm		
	Label Size	Off, Small, Medium, Large			

Nav Aids	Visibility Range	VOR Off - 100 nm	NDB Off - 50 nm	Intersection Off - 10 nm		
		VRP Off - 10 nm	Low Airways Off - 100 nm	High Airways Off - 100 nm		
	Label Size	VOR, NDB, Intersection, VRP Off, Small, Medium, Large				
Airspaces	Filter All Airspaces	Hide All Airspaces Above Numerical Entry		Smart Airspace On/Off		
	Visibility Range	Class B Off - 200 nm	Class C Off - 200 nm	Class D Off - 100 nm		
		Class E/TRSA Off - 100 nm	TMA Off - 200 nm	Control Area CTA Off - 100 nm		
		Control Zone CTR Off - 100 nm	ATZ/TIZ/MATZ Off - 100 nm	Euro Airway Off - 100 nm		
	SUA Visibility Range	Restricted Off - 200 nm	Alert/Warning Off - 200 nm	Parachute Area Off - 100 nm	MOA Off - 200 nm	
		ADIZ Off - 100 nm	Danger Off - 100 nm	Other Off - 100 nm		
	Label Style	Airspace Size Off, Small, Medium, Large				
Airspace Style Standard, Enhanced						
		Airspace Color Standard, Dark				
Cities	Visibility Range	Large City Off - 500 nm	Medium City Off - 200 nm	Small City Off - 100 nm	Small Town Off - 50 nm	
	Label Size	Large City, Medium City, Small City, Small Town Off, Small, Medium, Large				






Advanced Map Settings

NOTAM FILTERS

Enabling NOTAMs Based On Active Flight Plan:







NOTE: When enabled, only the NOTAMs that will be effective during the Estimated Time Enroute (ETE) of the Active Flight Plan, plus a three (3) hour margin, will be displayed on the Map or within the applicable Widget.

- 1) From any page, touch **Home** >  >  > .
- 2) Touch  to view info.
- 3) Touch  to enable NOTAM filter.





Adjusting Upcoming NOTAM Visibility:



NOTE: Determines how far in the future to show NOTAMs on the Map or within the applicable Widget. Does not apply when NOTAMs are filtered based on the Active Flight Plan.

- 1) From any page, touch **Home** >  >  > .
- 2) Touch  to view info.
- 3) Touch the "+" or "-" button to adjust the timeframe (hours).

Enabling Hide Obstacle NOTAMs:

- 1) From any page, touch **Home** >  >  > .
- 2) Touch  next to 'Hide Obstacle NOTAMs' to enable/disable.

Enabling Hide UAS NOTAMs:

- 1) From any page, touch **Home** >  >  > .
- 2) Touch  next to 'Hide UAS NOTAMs' to enable/disable.

SETTINGS

Located under the Home Button, touch the Settings Icon to open the Settings Menu. The Settings Menu tabs customize and manage Garmin Pilot features, subscriptions, Pilot Info, Aircraft Info and much more.

GENERAL

The General Settings tab provides access to settings for Keep Screen On, Theme, Time Format, Flight Condition Colors, Runway Preferences, Navigation, Alert Configuration Setup, Alert Type Setup, Synthetic Vision, & General Data Protections Regulation (GDPR). Touch **About** to display the current version of the Garmin Pilot Application, copyright information, and contact information (both email and phone) for Garmin Aviation Support. Touch the email address to compose an email and send it directly to Garmin Aviation Support. Sending a support email in this manner will automatically populate the email with information that will greatly aid Garmin in troubleshooting and resolving any issues that may arise.



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to send and receive email.


Touch **What's new in this version...** to view information about what's new in the latest Garmin Pilot update.

KEEP SCREEN ON

The Keep Screen On settings provide three options for controlling the device display settings when using Garmin Pilot.

- **Auto:** The screen will stay on when the device GPS senses a ground speed over 40 kts and when viewing SafeTaxi
- **On:** The screen will always be on.
- **Off:** Uses the system default display settings.


Configuring Screen Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Auto**, **On** or **Off** to select the desired Keep Screen On settings.

THEME

The provided alternate themes allow Garmin Pilot to be used in various lighting scenarios. The **Light** theme uses dark text on a bright background that's easier to see during the day and in direct sunlight. The **Dark** theme uses bright text on a dark background that's much more comfortable in low-light situations. The **Auto** option will automatically switch between the two based on the time of day.

Configuring Interface Themes:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Auto**, **Light** or **Dark** to select the desired setting.

Or

- 1) From any page, touch **Home** > **Brightness**.
- 2) Touch **Auto**, **Light** or **Dark** to select the desired setting.

INTERFACE STYLE




NOTE: *Classic Garmin Pilot Home Menu will be discontinued in upcoming software updates. Users are encouraged to use the new Tab Bar navigation style going forward.*

The Tab Bar, located at the bottom of the screen, when selected, may be used as an alternate means of accessing many of the features of Garmin Pilot. The Tab Bar is configurable and provides quick access to the various pages within Garmin Pilot (Map, Flight Plan, Trip Planning, Airport Info, Charts, Weather Imagery, Scratch Pad, Terrain, Traffic, Checklists, Synthetic Vision, Logbook, Weight and Balance, Connex, Downloads, & Settings).

Adjusting Interface Style:



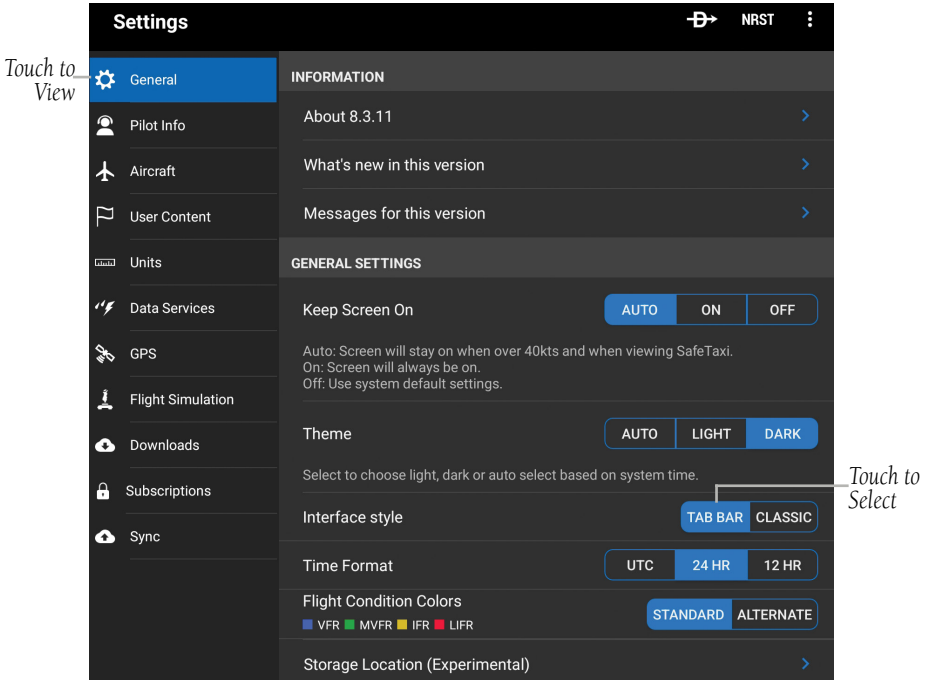








- 1) Touch **Settings** > **General**.
- 2) Touch **Tab Bar** to adjust the Interface Style.
- 3) Touch **Classic** to return to the legacy Home Screen Menu interface style.



Settings - General - Interface Style Selection

TAB BAR ICONS

Touch the following icon to display the associated function:

	Map	Displays the Map Page, which provides full en-route navigation capabilities on a moving map.
	Flight Plan	Displays the Active Flight Plan Page, where flight plans can be created, stored, shared, modified, and reversed.
	Trip Planning	Displays the Trip Planning Page, which manages all of the trip planning details for each trip.
	Airport Info	Displays the Airport Information Page, which includes basic airport info, frequencies, runways, procedures, weather, NOTAM's, FBO's, fuel prices/fees, FAA remarks, & Nav Aids.
	Charts	Displays the Charts Page, where various navigational charts can be viewed when properly downloaded.
	WX Imagery	Displays the Weather Imagery Page, providing various meteorological data for both real-time and forecast weather events.
	Scratch Pad	Displays the Scratch Pad Page, which allows the pilot to quickly draw or write down information on the device screen.
	Terrain	Displays the Terrain View, which displays altitudes of terrain and obstructions relative to the aircraft position and altitude.
	Traffic	Displays the Dedicated Traffic Page.
	Checklists	Displays the Checklists Page where specific aircraft electronic checklists can be viewed to ensure proper flight procedures.
	Synthetic Vision	Displays the Synthetic Vision View, which depicts a forward-looking attitude display of the topography immediately in front of the aircraft.


	Logbook	Displays the Logbook Page, which allows the pilot to record pertinent flight information such as currency, endorsements, & photos.
	Weight & Balance	Displays the Weight & Balance, which is calculated to determine if the airplane is properly loaded within CG limits.
	Connex	Displays the Connex Page, which allows the wireless sharing of data between devices via Bluetooth®, or, if properly equipped, Wi-Fi.
	Downloads	Displays the Downloads Page, which automatically downloads file updates and next cycles as they become available.
	Settings	Displays the Settings Page, which includes General, Pilot Info, Aircraft, User Content, Alerts, Units, Downloads, Subscriptions, FltPlan.com, Data Services, & Flight Simulation.
Tab Bar Icons		

CUSTOMIZE TAB BAR ICONS

The More menu contains the items not visible in the tab bar, which may be reordered or hidden from view. The order of the items in the tab bar may be customized by clicking **More > Edit**. Long press the desired Tab Bar icon to start customizing, using the drag-and-drop gesture to move icons to their desired location. The item to the right of the horizontal line is dynamic and displays the most recently viewed feature from the More menu.




NOTE: The Tab Bar will show between zero (0) and three (3) recent tabs with the remaining space on the Tab Bar reserved for user selected items which is dependent on screen size and device orientation. In the event a device only has enough space to show three (3) tabs, no recent tabs will be shown, instead the tabs shown will be two (2) user selected items and the More tab.

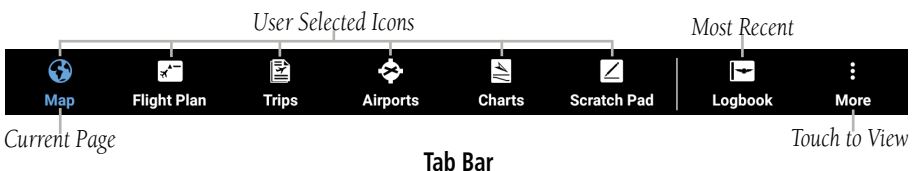

Customizing Tab Bar Icons:


- 1) From anywhere in Garmin Pilot, touch **More** > **Edit** to display the Drag and Drop to Reorder window.
- 2) The Tab Bar and More Menu icons are displayed. Scroll down to view the complete list of icons in the More Menu.
- 3) Long press on the desired icon until the background is highlighted (blue), then drag and drop the icon in the desired location.
- 4) If necessary, touch **Restore** to load the previous selection and sequence of icons.
- 5) Touch **Save** to continue or **Cancel** to close without saving.

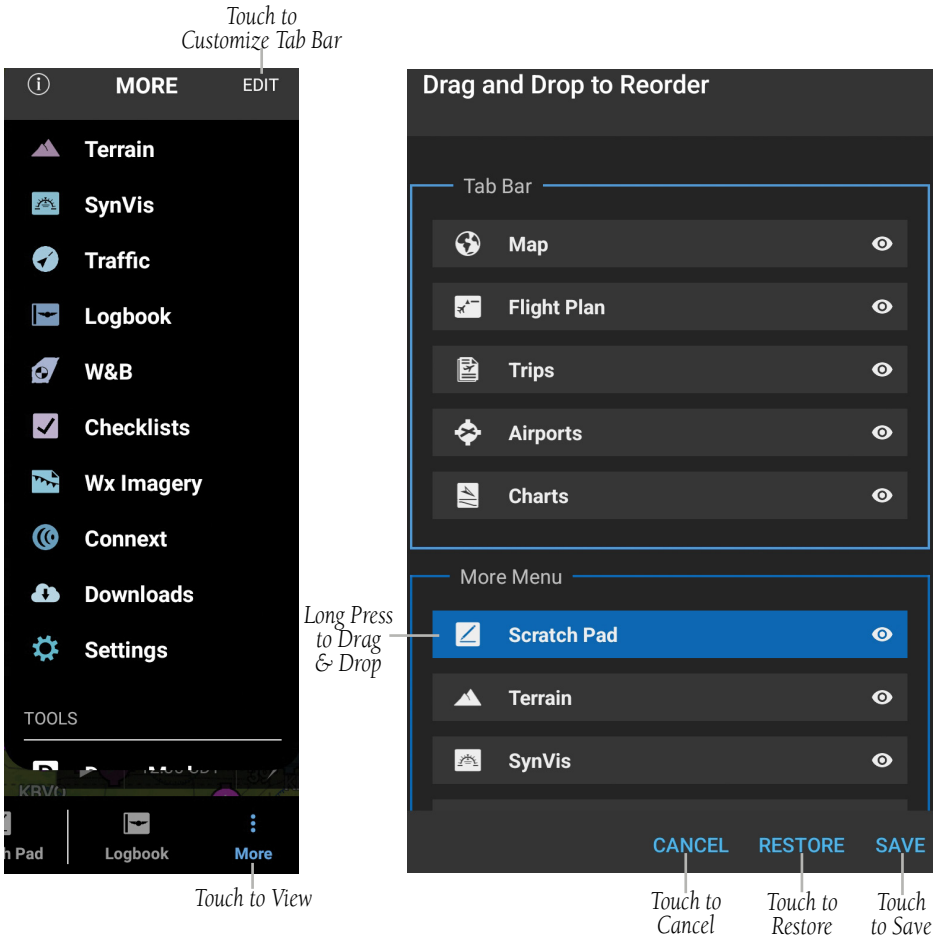

Tab Bar Customization

Hiding Tab Bar Icons:

- 1) From anywhere in Garmin Pilot, touch **More** > **Edit** to display the Drag and Drop to Reorder window.
- 2) The Tab Bar and More Menu icons are displayed. Scroll down to view the complete list of icons in the More Menu.
- 3) Touch to Hide and remove from the available icon(s) on the Tab Bar.
- 4) If necessary, touch **Restore** to unhide and load the previous selection and sequence of icons.
- 5) Touch **Save** to continue or **Cancel** to close without saving.

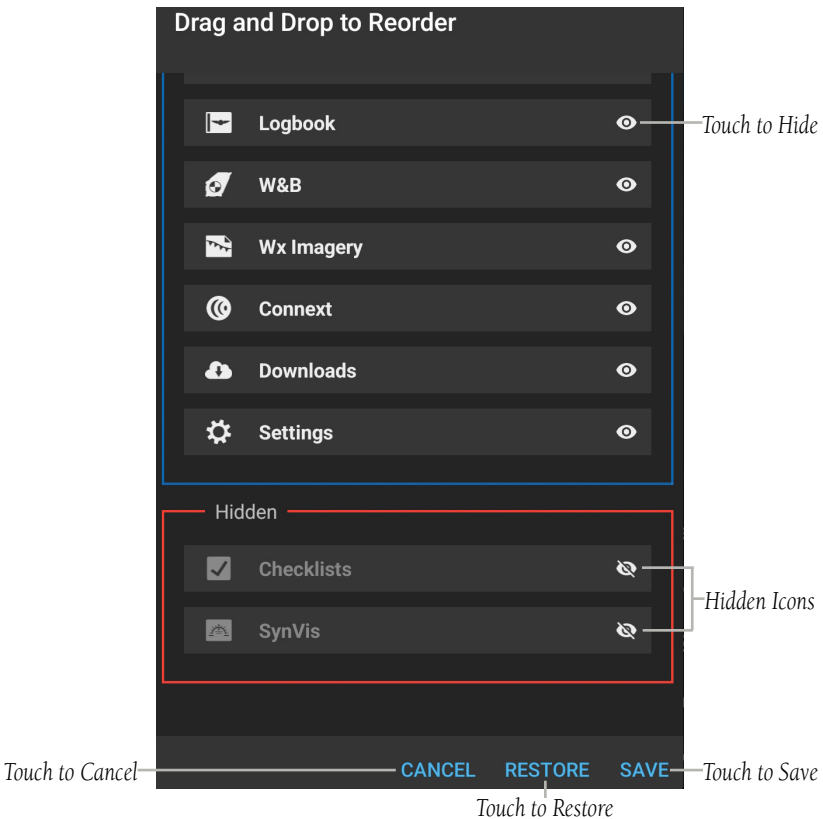

Tab Bar Customization - Hidden Icons

RUNWAY PREFERENCES

Setting Runway Preferences will adjust the Best Runway recommendations made by the Airport Information page and the airport widget. The default **Surface Type** is Hard/Soft which will recommend any runway. Changing this to Hard will only recommend asphalt and concrete runways. Setting the **Minimum Runway Length** will only recommend runways to the specified length or greater.



NOTE: Runway preferences are used by the airport widget summary to show the best runway based on winds.


OBSTACLES

Configuring Helicopter Obstacles:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Show Helicopter Obstacles** as desired.



EMERGENCY

Configuring Hide EMER When Not Flying:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Hide EMER When Not Flying** as desired.


NAVIGATION

Configuring Automatic Safe Taxi:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Automatic Safe Taxi** as desired.



NOTE: With a SafeTaxi subscription and when Automatic SafeTaxi is On, SafeTaxi will launch after landing at the destination airport when ground speed drops below 40 kts.

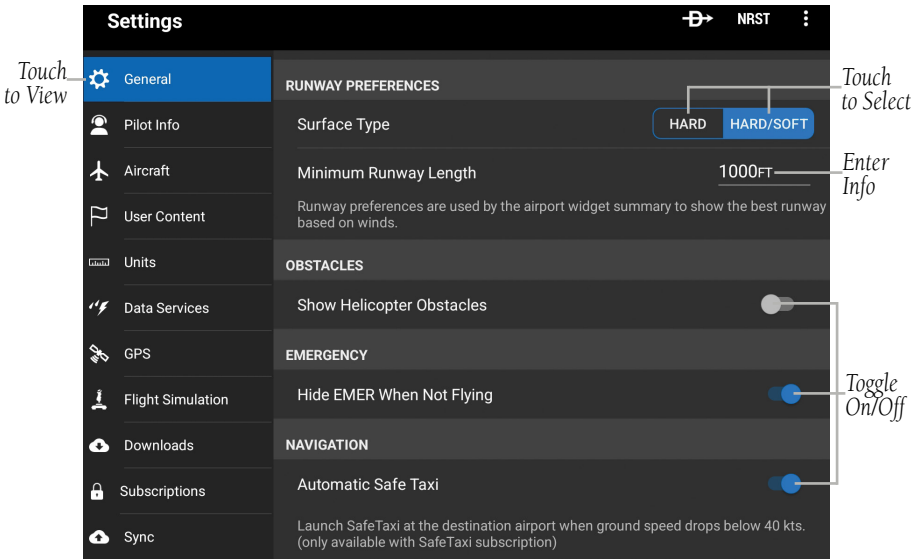



Settings - General - Runway Preferences

ALERT CONFIGURATION SETUP



The Alert Configuration Setup section allows the pilot the ability to toggle Notifications On/Off for vibration settings as well as select a desired ringtone. When Notifications are On, a Garmin Pilot Icon will appear in the device notification area (e.g. the top banner) when the configured alert criteria is met (e.g., time or location).

Configuring Alert Notifications:



- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Notification Ringtone** to select a ringtone, or set to **None** to disable audio notifications.
- 4) Touch  to toggle **Vibrate** as desired.

ALERT TYPE SETUP


Configuring Terrain Alerts:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Terrain Alerts** as desired.



Configuring Traffic Alerts (Traffic Device Required):

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Traffic Alerts** as desired.

Configuring Audio:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Audio** options **OFF**, **MALE**, or **FEMALE**.

Configuring Trip Weather Alerts:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch  to toggle **Trip Weather Alerts** as desired.



NOTE: Trip Weather Alerts are activated when weather for one or more trips goes below minimums set by the User.

SYNTHETIC VISION


Configuring Roll Indication:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Roll Indication** options **SKY POINTER**, or **GROUND POINTER**.

GENERAL DATA PROTECTION REGULATION (GDPR)


The GDPR is a regulation in the European Union on data protection and privacy for all individual citizens of the European Union and the European Economic Area. It also addresses the transfer of personal data outside the EU and EEA areas. If applicable, touch the **Reset** button.

Resetting General Data Protection Regulation:

- 1) From any page, touch **Home** > .
- 2) Touch the **General** Tab.
- 3) Touch **Reset** button in the **GDPR** section, as desired.



NOTE: For additional information, please visit <https://eugdpr.org> and/or click on **Privacy Policy** button.

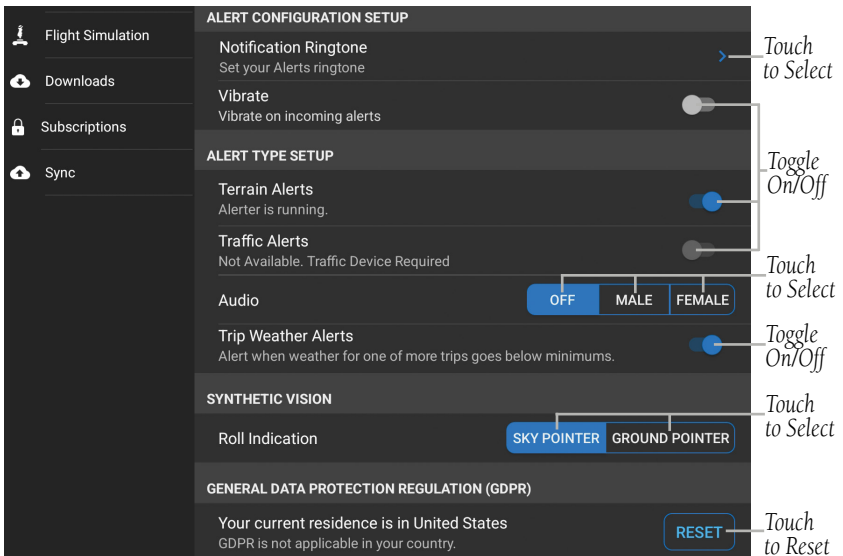





Settings - General - Alert Configuration



PILOT AND AIRCRAFT INFO




NOTE: A data connection (e.g., Wi-Fi or cellular) is required to file flight plans.

If a Garmin Pilot account is already signed into the app, Pilot and Aircraft information will automatically be synchronized. To add a new pilot touch **Home** >  > **Pilot Info** > . Touch in each field and use the on-screen keyboard to enter the requested information (e.g., Name, Address, Telephone, Personal Minimums, and preferred Filing Service). Add aircraft information by touching **Home** >  > **Aircraft** > , enter aircraft Identifier, Type, Equip Suffix, Home Base, Primary and Secondary Color, TAS, and Fuel information. To link Garmin Pilot with a Filing Service Provider, under Pilot Information, enter username and password information for the preferred provider. By linking to a Filing Service Provider, Garmin Pilot can file flight plans.

Entering Pilot Information:

- 1) From any page, touch **Home** > .
- 2) Touch **Pilot Info** > .
- 3) Enter the Pilot Information by touching each field and use the keyboard.
- 4) Touch **Save**, to save Pilot Information.

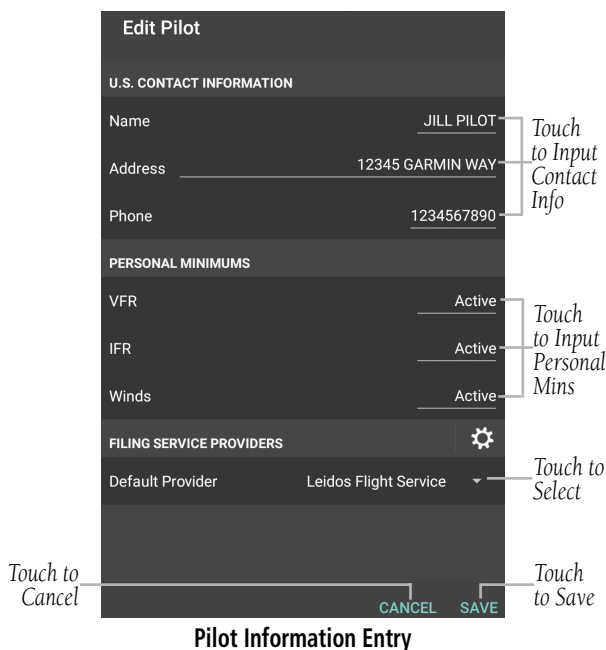

Edit Pilot

U.S. CONTACT INFORMATION

Name

Address


Phone


PERSONAL MINIMUMS

VFR Active

IFR Active

Winds Active

FILING SERVICE PROVIDERS 

Default Provider 

Pilot Information Entry



PERSONAL MINIMUMS


Each pilot that's registered on a Garmin Pilot account can specify personalized parameters for VFR, IFR and Wind minimums. These settings are considered by the Garmin Pilot app when planning trips.

Available parameters are:

- VFR minimums for ceiling and visibility for day and night flights
- IFR minimums for ceiling and visibility for day and night arrivals and departures
- Maximum wind speed, wind gusts, and crosswind component for arrival(s) and departure(s)



Configuring Personal Minimums:

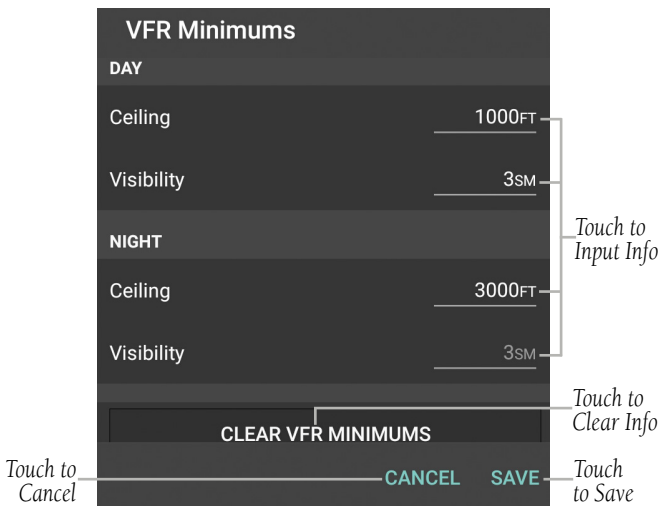
- 1) From any page, touch **Home** > .
- 2) Touch the **Pilot Info** Tab > .
Or: Touch a current Pilot in the list to edit.
- 3) Touch **VFR**, **IFR** or **Winds**.
- 4) Enter the preferred ceiling minimums in feet.
- 5) Enter the preferred visibility minimums in statute miles.
- 6) Enter the preferred maximum wind speeds in knots.
- 7) Touch **Save**.



Pilot - Personal Minimums - VFR

Entering Aircraft Information:

- 1) From any page, touch **Home** > .
- 2) Touch **Aircraft** > 
 - Or:** Touch a current Aircraft in the list to edit.
- 3) Enter Required and/or optional Aircraft Information by touching each field and use the keyboard.
- 4) Touch **Save**, to save Aircraft Information.

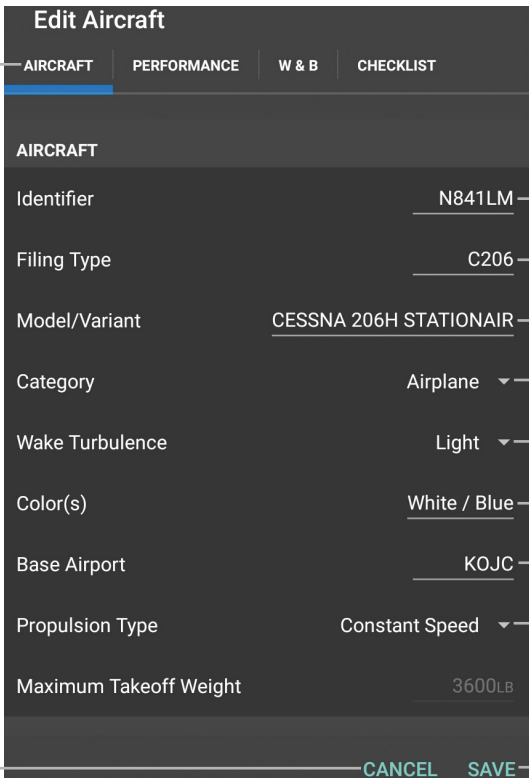

Touch to View — AIRCRAFT PERFORMANCE W & B CHECKLIST

AIRCRAFT

Identifier N841LM

Filing Type C206 *Touch to Input Info*

Model/Variant CESSNA 206H STATIONAIR

Category Airplane *Touch to Select*

Wake Turbulence Light *Touch to Select*

Color(s) White / Blue *Touch to Input Info*

Base Airport KOJC

Propulsion Type Constant Speed *Touch to Select*

Maximum Takeoff Weight 3600LB




Touch to Cancel — CANCEL SAVE *Touch to Save*


Aircraft Information Entry

ATC PROPOSED ROUTE NOTIFICATIONS

ATC Proposed Route Notifications are Push notifications, that include a proposed route for departures and destinations for previously filed flight plans. Notifications come in the notification area if Garmin Pilot is not currently active, or as Pop-ups within Garmin Pilot. To accept the proposed route and make it the Flight Plan, ensure Make Flight Plan is set to **On**, and touch **Brief** to open the Trip Planning Page. To dismiss the notification and not make it the Flight Plan, ensure Make Flight Plan is set to **Off**, and touch **Dismiss** to remove the popup.

Subscribing to ATC Proposed Route Notifications:

- 1) From any page, touch **Home** > .
- 2) Touch the **Aircraft** Tab > .
Or: Touch a current Aircraft in the list, to edit.
- 3) Scroll down & touch  to **Subscribe** to Proposed Route Notifications.
- 4) Touch **Save**, to save Aircraft Information.

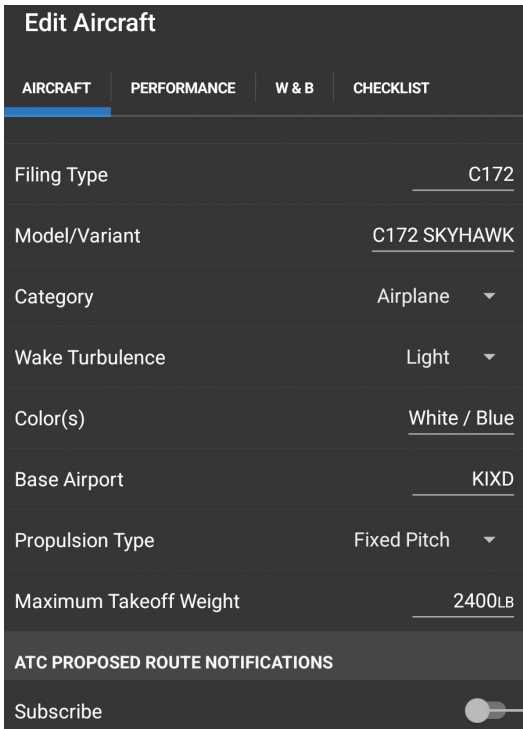

Toggle On/Off

Aircraft Information - ATC Proposed Route Notifications


USER CONTENT

The User Content Tab provides a quick and easy way to create and view stored user waypoints. User waypoints are synchronized across devices. When creating a new user waypoint, Garmin Pilot provides three ways to specify the precise location. If **Lat/Lon** is selected, Garmin Pilot can accept the coordinates in three formats: degrees in decimal (hdd.dddd); degrees and minutes in decimal (hddd.mm.mmmmm'); and degrees, minutes and seconds in decimal (hddd.mm'ss.s").

Rad/Dist can accept locations around a specified VOR station, using a radial and distance. **Rad/Rad** can accept locations as the intersection of two radials of two different VOR stations.

Creating/Editing a User Waypoint from User Content Tab:

- 1) From any page, touch **Home** >
- 2) Touch the **User Content** Tab.
- 3) Touch button to display the **New User Waypoint** dialog box.
Or: Touch a current User Waypoint in the list to edit.
- 4) Enter a name.
- 5) Define the waypoint location by Lat/Lon, Rad/Dist, or Rad/Rad.
- 6) Touch **Save** to save the waypoint, or **Cancel** to exit.
- 7) If the waypoint was saved, touch button to view on Google Maps.

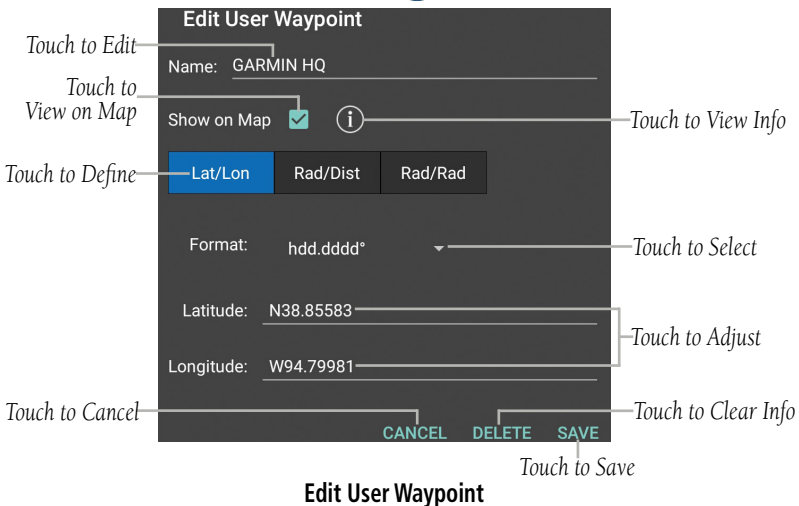


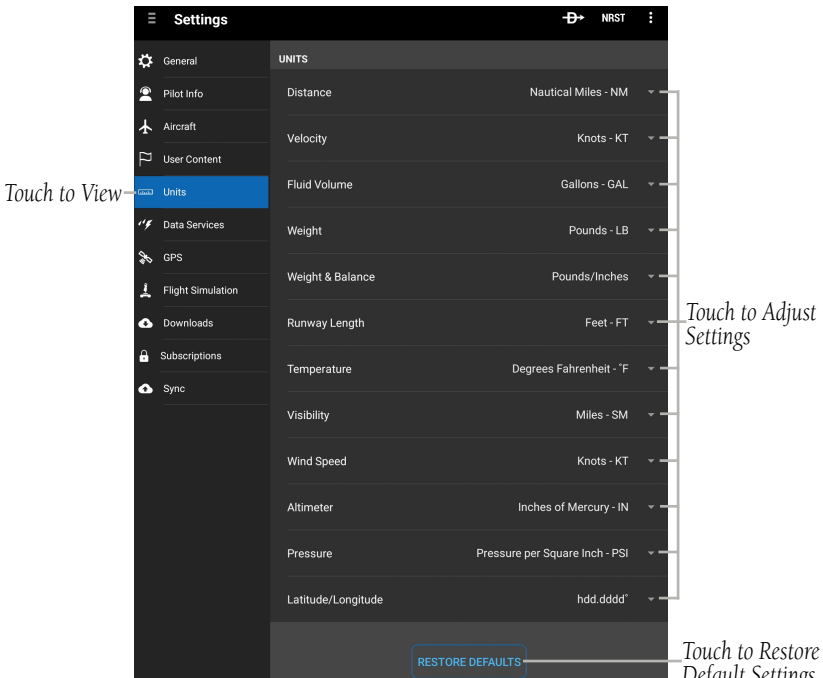
UNITS

The Units Tab can set the displayed units of measure for the following metrics:

- Distance
- Velocity
- Fluid Volume
- Weight
- Weight & Balance
- Runway Length
- Temperature
- Visibility
- Wind Speed
- Altimeter
- Pressure
- Latitude/Longitude

Adjusting Units Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Units** Tab.
- 3) Touch the unit of measurement to display options and adjust as desired.
- 4) If necessary, touch **Restore Defaults** to revert back to factory settings.





Settings - Units Tab



DATA SERVICES

The Data Services Tab provides information about the current source of weather data and the age of Garmin Weather Data items cached on the device. The age and status of weather data for FIS-B-sourced weather is viewable under the corresponding FIS-B Device tab. Weather data is available from three sources, Garmin Weather Data Services, FIS-B weather when connected to a compatible FIS-B device via a Connex link. Garmin Weather Data Services requires a data connection through Wi-Fi or cellular network. FIS-B weather requires additional hardware.




Adjusting Worldwide NOTAM Coverage Settings:


- 1) From any page, touch **Home** > .
- 2) Touch the **Data Services** Tab.
- 3) Touch  next to **Worldwide NOTAM Coverage** to toggle On/Off. This feature will be automatically enabled with the proper subscription updated and downloaded.

Adjusting Worldwide Winds Aloft Coverage Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Data Services** Tab.
- 3) Touch  next to **Worldwide Winds Aloft Coverage** to toggle On/Off. The winds aloft forecast data is based on the Global Forecast System (GFS) weather model and provides detailed coverage for the selected area. This feature will be automatically enabled with the proper subscription updated and downloaded.

Adjusting Baron Mobile Link Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Data Services** Tab.
- 3) Touch  next to **Connection Status** to toggle On/Off. Baron Mobile Link provides in-cockpit weather using your XM weather receiver and the Mobile Link Wi-Fi device.
- 4) If necessary, touch  to view info regarding the current Wi-Fi connection.

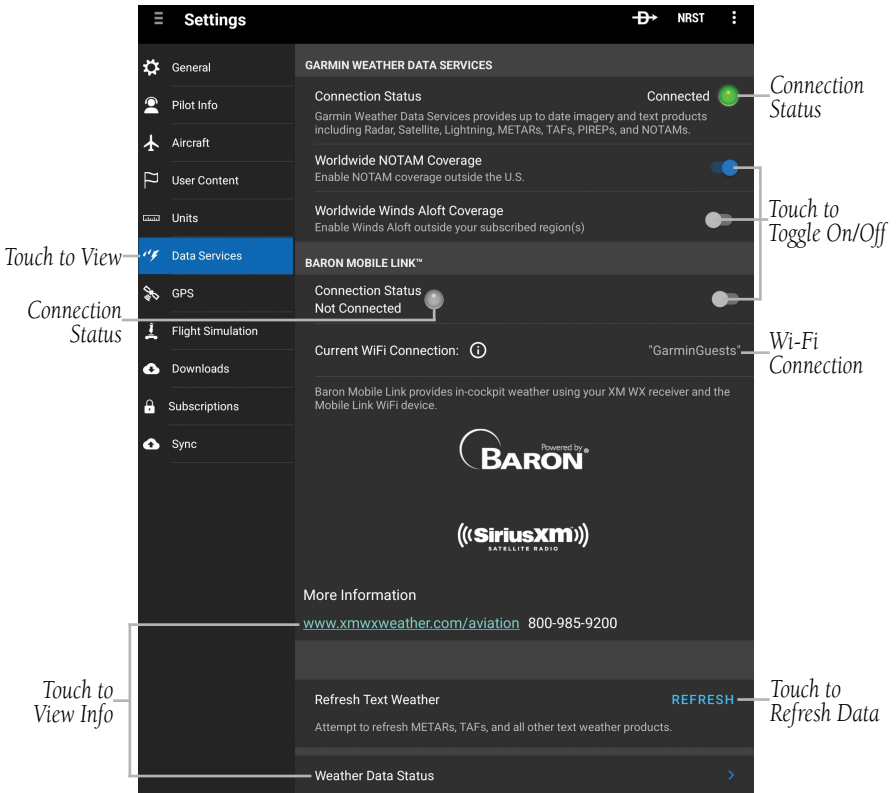


Settings - Data Services


GPS

Most Android devices are built with an internal GPS receiver. These may work fine in smaller aircraft but often a stronger, external GPS receiver is necessary. If an Android device does not include a GPS receiver, then a Garmin GLO™ portable GPS and GLONASS receiver or a Connex GPS and ADS-B receiver will be required to take advantage of the navigation features of Garmin Pilot. Third party GPS receiver applications are no longer recommended for Garmin Pilot to receive location data.

Adjusting GPS Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **GPS** Tab to view and adjust connected devices.

Current GPS Mode & Status

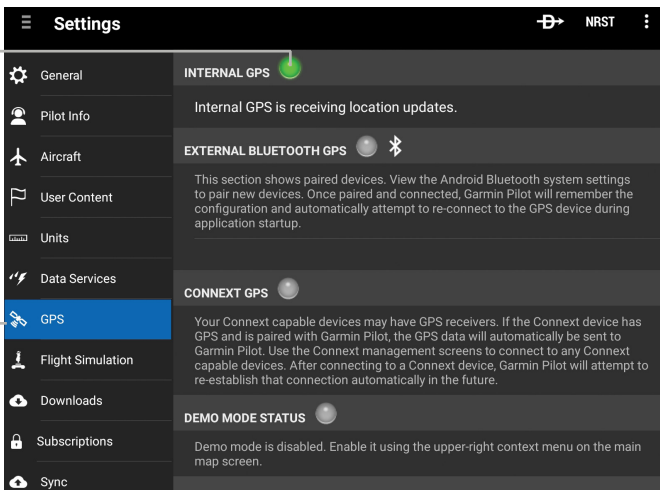

Touch to View

Settings - GPS Tab

FLIGHT SIMULATION INTEGRATION

The Flight Simulation Tab provides information about the status of a flight simulator associated with the current Garmin Pilot account and device. Garmin Pilot can connect to your X-Plane or Microsoft Flight Simulator 2020 (MSFS 2020) software through a Wi-Fi connection. To aid in User accessibility, detailed instructions on how to connect to the desired flight simulator are provided within Garmin Pilot.



NOTE: Garmin Pilot requires X-Plane version 10.30 or higher.




NOTE: The Android device running Garmin Pilot, and the computer with the flight simulator software, should be connected to the same Wi-Fi access point.

Connecting Garmin Pilot to a Flight Simulator:

- 1) From any page, touch **Home** >
- 2) Touch the **Flight Simulation** Tab.
- 3) Touch to toggle the **Use Simulator Data** On/Off.
- 4) Touch **How to connect with MSFS 2020**.

Or: Touch **How to connect with X-Plane**.

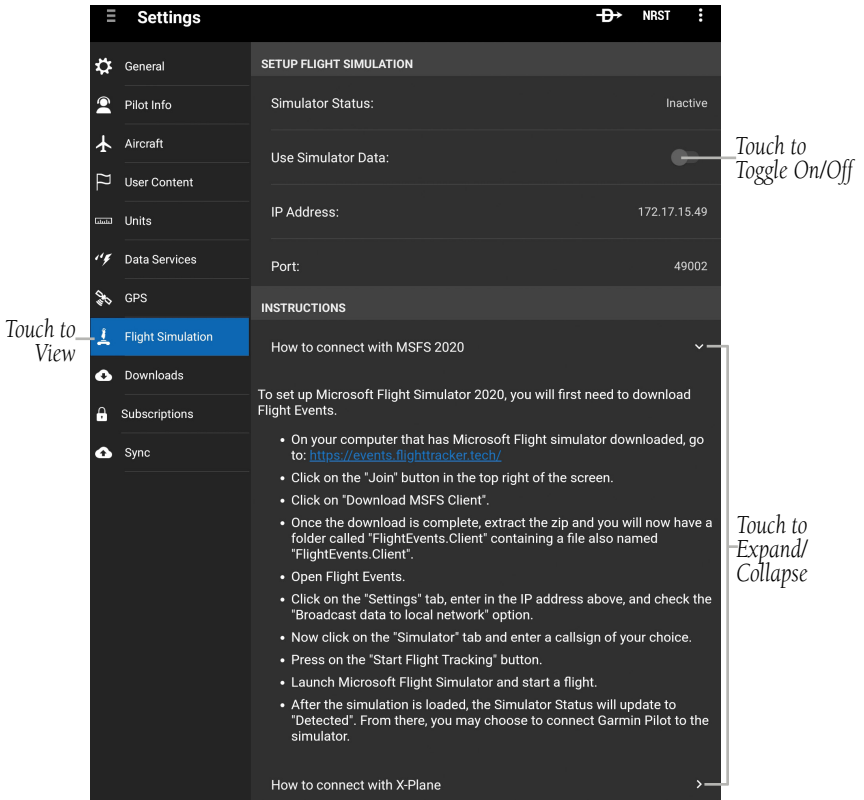

Settings - Flight Simulation - Microsoft Flight Simulator 2020

DOWNLOADS

The Downloads Tab allows the User to adjust settings for a multiple items. First, **Auto-Download Pilot Updates**, which automatically downloads file updates and next cycles as they become available. Second, **Allow Mobile Data**, which allows Mobile Data for large downloads when Wi-Fi is not available. Lastly, **Enable Download Map**, which provides a visual display of certain downloadable areas (if mapping information is available). If disabled, this will show all downloads in list form instead.



NOTE: More details related to the specifics of the Downloads portion of Garmin Pilot are presented in greater detail at later stages of this document.

Adjusting Auto-Download Pilot Updates Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Downloads** Tab.
- 3) Touch  next to **Auto-Download Pilot Updates** to toggle On/Off.






NOTE: When toggled 'On', this setting may require additional storage space on the device. Please ensure the device has the proper storage space available.

Adjusting Allow Mobile Data Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Downloads** Tab.
- 3) Touch  next to **Allow Mobile Data** to toggle On/Off.


Adjusting Enable Download Map Settings:

- 1) From any page, touch **Home** > .
- 2) Touch the **Downloads** Tab.
- 3) Touch  next to **Enable Download Map** to toggle On/Off.

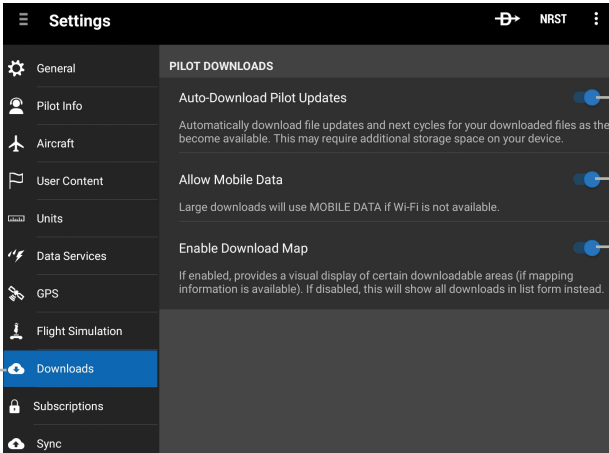

Settings - Downloads

SUBSCRIPTIONS

To manage your Garmin Pilot subscriptions, please touch **Home** >  > **Subscriptions**. Alternatively, this information is also on flygarmin.com. Please make sure to sign in with the same account information that you are using on your device. Many users will add a US Premium Subscription to their Garmin Pilot account, which, in addition to the standard features, adds:

- Geo-referenced FliteCharts
- Chart Overlays on Map
- Icing Forecasts
- Terrain Alerts
- Obstacle Alerts
- Synthetic Vision
- Safetaxi Airport Diagrams

Purchasing or renewing a subscription or add-on:

- 1) Visit flygarmin.com
- 2) Click on the **GARMIN PILOT** tab in the upper portion of the screen to view, assign, or purchase new Garmin Pilot subscriptions.
- 3) Enter the e-mail address and password for your Garmin Account to purchase the desired subscription(s) or add-on(s).



NOTE: With an active subscription, Garmin Pilot can be installed on up to three devices at the same time, typically a mobile phone and a tablet device.

Viewing/Adjusting Account:

- 1) From any page, touch **Home** > > **Subscriptions**.
- 2) When properly downloaded, green text will be displayed listing an Expiration Date.
- 3) If necessary, touch the **Manage Account** button to view current Garmin Pilot subscriptions and the device(s) using these items via flygarmin.com.

The screenshot shows the 'Settings - Subscriptions' screen. The left sidebar contains various settings categories, with 'Subscriptions' highlighted. The main content area is divided into several sections: ACCOUNT, ACTIVE, PURCHASE SUBSCRIPTIONS, and SUPPORT. Callouts point to specific elements: 'Touch to View' points to the 'Subscriptions' menu item; 'Touch to Change Account' points to the 'SIGN OUT' button; 'Subscription Status & Expiration Date' points to the expiration dates of active subscriptions; 'Touch to Manage Garmin Account' points to the 'Manage Devices' link; 'Touch to View Subscription Catalog' points to the regional subscription options; 'Touch to View Support Info' points to the 'Aviation Product Support' link; and 'Touch to Delete Account' points to the 'Delete Garmin Account' link.

Section	Item	Value / Action
ACCOUNT	General	tyler.pearce@garmin.com
		SIGN OUT
ACTIVE	U.S. Standard	Expires Mar 30, 2027
	Europe Standard	Expires Sep 9, 2024
	U.S. Premium Upgrade	Expires Mar 30, 2027
	Europe Premium Upgrade	Expires Sep 9, 2024
		Manage Devices
PURCHASE SUBSCRIPTIONS	United States	>
	Canada	>
	Europe	>
	Latin America	>
	Australia	>
	Africa	>
	Asia	>
	Global	>
SUPPORT	Aviation Product Support	>
	Delete Garmin Account	>

Settings - Subscriptions

SYNC

The Sync Tab provides information about the sync status of any data associated with the current device. The User can view the Last Attempt (Date & Time) and Status (Synced or Sync Failed) of various pieces of data such as Trips, Aircraft, Pilots, User Waypoints, Stored Flight Plans, Database Concierge, Logbook, Checklists, Performance, and Weight and Balance.

Viewing/Adjusting Sync Status:

- 1) From any page, touch **Home** >
- 2) Touch the **Sync** Tab.
- 3) Touch the **SYNC NOW** button next to the desired data category. If successful, "Synced" will be displayed in green text along with the Date (MM:DD) and Time (HH:MM). If unsuccessful, "Not Synced" will be displayed in red text along with the Date (MM:DD) and Time (HH:MM).
- 4) If necessary, touch the **Clear Local Sync Data** button.



NOTE: Touching the Clear Local Sync Data button will clear all local sync data and pull down data stored on the cloud. Only perform this action if there are issues with the sync data.

Category	Last Attempted	Status
Sync Trips	10/26 15:30 cdt	Synced
Sync Aircraft	10/26 15:30 cdt	Synced
Sync Pilots	10/26 15:30 cdt	Synced
Sync User Waypoints	10/26 15:30 cdt	Synced
Sync Stored Flight Plans	10/26 15:30 cdt	Synced
Sync Database Concierge	10/26 15:30 cdt	Synced
Sync Logbook	10/26 15:30 cdt	Synced
Sync Checklists	10/26 15:30 cdt	Synced
Sync Performance	10/26 15:30 cdt	Synced
Sync Weight And Balance	10/26 15:30 cdt	Synced

Touch to View (points to Sync tab)

Sync Status (points to Synced text)

Last Sync (points to Last Attempted text)

Touch to Sync Data (points to SYNC NOW button)

Touch to Clear Data (points to CLEAR LOCAL SYNC DATA button)


Settings - Sync

SYNTHETIC VISION (PREMIUM SUBSCRIPTION)



NOTE: Synthetic Vision requires either a Flight Stream 510/210, GDL 52/52R, GDL 39 3D, GTX 345, GTX 45R, G3X Touch, and a Premium subscription.

Synthetic Vision depicts a forward-looking attitude display of the topography immediately in front of the aircraft. The depicted imagery is derived from the aircraft attitude, heading, GPS three-dimensional position, and databases of terrain, obstacles, and other relevant features.

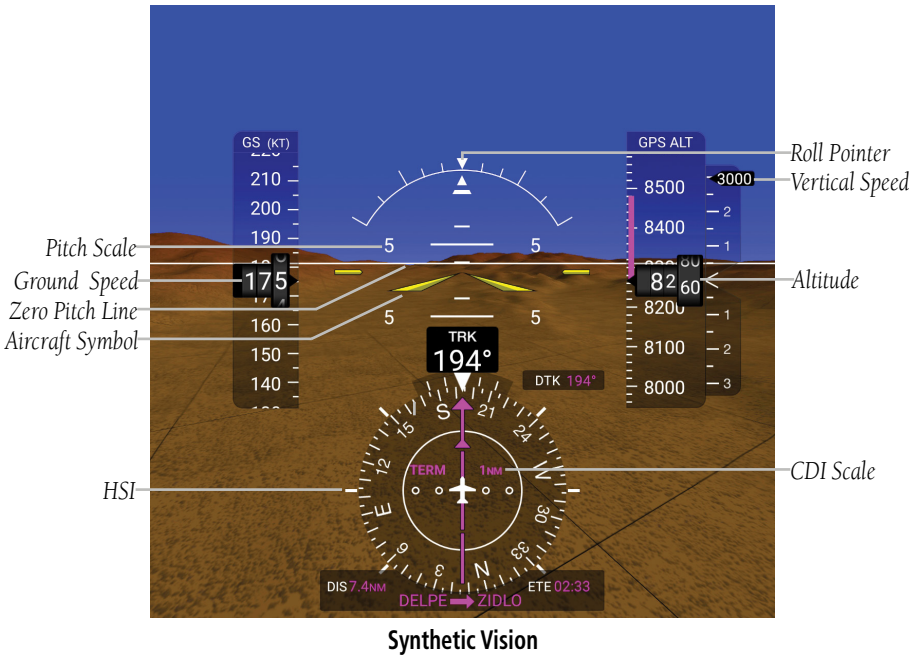

Synthetic Vision

The Synthetic Vision terrain display shows land contours (colors are consistent with those of the topographical map display), large water features, towers, and other obstacles over 200' AGL that are included in the obstacle database. Cultural features on the ground such as roads, highways, railroad tracks, cities, and state boundaries are not displayed.


Terrain is integrated within Synthetic Vision to provide visual alerts to indicate the presence of terrain and obstacle threats relevant to the projected flight path. Terrain alerts are displayed in red and yellow shading.

The terrain display is intended for situational awareness only. It may not provide the accuracy or fidelity on which to base decisions and plan maneuvers to avoid terrain or obstacles. Navigation must not be predicated solely upon the use of the terrain or obstacle data displayed by Synthetic Vision.




NOTE: 'No Attitude Information' is displayed in place of the Attitude Indicator when compatible devices are not configured.

SYNTHETIC VISION OPERATION

Synthetic Vision is activated by touching **Home** > .

Activating night mode:


- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Night Mode**.

ZERO PITCH LINE

The Zero Pitch Line is drawn completely across the display and represents the aircraft attitude with respect to the horizon. It may not align with the terrain horizon, particularly when the terrain is mountainous or when the aircraft is flown at high altitudes.


TRAFFIC (OPTIONAL)

When paired with a Flight Stream 510, Flight Stream 210, GDL 52/52R, GDL 39/GDL 39 3D, GTX 345, or GTX 45R Synthetic Vision displays ADS-B traffic information. Traffic symbols are displayed in their approximate locations. Traffic symbols are displayed in three dimensions, appearing larger as they are getting closer, and smaller when they are further away. Traffic within 250 feet laterally of the aircraft will not be displayed. Traffic symbols and coloring are consistent with that used for traffic displayed on the Map Page. If the traffic altitude is unknown, the traffic will not be displayed.

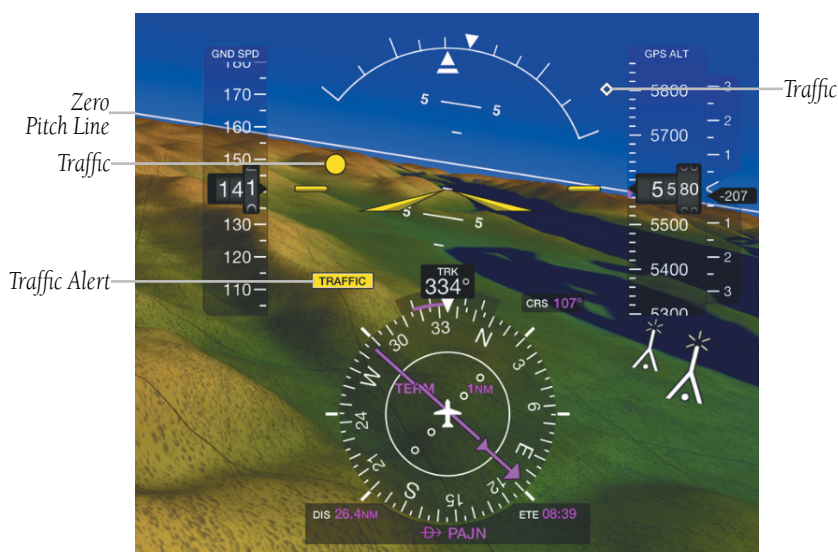

RUNWAYS


Runway data provides improved awareness of runway location with respect to the surrounding terrain. All runway thresholds are depicted at their respective elevations as defined in the database. In some situations, where threshold elevations differ significantly, crossing runways may appear to be layered. As the aircraft gets closer to the runway, more detail such as runway numbers and centerlines are displayed.

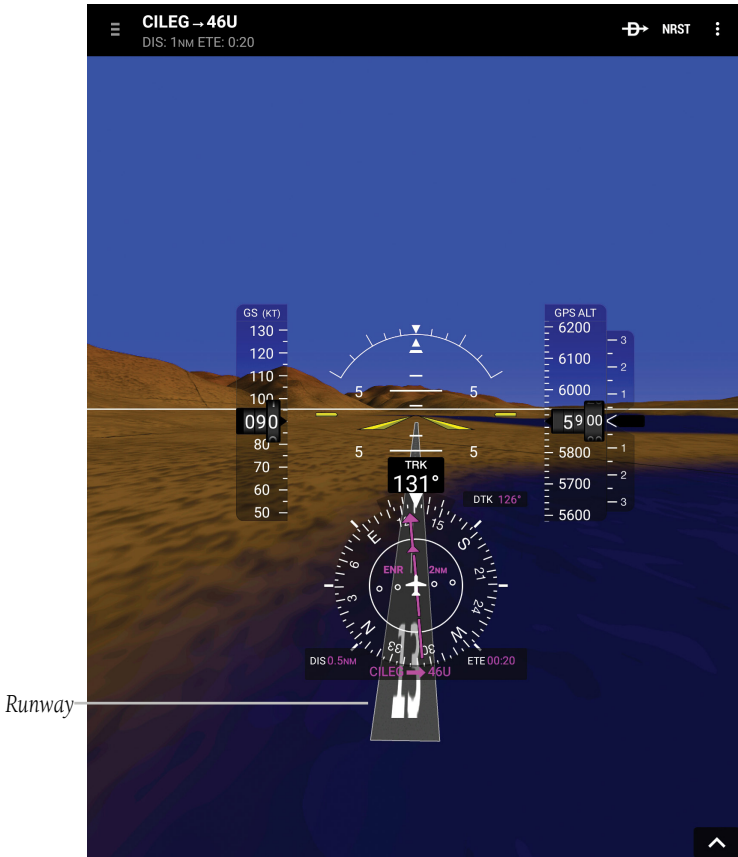

Synthetic Vision - Runway

SYNTHETIC VISION TERRAIN AND OBSTACLE DATA

Terrain alerting on the synthetic vision display corresponds to the red and yellow X symbols on the Map Page. In some instances, a terrain or obstacle alert may be issued with no conflict shading displayed on the synthetic vision. In these cases, the conflict is outside the Synthetic Vision field of view. Obstacles are represented on the synthetic vision display by standard two-dimensional tower symbols found on the Inset Map and Navigation Map. Unlike the Map Page, obstacles on the synthetic vision display do not change colors to warn of potential conflict with the aircraft's flight path until the obstacle is associated with an actual terrain alert. Obstacles greater than 1000 feet below the aircraft altitude are not shown.

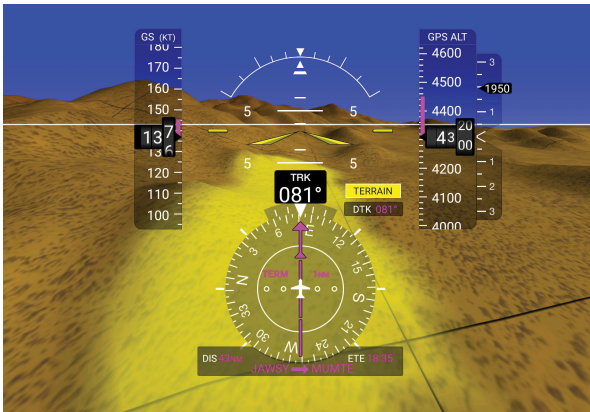

Synthetic Vision - Terrain - Caution



Synthetic Vision - Terrain - Warning

It is preferred to download the medium or high resolution terrain data when using Synthetic Vision. The 3D view may not draw correctly with low resolution terrain data.



Synthetic Vision - High Resolution Terrain Data




Synthetic Vision - Low Resolution Terrain Data

LOGBOOK



The Garmin Pilot Logbook feature allows the pilot to record pertinent flight information to include the following:

- Generate automatic logbook entries using GPS data collected during the flight.
- Add manual entries or modify auto-entries.
- Notification of auto-generated entries via red badges on Logbook icon.
- Smart Suggestions auto-populates previously used instructor and aircraft information.
- Track currency information including day and night take-offs, night duration, and cross country.
- Enter signed endorsements and generate reports.
- Optional automatic synchronization with the flyGarmin website.
- Adding photographs to logbook entries.

The Garmin Pilot logbook requires at least one aircraft entered in **Home** >  > **Aircraft** in order to create valid entries. If a logbook entry is created without any aircraft types, the Aircraft Type field will prompt to add an aircraft type.

FLIGHT LOG ENTRIES

Manually Adding Logbook Entry:

- 1) From any page, touch **Home** > .
- 2) If necessary, touch **Entries** at the top of the page.
- 3) Touch **Add Entry**. Garmin Pilot will create a new entry.
- 4) Touch the desired Flight Log entry field(s) to add flight data.
- 5) Under the Duration section, use the  buttons to copy the value from the Total field to another field.
- 6) If the flight included multiple approaches, touch **Add Approach** for each.
- 7) If the flight was dual given, the instructor enters the following fields:
Instructor Name, **Certificate Number**, and **Certificate Expiration**.
 - a) Touch **Add Signature** to sign the entry.
 - b) Touch **Save**.

The screenshot shows the Logbook app interface. At the top, there are tabs for Entries, Endorsements, Currency, Reports, and Settings. The main screen is divided into a list of flight entries on the left and a detailed view of a selected entry on the right. The selected entry is for June 16, 2022, from KFOE to KPHX. The detailed view includes a map showing the flight path, a 'PHOTOS' section with 'ADD PHOTO' and 'TAKE PHOTO' buttons, and a 'GENERAL' section with fields for Date, Pilot, and Multi-Pilot. A toggle switch for Multi-Pilot is also visible.

Annotations and their corresponding UI elements:



- Entries Tab:** Points to the 'Entries' tab at the top.
- Add New Entry:** Points to the 'ADD ENTRY' button.
- Lock Entry:** Points to the lock icon in the top right.
- Touch to Adjust:** Points to the 'CONFIGURE FIELDS' button.
- Touch to Share:** Points to the share icon.
- Touch to View on Map:** Points to the 'SHOW ON MAP' button.
- Touch to View Flight Log Entries:** Points to the list of flight entries on the left.
- Touch to Add Photo:** Points to the 'ADD PHOTO' button.
- Touch to Take Photo:** Points to the 'TAKE PHOTO' button.
- Touch to Modify:** Points to the 'Date' field in the 'GENERAL' section.
- Toggle On/Off:** Points to the Multi-Pilot toggle switch.

Logbook Entry - Main

Enabling Automatic Flight Log Entries:




NOTE: The terrain download is recommended for optimum performance of Automatic Flight Logging.

- 1) From any page, touch **Home** >  > **Settings**.
- 2) Scroll down to the **Automatic Flight Log Setup** fields.
- 3) Touch  next to **Enable Auto Flight Logging**.
- 4) If desired, enter a value for any of the following **Automatic Flight Log Setup** fields.

<ul style="list-style-type: none"> • Enable Flight Tracking • Flying Speed Threshold 	<ul style="list-style-type: none"> • Taxi Time Added • Merge Legs Into Single Entry • Max Time Between Legs To Merge 	<ul style="list-style-type: none"> • Include Heliports • Manually Accept Automatic Logs
<ul style="list-style-type: none"> • Flying Altitude (AGL) Threshold 	<ul style="list-style-type: none"> • Max Time Between Legs To Merge 	
<ul style="list-style-type: none"> • Vertical Speed Threshold 	<ul style="list-style-type: none"> • Include Seaplane Bases 	

Automatic Flight Log Setup Fields

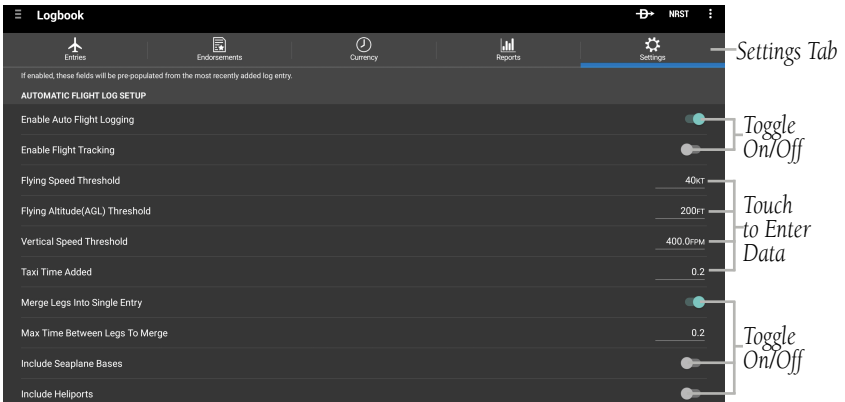

Logbook - Automatic Flight Log Setup

Accepting Automatic Flight Log Entries:

- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch **Auto-Gen Flights**.
Optionally, touch Accept All to add all automatic entries to the Logbook.
- 3) Touch a flight log entry.
- 4) Touch **Accept** to add the entry to the logbook.

Deleting Automatic Flight Log Entries:


- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch **Auto-Gen Flights**.
- 3) Touch a flight log entry.
- 4) Touch **Delete**.

Modifying Flight Log Entry:

- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch the desired entry to modify.
- 3) Modify the desired Flight Log entry fields.

Deleting Flight Log Entry:

- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch and hold the desired entry to delete.
- 3) If desired, touch additional entries to delete.
- 4) Touch at the top of the screen to delete or touch to cancel.

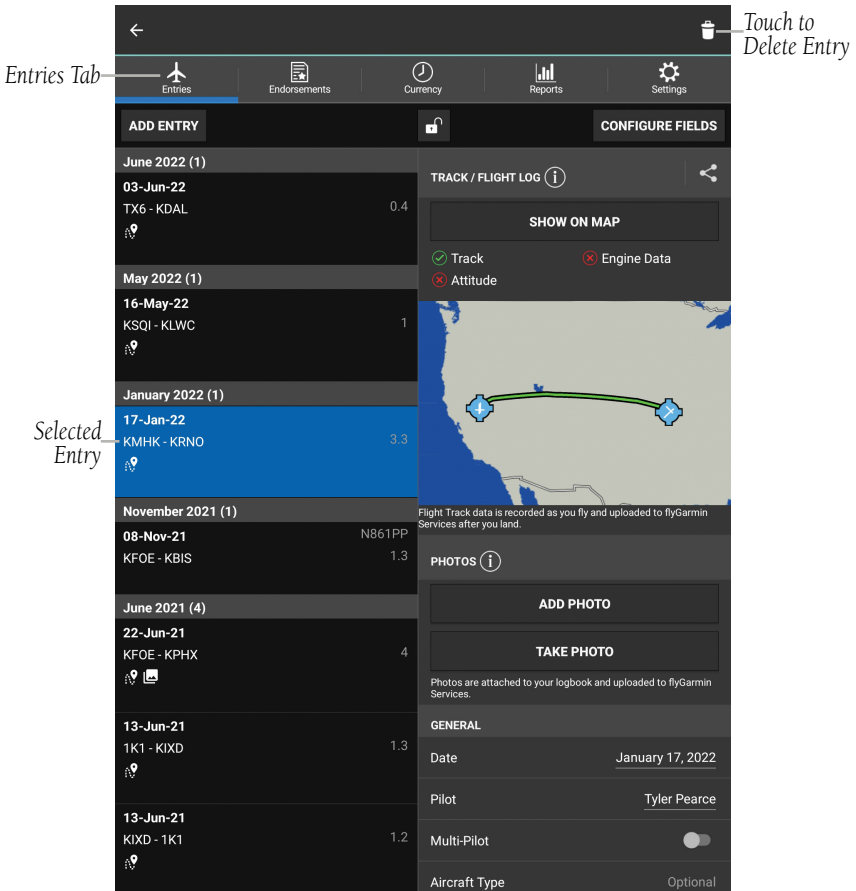


Logbook Entries - Delete

FLIGHT LOG FIELDS

The order of the Flight Log Fields can be arranged, and each flight log field can be configured ON or Off.

Configuring logbook fields:

- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch the desired entry to configure or touch **Add Entry** to create a new entry.
- 3) Touch **Configure Fields**.
- 4) Touch and drag to arrange the fields in the desired order.
- 5) Touch next to desired fields to hide or display specific information.
- 6) Touch **Done**.

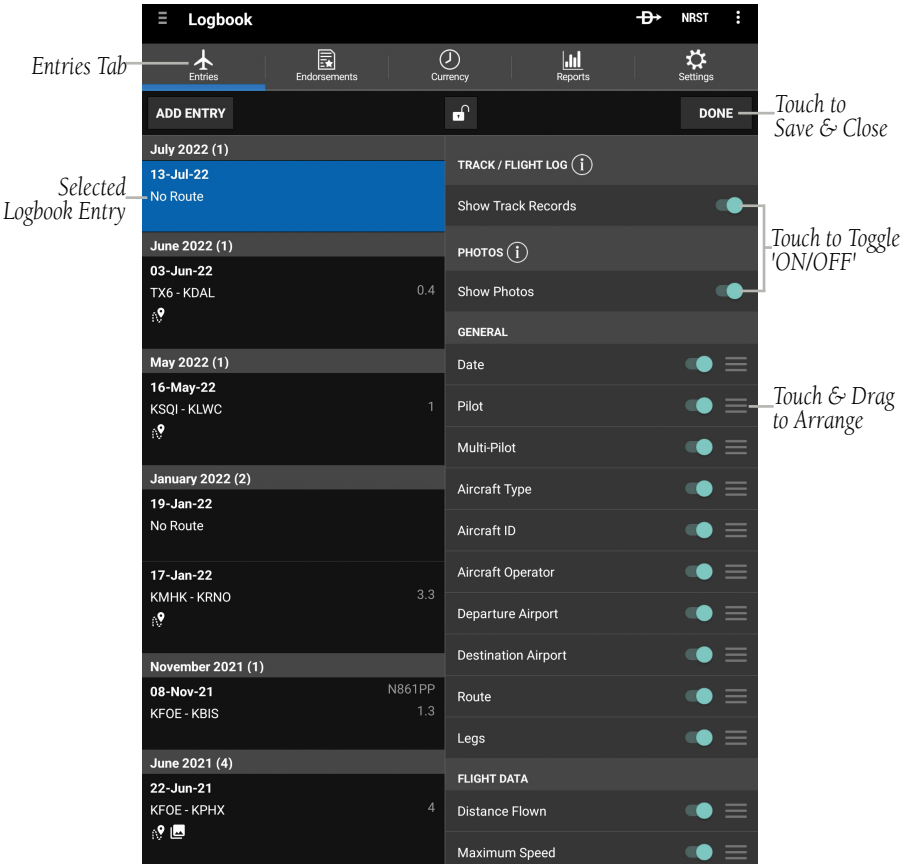


Logbook - Add Entry - Configure Fields


LOGBOOK PHOTOS

The Logbook Photos feature allows the pilot to attach unlimited photos to logbook flight entries.

- Logbook photos may be taken while in flight using a device's camera, and are automatically added to the provisional logbook entry.
- Logbook photos can be attached to existing logbook entries from the device's photo library or flyGarmin.
- Logbook photos are securely stored within flyGarmin and can be synced across all devices.

Adding photos to a logbook entry:

- 1) From any page, touch **Home** > .
- 2) Touch **Add Entry** or an existing logbook entry and select the **Add Photo** icon.
- 3) Take a photo from the device, add one from the device's photo library, or add a photo from the Virb photo library.

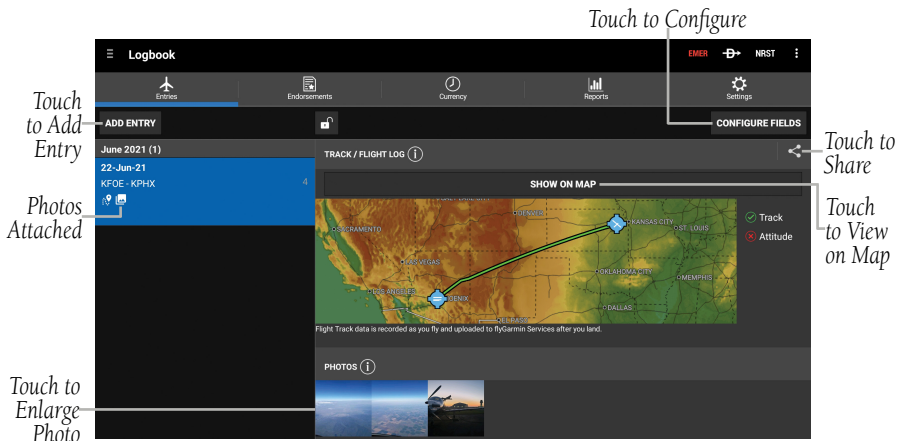


Logbook Photos

LOGBOOK AUTO-LOGGING

The Logbook Auto-Logging view on the logbook entries tab captures and displays real-time flight data including:

- Duration of flight
- Time of departure
- Distance flown
- Average speed
- Maximum altitude
- Maximum speed

Logbook Auto-Logging also supports taking photos while in flight or attaching images from the device's library to the logbook entry.

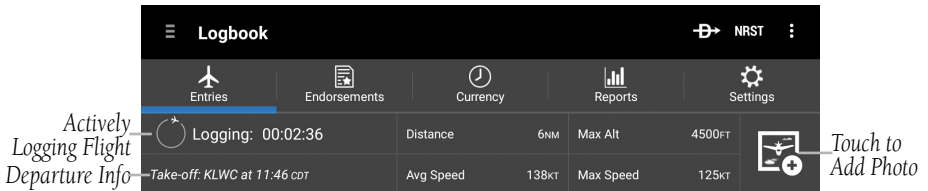


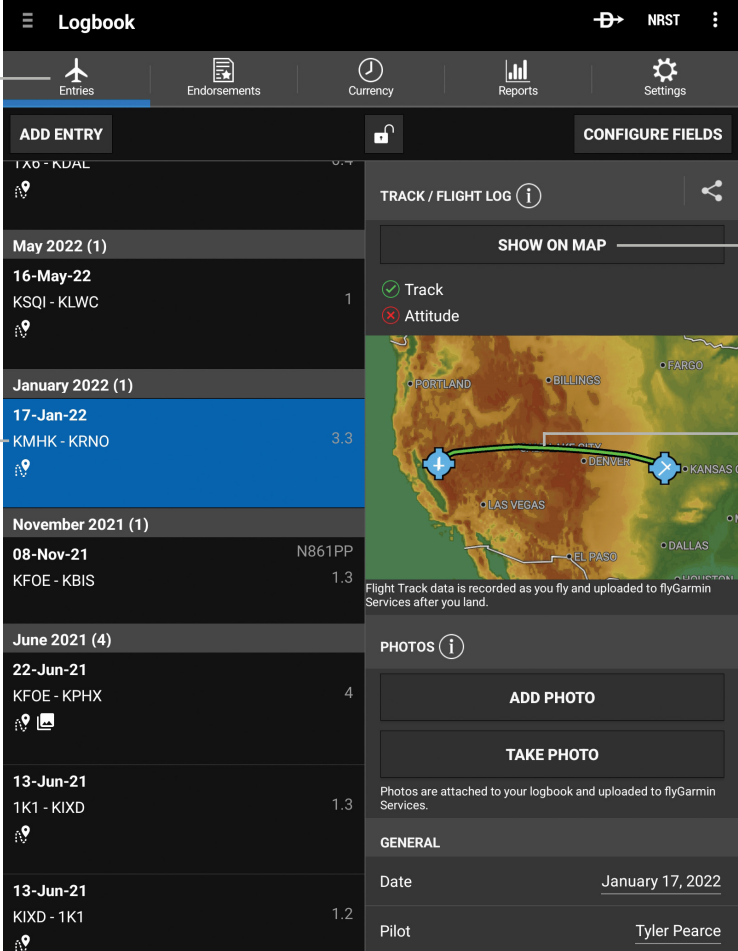
Logbook Auto-Logging

LOGBOOK TRACKS

Garmin Pilot automatically creates a track of a flight and attaches the file to the entry in the logbook.

Viewing logbook tracks:

- 1) From any page, touch **Home** > .
- 2) Touch **Show on Map** on a selected logbook entry.



The screenshot shows the 'Logbook' screen in the Garmin Pilot app. At the top, there are navigation icons for 'Entries', 'Endorsements', 'Currency', 'Reports', and 'Settings'. Below this is a list of flight entries grouped by month. The entry for '17-Jan-22' (KMHK - KRNO) is selected and highlighted in blue. To the right of the list, a detailed view of the selected entry is shown, including a map with a green flight track connecting two points. Below the map are sections for 'PHOTOS' and 'GENERAL' information, such as the date and pilot's name.


Annotations:

- Entries Tab:** Points to the 'Entries' tab at the top of the app.
- Selected Entry:** Points to the highlighted '17-Jan-22' entry in the list.
- Touch to View:** Points to the 'SHOW ON MAP' button in the detailed view.
- Flight Track:** Points to the green line on the map representing the flight path.

Logbook Entries - Track/Flight Log


Adding Logbook Widget From Split-Screen Mode:

- 1) From any page, touch **Home** > > > **Widgets**.
- 2) Touch **Add Widget** and select **Logbook Tracks**.

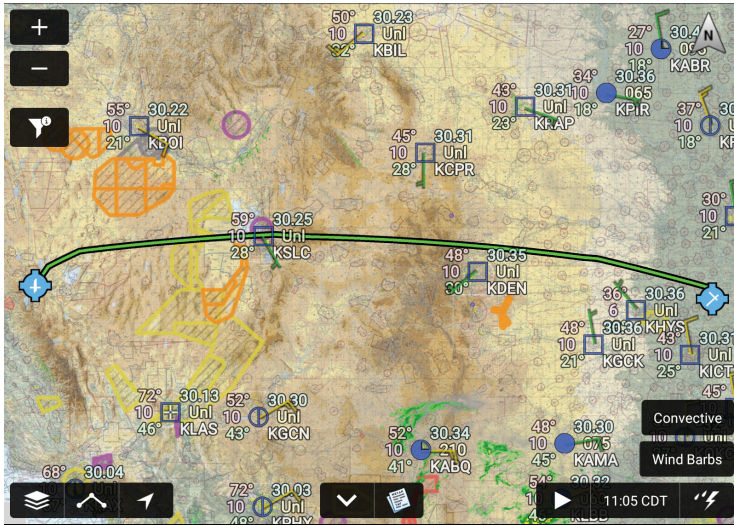

Touch to Adjust

Touch to View/Hide

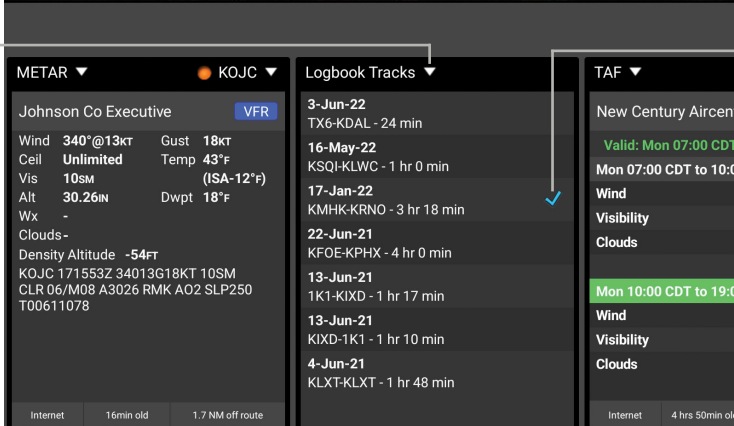

Split-Screen - Widgets - Logbook Tracks

Hiding Logbook Tracks From the Map:


- 1) From any page, touch **Home** > .
- 2) Long press on the desired area in the Map Pane until the Radial Menu appears.
- 3) Select the **Track** icon from the Radial Menu.
- 4) Touch the displayed track from the list to remove the track on the map.

ENDORSEMENTS

Viewing Endorsements:

- 1) From any page, touch **Home** > > **Endorsements**.
- 2) Touch the desired endorsement.

Endorsements Tab

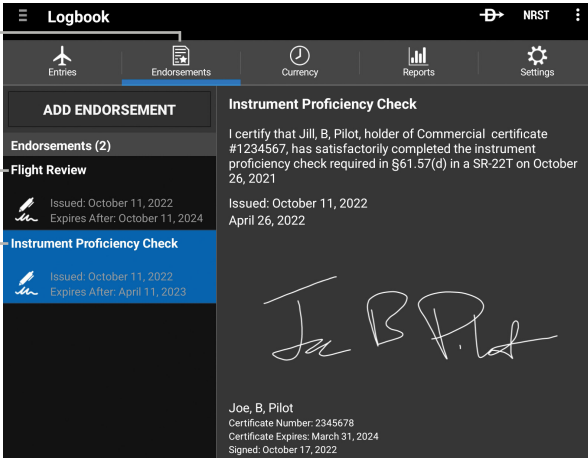


Touch to View

Current Selection

Logbook - Endorsements - IPC & Flight Review

Adding Endorsements:

- 1) From any page, touch **Home** > > **Endorsements**.
- 2) Touch **Add Endorsement**.
- 3) Touch **Type**.
- 4) Touch the desired Type from the list.
- 5) The pilot enters the following Endorsement Fields: **First Name, MI, Last Name; Gender; Pilot Certificate; Certificate Number; Make and Model**.
- 6) Touch **Title**.
- 7) Enter a title for the endorsement and touch **Done**.
- 8) If desired, enter the **FAA Category**, date **Issued**, and date **Expires**.
- 9) The instructor enters the following Instructor fields: **Instructor Name, Certificate Number, and Certificate Expiration**.
 - a) Touch **Add Signature** to sign the entry.
 - b) Touch **Save**.

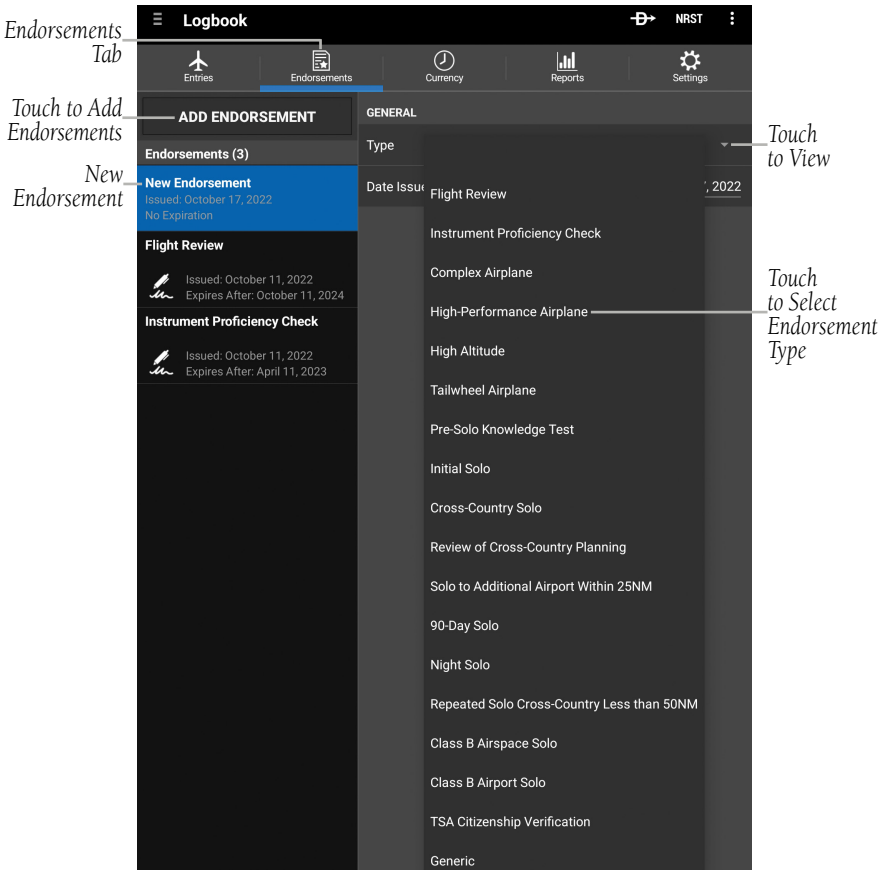


Logbook - Endorsements - Add New - Select Type

Deleting an Endorsement:

- 1) From any page, touch **Home** > > **Entries**.
- 2) Touch and hold the desired endorsement to delete.
- 3) If desired, touch additional endorsements to delete.
- 4) Touch at the top of the screen to delete or touch to cancel.

CURRENCY


To View Currencies, touch **Home** > > **Currency**. When the currency type has been met, is displayed as well as the date last met, expiration date, and days remaining. When the currency type has not been met is displayed.

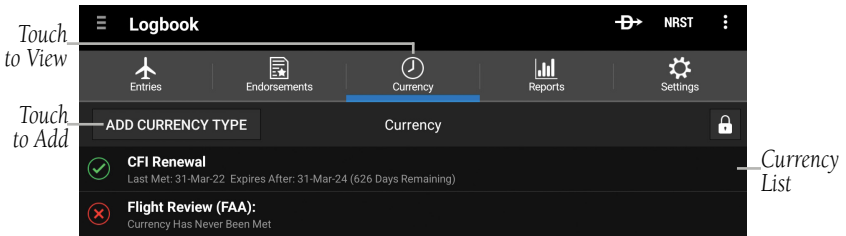

Logbook - Currency




Adding a currency type:

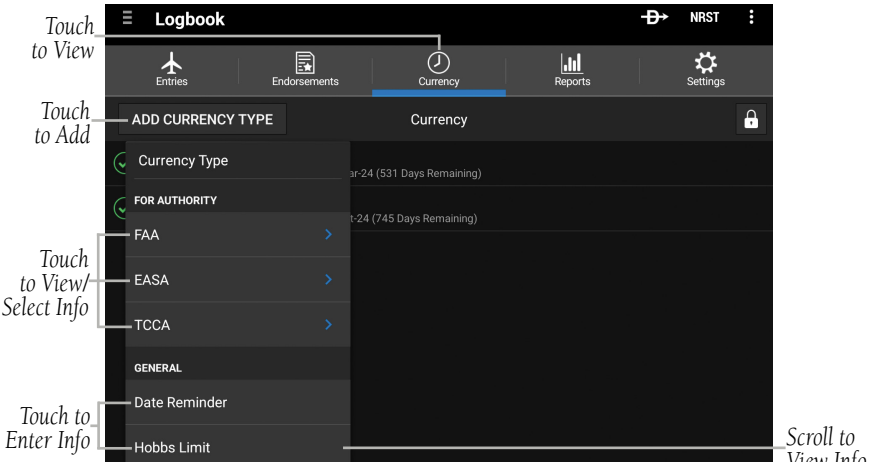- 1) From any page, touch **Home** > > **Currency**.
- 2) Touch **Add Currency Type**.
- 3) Touch the desired Currency Type from the list.



Logbook - Currency - Add Type - Menu

Deleting a currency type:

- 1) From any page, touch **Home** >  > **Currency**.
- 2) Touch and hold the desired currency to delete.
- 3) If desired, touch additional currencies to delete.
- 4) Touch  at the top of the screen to delete or touch  to cancel.

REPORTS

The Reports tab shows categorized summaries of logbook entries. These summaries are broadly divided into Visited Airports, Entry Fields, Aircraft Types and Characteristics. All four categories can further be organized by time frame, using the lookback options on the left side of the screen. The Reports tab also supports a selectable custom date range. To change the custom date range, touch  to display the Custom Dates window.

The Visited Airports category shows the total number of visits to specific airports from a recorded flight log data. Visited Airports data can be viewed as a List or on the Map. List View displays data in descending order, with the most frequently visited airport at the top, along with the airport I.D., and the total number of visits. Touch the desired Airport Name to view flight details, such as Date, Departure, and Duration.

Viewing Visited Airports - List View:

- 1) From any page, touch **Home** > > **Reports** > **Visited Airports**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Touch in the bottom, right corner of the screen to display the List View.
- 4) Touch the desired Airport Name to view details.

Selected Date Range

Reports Tab

Touch to View Info

Touch to Filter by Time Frame

Touch to View Info


Touch to View on Map

Lookback Period	AIRPORT NAME	IDENTIFIER	VISITS
All Dates	Bismarck Mun	KBIS	1
Custom Dates	Lawrence Regl	KLWC	1
Last 7 Days	Lees Summit Mun	KLXT	1
Last 28 Days	Lloyd Stearman Field	1K1	1
Last 30 Days	New Century Aircenter	KIXD	1
Last 60 Days	Ottawa Mun	KOWI	1
Last 90 Days	Phoenix Sky Harbor Intl	KPHX	1
Last 6 Months	Reno Tahoe Intl	KRNO	1
Last Year			
Calendar Months			
6 Calendar Months			
12 Calendar Months			
Monthly Totals			
October 2022			
September 2022			
August 2022			
July 2022			
June 2022			
May 2022			
April 2022			

Logbook - Reports - Visited Airports - List View

Viewing Visited Airports - Map View:

- 1) From any page, touch **Home** > > **Reports** > **Visited Airports**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Touch in the bottom, right corner of the screen to display the Map View.
- 4) Touch the desired Airport I.D. to view details.

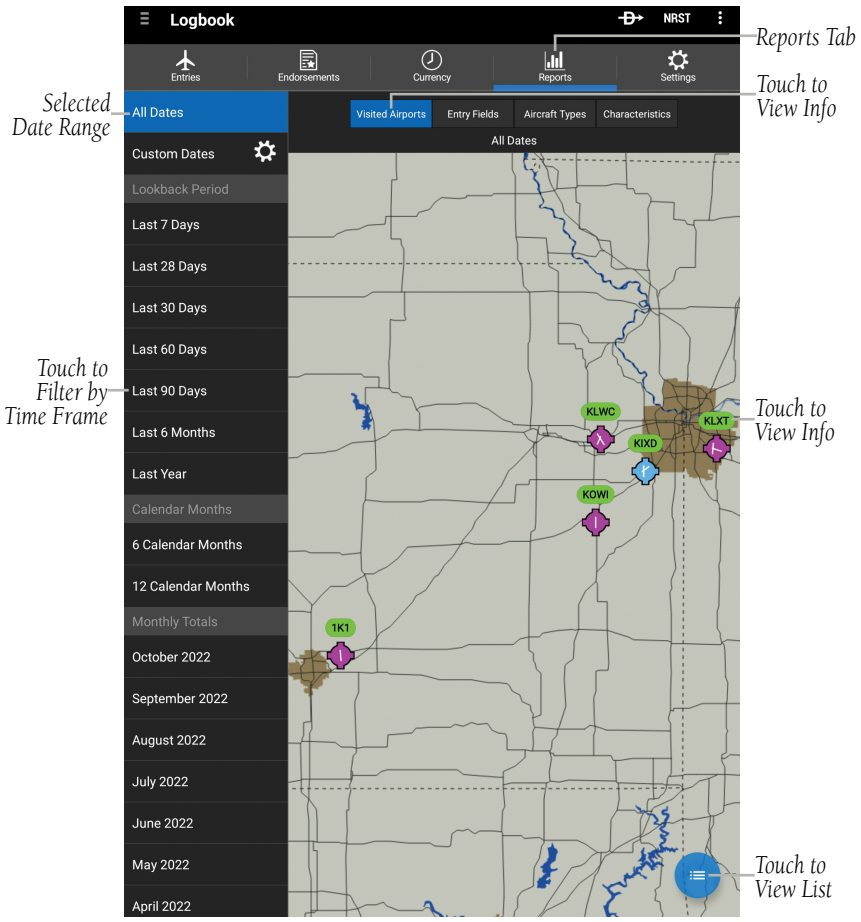


Logbook - Reports - Visited Airports - Map View

The Entry Fields category shows totals of numeric flight log data. This category also includes an Aircraft Types field for narrowing flight log data to aircraft types specified in Logbook Settings. This Aircraft Types field is different than the Aircraft Types category.

Viewing Entry Fields:

- 1) From any page, touch **Home** > > **Reports** > **Entry Fields**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Touch the **All Types** field in the upper right corner and adjust to filter data as desired.
- 4) Scroll down to view logbook entries categorized by Summary, Flight Data, Flight Time, General Operations, and IFR Operations.

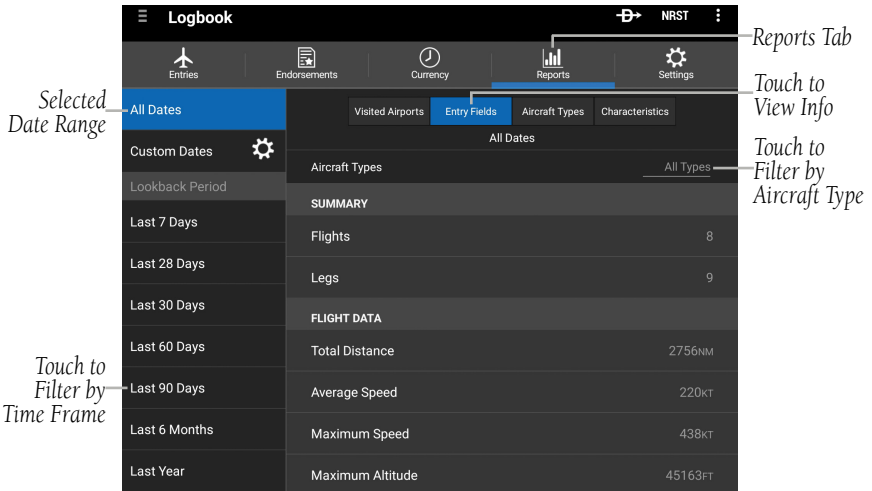

Logbook - Reports - Entry Fields

The Aircraft Types category displays total data specific to aircraft types instead of flights.

Viewing Aircraft Types:

- 1) From any page, touch **Home** > > **Reports** > **Aircraft Types**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Scroll down to view logbook entries categorized by Aircraft Type(s) and Aircraft Identifier(s).

All Dates			
AIRCRAFT TYPE(3)	FLIGHTS	HOURS	
CESSNA 172 Cessna	2	0.9	
CESSNA 206H Cessna	1	4.8	
PC12 Pilatus	6	15.4	
AIRCRAFT IDENTIFIER(3)			
	FLIGHTS	HOURS	
N227TW Cessna CESSNA 172	2	0.9	
N3518B Cessna CESSNA 206H	1	4.8	
N861PP Pilatus PC12	6	15.4	

Logbook - Reports - Aircraft Types

The Characteristics category displays flight log data pertaining to aircraft characteristics, regardless of aircraft type or flights.

Viewing Characteristics:

- 1) From any page, touch **Home** > > **Reports** > **Characteristics**.
- 2) Select the desired Date Range on the lefthand side of the screen.
- 3) Scroll down to view logbook entries categorized by General Characteristics (Retractable Landing Gear, Complex, High Performance, etc.), Engine Type, Aircraft Category, Aircraft Class, and Aircraft Manufacturer.

GENERAL CHARACTERISTICS	FLIGHTS	HOURS
Retractable Landing Gear	6	15.4
Complex	6	15.4
High Performance	7	20.2
Simulator	0	0.0
Pressurized	6	15.4
Tailwheel	0	0.0
Military	0	0.0


Logbook - Reports - Characteristics

LOGBOOK SETTINGS

GENERAL SETTINGS

The Settings tab provides options to fine tune Logbook functions. **Sync Logbook to flyGarmin** will enable or disable storing logbook entries to Garmin's web service. By default, the Logbook shows time values in decimal hours. Touch **Duration Field Display Format** to change time values to hours + minutes. **Logbook Display Order** can be used to reverse the order of logbook entries in the other logbook tabs.


Logbook Settings can be accessed by touching > **Settings**.

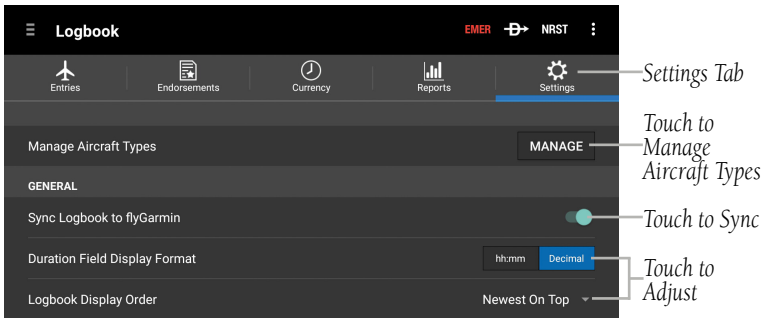

Logbook Settings - General

MANAGING AIRCRAFT TYPES

Touch **Manage** to add, delete and edit aircraft information used in Logbook entries. Aircraft type information here is used in the Entries tab, providing options in the Type fields for new flight log entries. This aircraft information is also separate from the aircraft information found in **Home** > > **Aircraft**, which is used for flight planning.

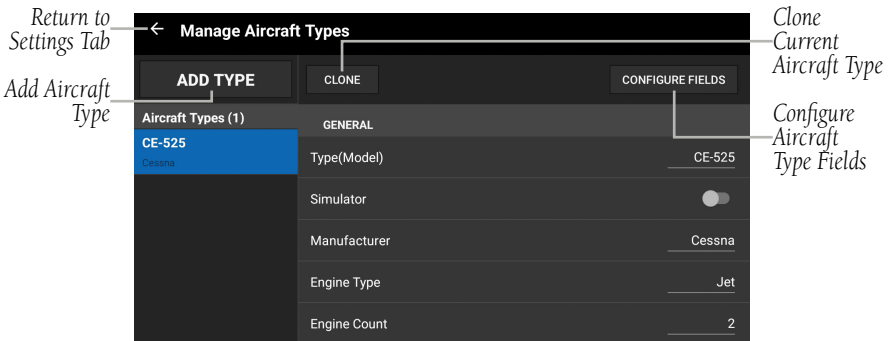

Logbook Settings - Add Aircraft Type

Adding Aircraft Type:

- 1) From any page, touch **Home** > > **Settings** > **Manage**.
- 2) Touch **Add Aircraft Type**. Garmin Pilot will create a new aircraft type entry.
- 3) Touch the desired Aircraft Type entry field(s) to add an entry.

Modifying Aircraft Type:

- 1) From any page, touch **Home** > > **Settings** > **Manage**.
- 2) Touch the desired Aircraft Type to modify.
- 3) Touch the desired Aircraft Type entry field(s) to modify.

Copying Aircraft Type:


- 1) From any page, touch **Home** > > **Settings** > **Manage**.
- 2) Touch the desired aircraft type to copy > **Clone**.

Deleting Aircraft Type:

- 1) From any page, touch **Home** > > **Settings** > **Manage**.
- 2) Touch and hold the desired aircraft type to delete.
- 3) Touch at the top of the screen to delete or touch to cancel.

Configuring Aircraft Type Fields:

- 1) From any page, touch **Home** > > **Settings** > **Manage**.
- 2) Touch any aircraft type
- 3) Touch **Configure Fields**.
- 4) Touch and drag to arrange the fields in the desired order.
- 5) Touch and drag the switch ON/OFF to display the desired fields > **Done**.

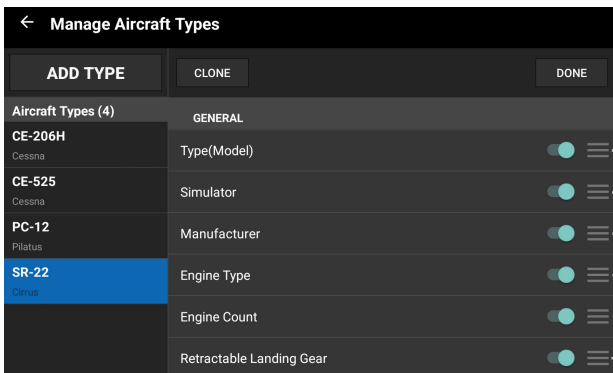

Touch & Arrange Type Fields

Logbook Settings - Configure Aircraft Type Fields

PILOT INFORMATION


When a new flight log entry or endorsement is created, the Pilot, Gender, Pilot Certificate, and Pilot Certificate Number fields will automatically populate with information specified here. This applies to both manual and automatic flight log entries.

Pilot Information Settings can be accessed by touching > **Settings**.

AUTOFILL FROM TOTAL DURATION

These options will automatically copy the Total Duration value when a new flight log entry is created. This applies to both manual and automatic flight log entries.


Logbook Autofill From Total Duration Settings can be accessed by touching > **Settings**. Scroll down to adjust as necessary.

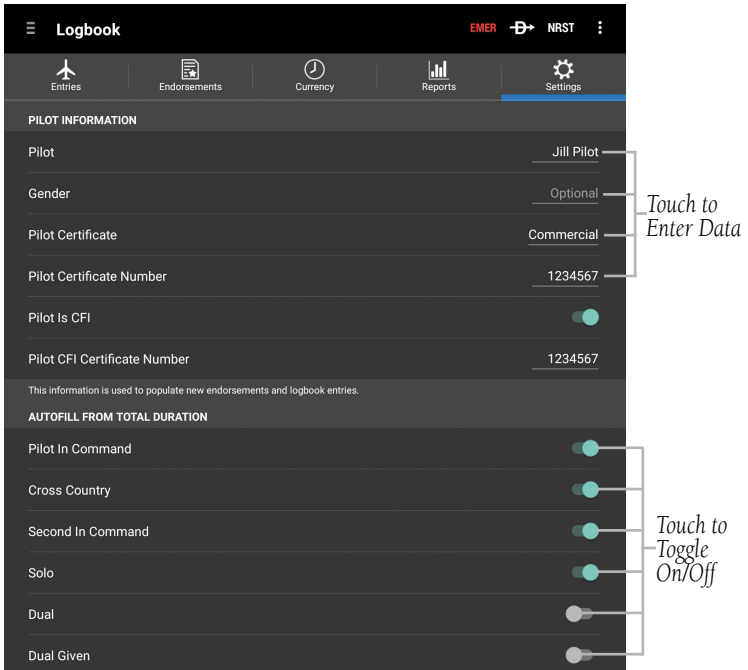

Logbook Settings - Pilot Info & Autofill

CARRYOVER FROM LAST ENTRY

When a new flight log entry is created, Garmin Pilot looks at the previous flight log and fills in these fields based on the previous entry.

Logbook Carryover From Last Entry Settings can be accessed by touching  > **Settings**. Scroll down to adjust as necessary.




Logbook Settings - Carryover From Last Entry


AUTOMATIC FLIGHT LOG SETUP



NOTE: *The terrain download is recommended for optimum performance of Automatic Flight Logging.*

When **Automatic Flight Log** is enabled, Garmin Pilot detects takeoff and landing to automatically create a flight log entry.

Logbook Automatic Flight Log Setup Settings can be accessed by touching  > **Settings**. Scroll down to adjust as necessary. The settings below allow the pilot to configure the behavior of the flight log function.

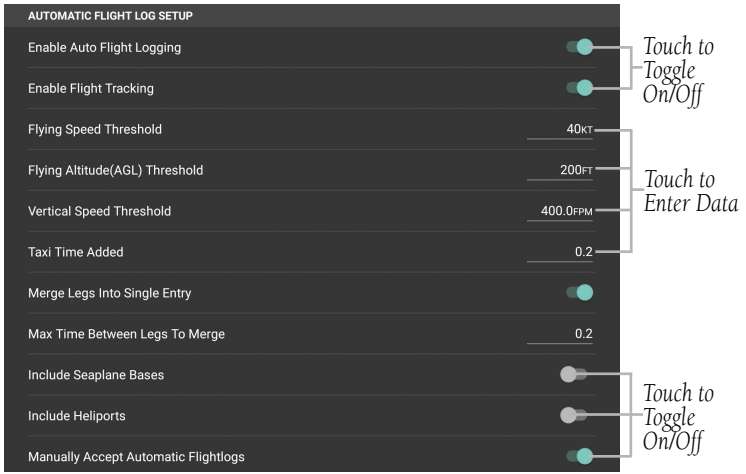

Logbook Settings - Automatic Flight Log Setup



Enable Auto Flight Logging	Allows Garmin Pilot to automatically create flight logs.
Enable Flight Tracking	Allows Garmin Pilot to automatically create a flight track.
Flying Speed Threshold	Used to optimize the detection of takeoff when terrain is not available. If terrain has been downloaded then it is used to determine when the aircraft is flying.
Flying Altitude (AGL) Threshold	
Vertical Speed Threshold	
Taxi Time Added	Automatically added to the total duration to account for taxi time on the ground. Defaults to zero.
Merge Legs Into Single Entry	These parameters control if two flights will be automatically merged into one logbook entry.
Max Time Between Legs To Merge	
Include Seaplane Bases	Enable these options if operating out of a seaplane base or heliport.
Include Heliports	
Manually Accept Automatic Flightlogs	When enabled, the user must manually review and accept all auto-generated flight log entries.

Automatic Flight Log Setup Fields

WEIGHT AND BALANCE

Weight and balance is calculated within Garmin Pilot to determine if the aircraft is properly loaded within CG limits. Garmin Pilot syncs the current flight plan to incorporate initial fuel and winds aloft data into the weight and balance calculations. Aircraft performance data may be imported from Garmin's aircraft library or manually entered from the Pilot Operating Handbook (POH), into Garmin Pilot.

Entering Weight and Balance Data - Fixed Wing:



- 1) After adding an aircraft and performance data in , touch **Home** > .
- 2) Touch the N-number to select the desired aircraft.
- 3) Enter the weights for each station.
- 4) Touch the 'Fuel Load' field and use the weight slider or touch **Maximum Fuel, 30 Minute Reserve, 45 Minute Reserve, or 60 Minute Reserve.**



is displayed when the aircraft is loaded within the CG envelope.



is displayed when the aircraft is loaded out of the CG envelope.

SUMMARY	
N599MR	
Found 1 warning(s)	
 Takeoff weight is too high	} Out of CG Envelope
Takeoff Weight	
Landing Weight	3145.9LB
Fuel Load	78.5GAL → 25.2GAL

Weight and Balance - CG Limits Exceeded

Weight & Balance NRST

Summary

- N599MR ✔ *Within CG Envelope*
- Loaded Within Envelope
- Takeoff Weight: 3248.5LB
- Landing Weight: 2937.0LB
- Fuel Load: 92GAL → 38.7GAL *Touch to View/Adjust*

AIRCRAFT

- Aircraft: N599MR
- Model: CIRRUS SR22 G3

FORWARD SEAT

- TP: 190LB *Touch to Adjust Position*
- CP: 200LB *Slide to Adjust Weight*
- + Add Item *Touch to Add Item*

AFT SEAT

- + Add Item *Touch to Add Item*

BAGGAGE (MAX 130LB)

- Baggage Weight: 30LB *Touch to Remove Item*
- + Add Item *Touch to Add Item*

USABLE FUEL LOAD

- Fuel Tanks: 92GAL *Slide to Adjust Quantity*
- Quick Set Fuel *Touch to View/Adjust*

Chart



- Takeoff (Blue dot)
- Landing (Purple dot)
- Zero Fuel (Orange dot)
- CG ENVELOPE (Selected)
- MOMENT ENVELOPE
- STATION CHART
- E-MAIL LOAD SHEET *Touch to Share*
- Show Detailed Results *Touch to Toggle On/Off*

FLIGHT PHASES

Phase	Weight	CG	Moment
Empty	2230LB	140IN	312LB-IN/1000
Ramp	3257.6LB	143.94IN	469LB-IN/1000
Takeoff	3248.5LB	143.91IN	467LB-IN/1000 <i>Touch to Enlarge Chart</i>

Weight and Balance - Fixed Wing

Entering Weight and Balance Data - Rotorcraft:

- 1) After adding an aircraft and performance data in , touch **Home** > .
- 2) Touch the N-number to select the desired rotorcraft.
- 3) Enter the weights for each station.
- 4) Touch the 'Fuel Load' field and use the weight slider or touch **Maximum Fuel, 30 Minute Reserve, 45 Minute Reserve, or 60 Minute Reserve.**

 is displayed when the rotorcraft is loaded within the CG envelope.

 is displayed when the rotorcraft is loaded out of the CG envelope.

Touch to Clear Info → CLEAR

Touch to Toggle On/Off → Sync With Active FPL, Weight Sliders

Touch to Select Aircraft → AIRCRAFT, Aircraft: N789

Touch to Adjust Position → PILOT (MAX 300lb), Pilot Weight: 195lb

Slide to Adjust Weight → Add Item

Touch to Add Item → FORWARD PASSENGER (MAX 300lb), Add Item

Touch to Remove Item → LEFT AFT PASSENGER (MAX 300lb), Left Aft Passenger Weight: 165lb, Add Item

Touch to Add Item → RIGHT AFT PASSENGER (MAX 300lb), Right Aft Passenger Weight: 205lb, Add Item

Touch to Add Item → BAGGAGE UNDER PILOT (MAX 50lb), Baggage Under Pilot Weight: 15lb

Weight & Balance NRST



SUMMARY
 N789
 Loaded Within Envelope 
 Takeoff Weight: 2427.8LB
 Landing Weight: 2216.2LB
 Fuel Load: 46.5GAL → 11.3GAL

Chart
 Legend: Takeoff (Blue), Landing (Purple), Zero Fuel (Orange)
 Y-axis: Weight
 X-axis: Longitudinal CG (Forward to Aft)
 Max TO, Min

CG ENVELOPE | MOMENT ENVELOPE | STATION CHART

E-MAIL LOAD SHEET

Show Detailed Results 

Detailed Results Axis: Longitudinal | Lateral

FLIGHT PHASES

Phase	Weight	CG	Moment
Empty	1523LB	107IN	162

Touch to Adjust Display → CG ENVELOPE, MOMENT ENVELOPE, STATION CHART

Touch to Share → E-MAIL LOAD SHEET

Touch to Toggle On/Off → Show Detailed Results

Touch to Select Axis → Longitudinal, Lateral

Touch to Enlarge Chart → Enlarge Chart

Weight and Balance - Rotorcraft

DOWNLOADS



NOTE: If charts are not downloaded to the device they will not be available for viewing without a data connection. Download all applicable charts for your planned flight including alternates.



NOTE: Chart files can be very large and may take some time to download. It is recommended that downloads be done over Wi-Fi. Additional charges may apply for downloads done over a cellular network.



NOTE: With the availability of electronic charts in Garmin Pilot, it is still advisable to carry another source of charts on board the aircraft.



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to download or update charts.

The **Auto-Download Pilot Updates** feature, automatically downloads file updates and next cycles of existing data and charts as they become available.


Configuring Auto-Download Pilot Updates:


- 1) From any page, touch **Home** >  > **Downloads** Tab.
- 2) Touch  next to **Auto-Download Pilot Updates**, as desired.

Configuring Allow Mobile Data:

- 1) From any page, touch **Home** >  > **Downloads** Tab.
- 2) Touch  next to **Allow Mobile Data**, as desired.

Configuring Enable Download Map:

- 1) From any page, touch **Home** >  > **Downloads** Tab.
- 2) Touch  next to **Enable Download Map**, as desired.

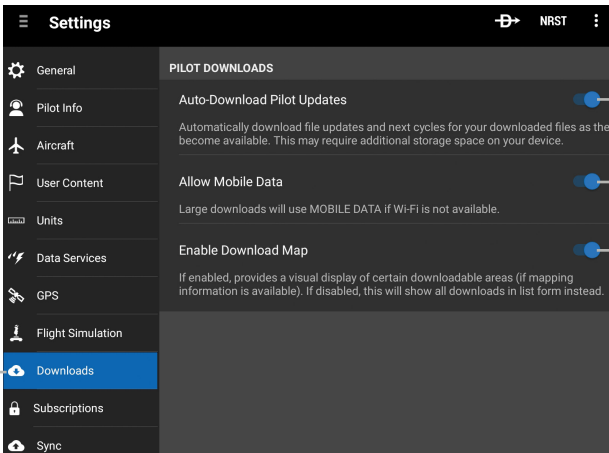

Touch to View


Touch to Toggle On/Off

Settings - Downloads - Pilot Downloads

Towards the top of the Downloads section, there are two buttons, **Regions** and **All**, which help filter the downloads to desired geographic regions.

Selecting Geographic Area for Chart Data Downloads:

- 1) From any page, touch **Home** >
 - 2) Touch the **Regions** button, then toggle the desired regions as desired.
- Or:** Touch **All** to download all available regions.

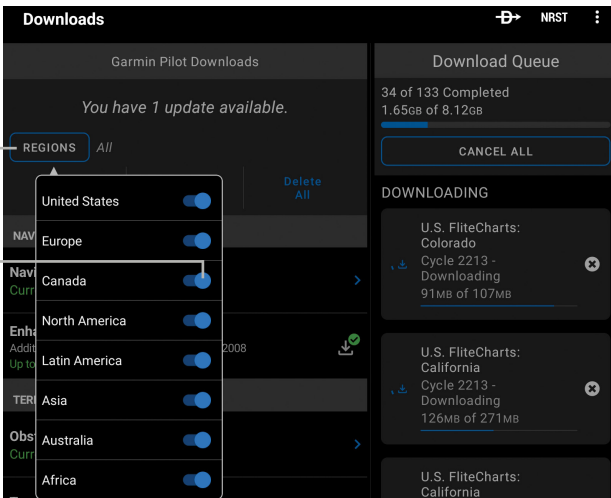

Touch to View

Touch to Toggle On/Off

Downloads - Main - Regions

Additionally, there are three quick action buttons the user can select (when applicable); **Download All**, **Update All**, and **Delete All**. The **Update All** button will update all available charts no matter the chart type. Select the desired button to start the associated process. Some charts can be viewed and downloaded from the Airport Info Page, under the Procedures tab.

The Main Downloads Menu is divided into two columns. The Left column shows items available for download as indicated by the blue download arrow along with blue text. After the download is selected, the download progress will be displayed as a circular progression graphic around the download arrow , and also in the Download Queue. Once completed successfully, a green checkmark will be displayed along with green text. The right column is the Download Queue, which displays the download status along with a list of queued downloads.

Touch to Delete All

Touch to View

Touch to Download All

Touch to Update All

Download Progress


Touch to Cancel All

Touch to Cancel

Download Status

Device Storage Info

Downloads - Main - Active Downloads

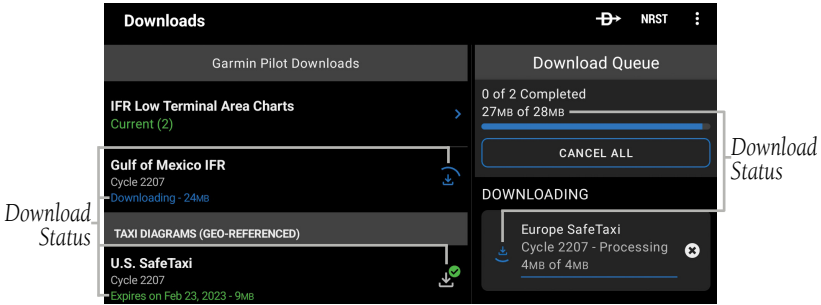

Downloads - Main - Gulf of Mexico IFR



CHART UPDATES




NOTE: *Electronic Charts are updated frequently. Always ensure the charts saved to the device are up-to-date prior to each flight. With the availability of electronic charts, it is still advisable to carry another source of charts onboard the aircraft.*



Garmin Pilot makes it easy to ensure that charts are always up-to-date by taking advantage of the notification area of the Android device. When Garmin Pilot is started, the program automatically checks for chart updates (when configured). When updates are available the Garmin Pilot Icon is displayed in the notification area of the device. The number of available updates is also displayed on the Downloads Page. When updates are available, the **Update All** button becomes active.

Downloading Garmin Americas Navigation Data:

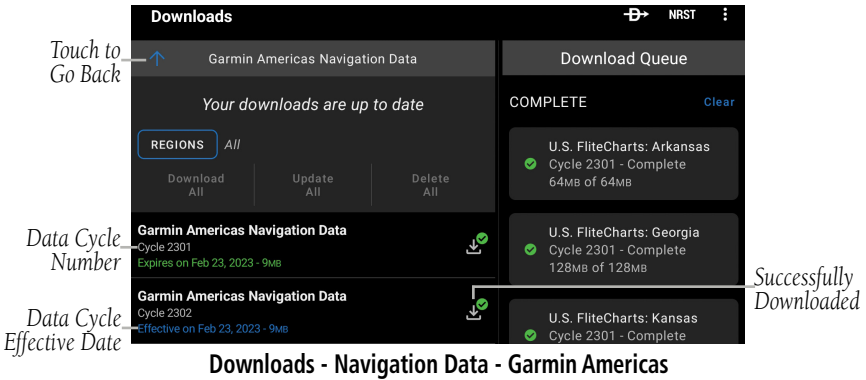- 1) From any page, touch **Home** > .
- 2) Scroll to the top of the Downloads section, then touch **Navigation Data** > **Garmin Americas Navigation Data**.
- 3) Touch  next to the desired cycle to begin download.




Downloading Jeppesen Worldwide Navigation Data:

- 1) From any page, touch **Home** > .
- 2) Scroll to the top of the Downloads section, then touch **Navigation Data** > **Jeppesen Worldwide NavData**.
- 3) Touch  next to the desired cycle to begin download.


Adjusting the Active Navigation Data (if applicable):

- 1) From any page, touch **Home** > .
- 2) Scroll to the top of the Downloads section, then touch **Navigation Data**.
- 3) Touch the **Set Active** button as desired.

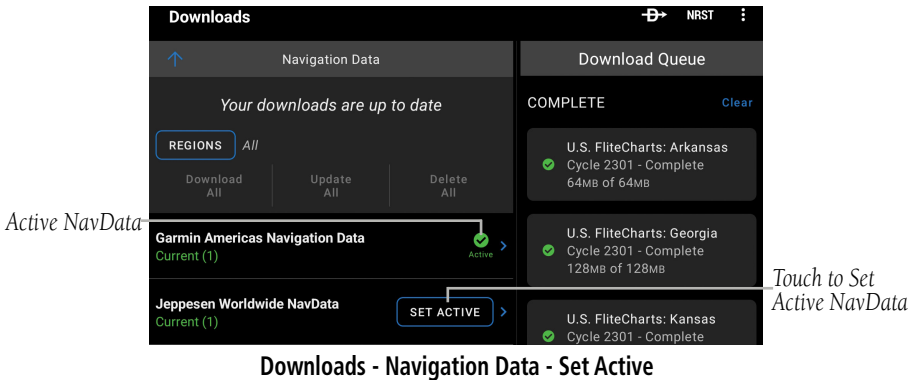

Downloading Basemaps:

- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **Enhanced Basemap**.
- 3) Touch next to the desired cycle to begin download.

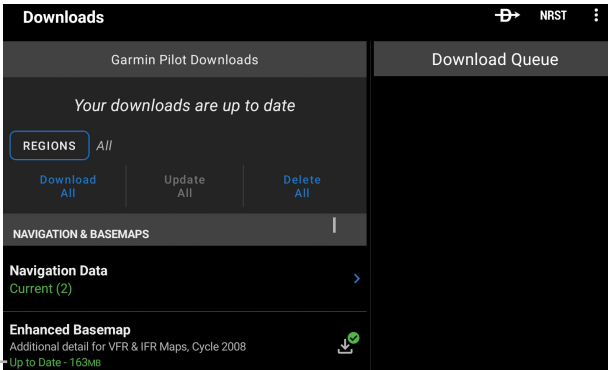


Active NavData

Downloads - Navigation & Basemaps

Downloading Obstacle Database:

- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **Obstacle Database**.
- 3) Select the desired geographic area, e.g. **U.S., Canada & Europe Obstacles**, **Worldwide Obstacles**, etc.
- 4) Touch next to the desired cycle to begin download.

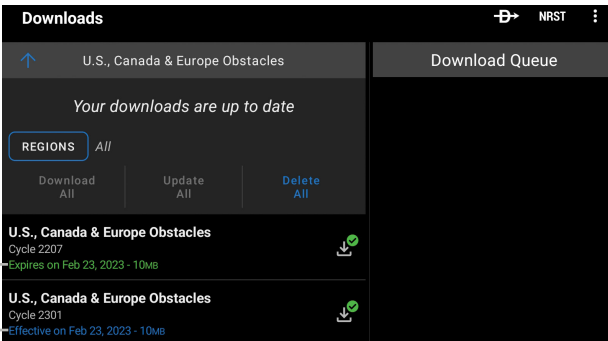


Active NavData

Next Cycle
NavData

Downloads - Obstacle Database - U.S., Canada & Europe

Downloading Terrain Database:

- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **Terrain Database**.
- 3) Select the desired geographic area, e.g. **Worldwide Terrain, North America Terrain**, etc.
- 4) Touch next to the desired cycle to begin download.

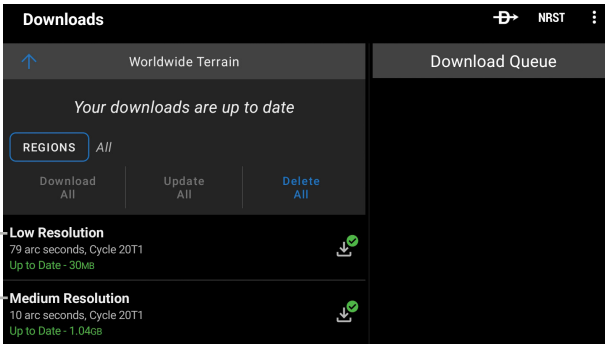


Touch to Select & Download

Downloads - Terrain Database - Worldwide

Downloading Airport Information:

- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **Airport Information**.
- 3) Select the desired geographic area, e.g. **Africa Airport Information, U.S. Airport Information**, etc.
- 4) Touch next to the desired cycle to begin download.

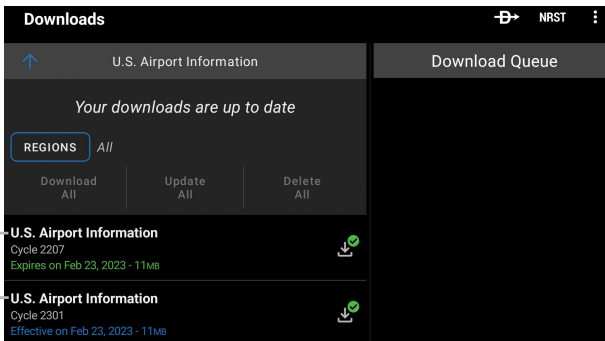


Touch to Select & Download

Downloads - Airport Info - U.S.

Downloading U.S. Runway Diagrams:


- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **U.S. Runway Diagrams**.
- 3) Touch next to the desired cycle to begin download.

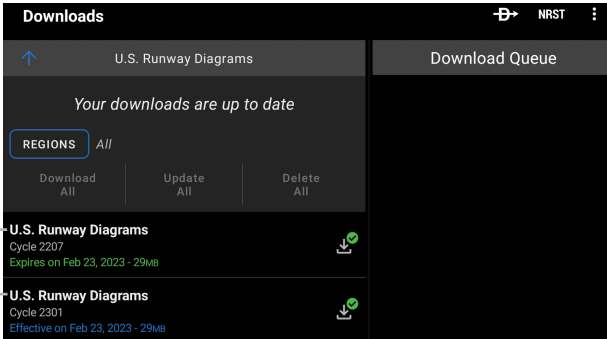

Downloads - U.S. Runway Diagrams

Downloading Airport Documents:

- 1) From any page, touch **Home** >
- 2) Scroll to the top of the Downloads section, then touch **Airport Documents**.
- 3) Select the desired geographic area, e.g. **U.S. Chart Supplement (A/FD)**, **Canada Flight Supplement (CFS)**, etc.
- 4) Select the desired grouping, e.g. **North Central**, **Alaska**, etc.
- 5) Touch next to the desired cycle to begin download.

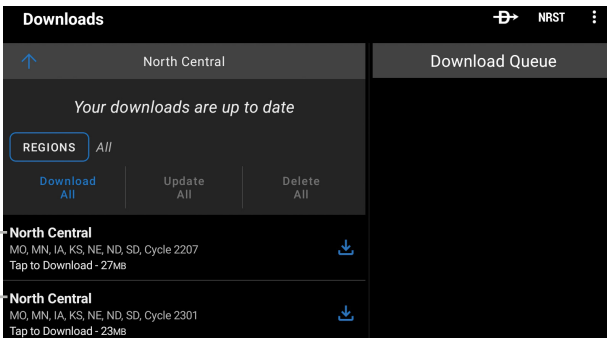


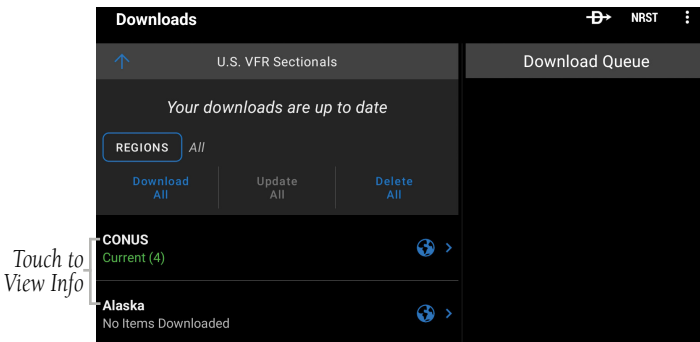
Downloads - Airport Documents - U.S. Chart Supplement - North Central



NOTE: Sectional Charts are updated individually on the chart schedule and are available for download, typically 5 days prior to their valid date. IFR Low and High Altitude Charts are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

Downloading VFR Charts:

- 1) From any page, touch **Home** > .
 - 2) Scroll to the middle of the Downloads section, then touch **VFR Aeronautical Charts**.
 - 3) Select the desired geographic area, e.g. **U.S. VFR Sectionals**, **Canada VFR Navigation Charts (VNC)**, etc.
 - 4) Select the desired grouping, e.g. **Continental United States (CONUS)**, **Alaska**, etc.
 - 5) On the bottom of the screen, select the desired chart cycle/effective date.
 - 6) Touch **Select All** > **DOWNLOAD**.
- Or:** Touch the individual chart(s), then **DOWNLOAD**.






Downloads - VFR Aeronautical Charts - U.S. VFR Sectionals

The screenshot shows the 'CONUS' screen in the Garmin Pilot app. At the top, there is a back arrow, the title 'CONUS', a home button, and the 'NRST' (Next Start Time) indicator. A 'DOWNLOAD' button is in the top right corner. The map displays various VFR sectional charts across the continental United States, including cities like Seattle, Great Falls, Billings, Twin Cities, Lake Huron, Montreal, Halifax, Salt Lake City, Omaha, Chicago, Detroit, New York, San Francisco, Denver, Wichita, St. Louis, Washington, Phoenix, San Antonio, New Orleans, Brownsville, Miami, Caribbean 1 VFR Chart, and Caribbean 2 VFR Chart. A legend at the bottom indicates: blue for 'Selected/Queued', green for 'Current', and red for 'Expired/Invalid'. Below the legend are buttons for 'Select All', 'Deselect All', 'Delete All', and a status bar showing 'Current: Valid Until Feb 23, 2023' and 'Next: Starts Feb 23, 2023'. Annotations on the right side of the map describe touch gestures: 'Touch to Start Download' (pointing to the DOWNLOAD button), 'Selected for Download' (pointing to blue boxes), 'Touch to Download' (pointing to blue boxes), 'Touch to Change Chart Cycle' (pointing to a blue box), and 'Touch to Delete All' (pointing to the DELETE ALL button). An annotation on the left side says 'Downloaded & Current' (pointing to green boxes) and 'Touch to Select or Deselect All' (pointing to the SELECT ALL and Deselect All buttons).

Downloads - VFR Aeronautical Charts - U.S. VFR Sectionals - CONUS

Downloading VFR Terminal Area Charts (TACs) and Insets:

- 1) From any page, touch **Home** > .
- 2) Scroll to the middle of the Downloads section, then touch **VFR TACs and Insets**.
- 3) Select the desired geographic area, e.g. **Canada VFR Terminal Area Charts (VTA), U.S. VFR TACs and Insets**, etc.
- 4) Select the desired grouping, e.g. **Continental United States (CONUS), Alaska, Honolulu Inset**, etc.
- 5) If you selected CONUS or Alaska, on the bottom of the screen, select the desired chart cycle/effective date.
- Or) If you selected Honolulu Inset, touch  next to the desired cycle to begin download.
- 6) Touch **Select All** > **DOWNLOAD**.
- Or: Touch the individual chart(s), then **DOWNLOAD**.

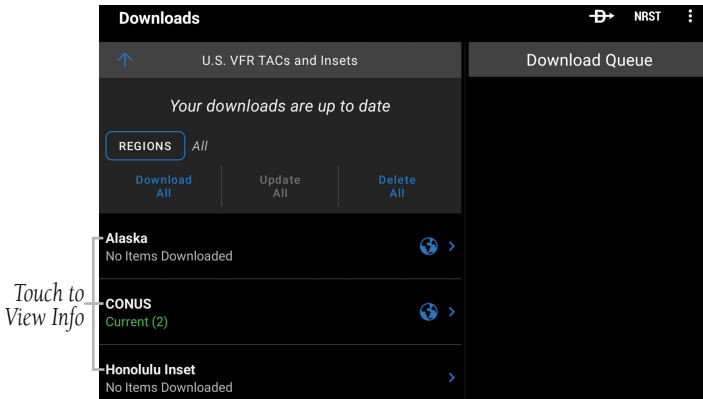

Downloads - VFR TACs & Insets - U.S.

← CONUS NRST

DOWNLOAD

Touch to Start Download

Touch to Download

Selected for Download

Downloaded & Current

Touch to Select or Deselect All

Touch to Change Chart Cycle

Touch to Delete All

Selected/Queued Current Expired/Invalid


Select All Deselect All Current: Valid Until Feb 23, 2023 Next: Starts Feb 23, 2023 Delete All

Downloads - VFR TACs & Insets - U.S. - CONUS

Downloading VFR Helicopter Charts:

- 1) From any page, touch **Home** >
- 2) Scroll to the middle of the Downloads section, then touch **VFR Helicopter Charts**.
- 3) Select the desired geographic area, e.g. **U.S. Helicopter Route Charts, U.S. Gulf Coast Charts, Brazil Helicopter Charts**, etc.
- 4) Select the desired grouping, e.g. **Boston, Chicago**, etc.
- 5) Touch next to the desired cycle to begin download.

Touch to Select & Download

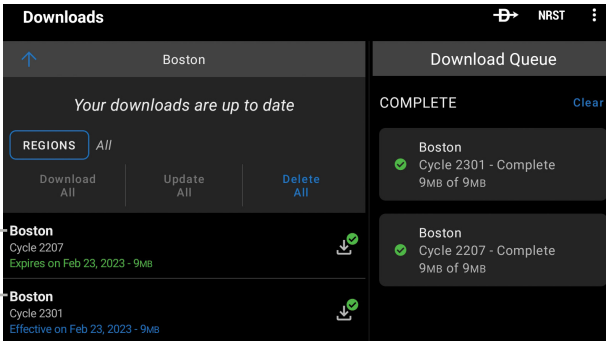

Downloads - VFR Helicopter Charts - U.S. Route - Boston


Downloading IFR Enroute High Charts:



NOTE: US Instrument Procedures are updated on a 28-day cycle and are available for download typically 5 days prior to their valid date.

- 1) From any page, touch **Home** > .
 - 2) Scroll to the middle of the Downloads section, then touch **IFR Enroute High Charts**.
 - 3) Select the desired geographic area, e.g. **Canada IFR Enroute High Charts, U.S. IFR Enroute High Charts, Latin America IFR High Enroute Charts**, etc.
 - 4) Select the desired grouping, e.g. **Alaska, Continental United States (CONUS), Guam, Pacific**, etc.
 - 5) If you selected Alaska or CONUS, on the bottom of the screen, select the desired chart cycle/effective date.
- Or:** If you selected Guam and/or Pacific, touch next to the desired cycle to begin download.
- 6) Touch **Select All** > **DOWNLOAD**.
- Or:** Touch the individual chart(s), then **DOWNLOAD**.

Touch to View Info

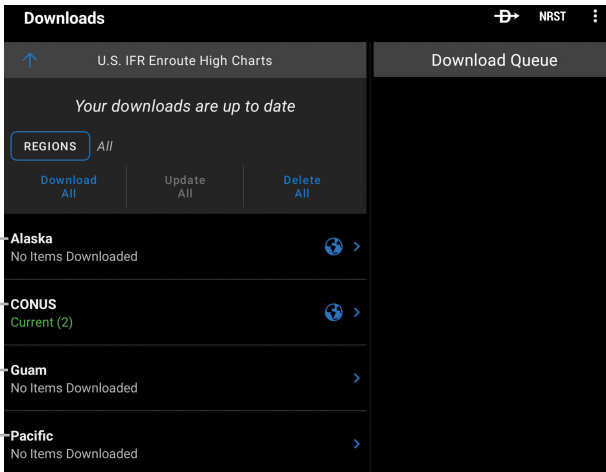

Downloads - IFR Enroute High - U.S.

← CONUS NRST

DOWNLOAD

Touch to Start Download

Touch to Download

Downloaded & Current

Touch to Change Chart Cycle

Touch to Delete All

Selected for Download

Touch to Select or Deselect All


Selected/Queued Current Expired/Invalid

Select All Deselect All Current: Valid Until Feb 23, 2023 Next: Starts Feb 23, 2023 Delete All


Downloads - IFR Enroute High - U.S. - CONUS

Downloading IFR Enroute Low Charts:

- 1) From any page, touch **Home** > .
 - 2) Scroll to the middle of the Downloads section, then touch **IFR Enroute Low Charts**.
 - 3) Select the desired geographic area, e.g. **Canada IFR Enroute High Charts, U.S. IFR Enroute High Charts, Latin America IFR High Enroute Charts**, etc.
 - 4) Select the desired grouping, e.g. **Alaska, Continental United States (CONUS), Hawaii**, etc.
 - 5) If you selected Alaska or CONUS, on the bottom of the screen, select the desired chart cycle/effective date.
- Or:** If you selected Hawaii, touch next to the desired cycle to begin download.
- 6) Touch **Select All** > **DOWNLOAD**.
- Or:** Touch the individual chart(s), then **DOWNLOAD**.

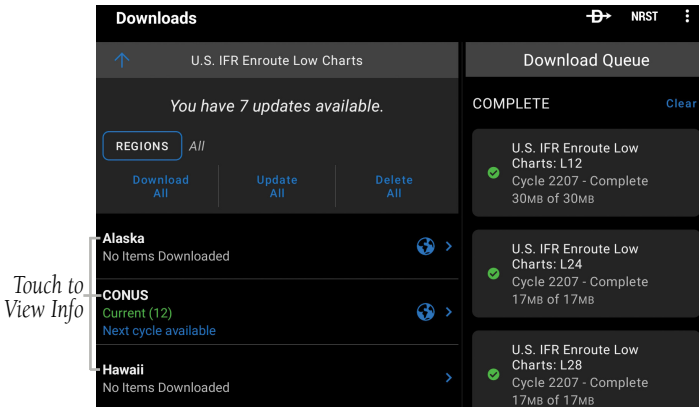


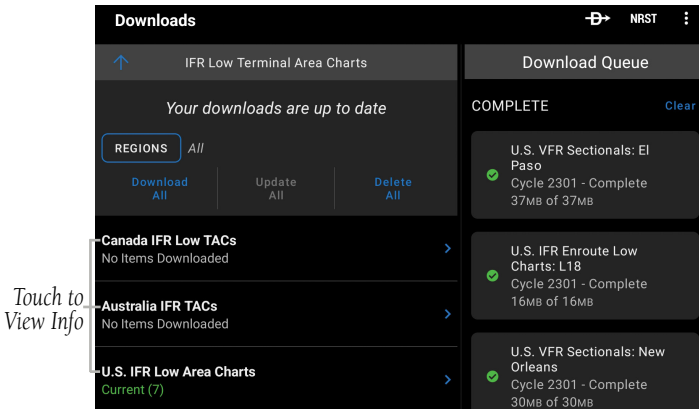
Downloads - IFR Enroute Low - U.S.

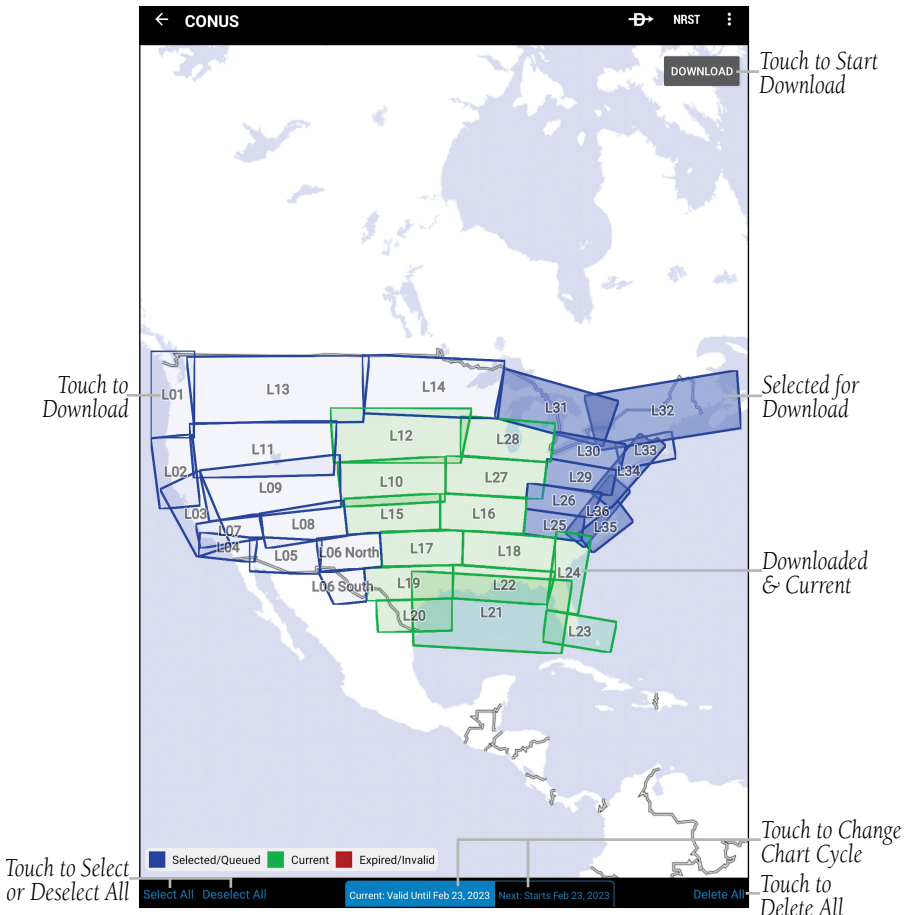

Downloads - IFR Enroute Low - U.S. - CONUS

Downloading IFR Low Terminal Area Charts:

- 1) From any page, touch **Home** > .
 - 2) Scroll to the middle of the Downloads section, then touch **IFR Low Terminal Area Charts**.
 - 3) Select the desired geographic area, e.g. **Canada IFR Low Terminal Area Charts (TACs), Australia IFR TACs, U.S. IFR Low Area Charts**, etc.
 - 4) Select the desired grouping, e.g. **Alaska, Continental United States (CONUS)**, etc.
 - 5) On the bottom of the screen, select the desired chart cycle/effective date.
 - 6) Touch **Select All** > **DOWNLOAD**.
- Or:** Touch the individual chart(s), then **DOWNLOAD**.



Downloads - IFR Low TACs

← CONUS NRST

DOWNLOAD

Touch to Start Download

Selected for Download

Vancouver

Minneapolis-St Paul

Chicago Detroit

Denver

St Louis

Washington DC

Downloaded & Current

San Francisco

Los Angeles Phoenix

Dallas-Ft Worth

Atlanta

Jacksonville

Miami

Touch to Download

Touch to Select or Deselect All

Selected/Queued Current Expired/Invalid

Select All Deselect All

Current: Valid Until Feb 23, 2023 Next: Starts Feb 23, 2023



Delete All

Touch to Change Chart Cycle

Touch to Delete All


Downloads - IFR Low TACs - U.S. - CONUS

Downloading Gulf of Mexico IFR:

- 1) From any page, touch **Home** > 
- 2) Scroll to the middle of the Downloads section, then touch **Gulf of Mexico IFR**.
- 3) Touch  next to the desired cycle to begin download.

Downloading Taxi Diagrams (Geo-Referenced):


- 1) From any page, touch **Home** >
- 2) Scroll to the bottom of the Downloads section, then touch the desired geographic area, e.g. **U.S. SafeTaxi**, **Europe SafeTaxi**, **Brazil SafeTaxi**, etc.
- 3) Touch next to the desired cycle to begin download.

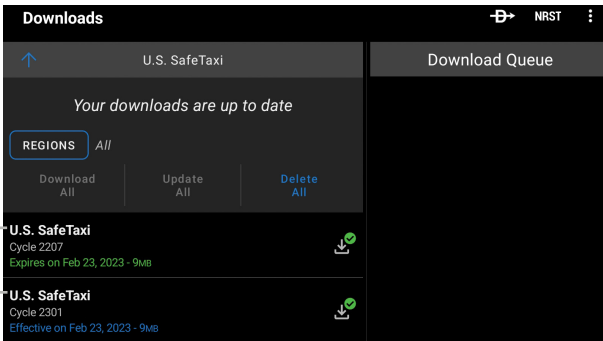

Downloads - Taxi Diagrams - U.S. SafeTaxi

Downloading Terminal Procedures & Airport Diagrams:

- 1) From any page, touch **Home** >
- 2) Scroll to the bottom of the Downloads section, then touch the desired geographic area, e.g. **U.S. FliteCharts**, **Europe FliteCharts**, etc.
- 3) Touch next to the desired cycle to begin download.

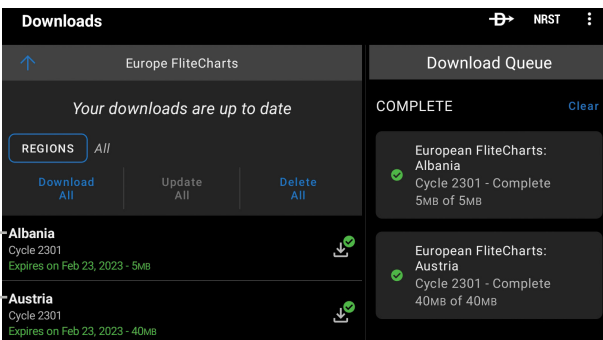


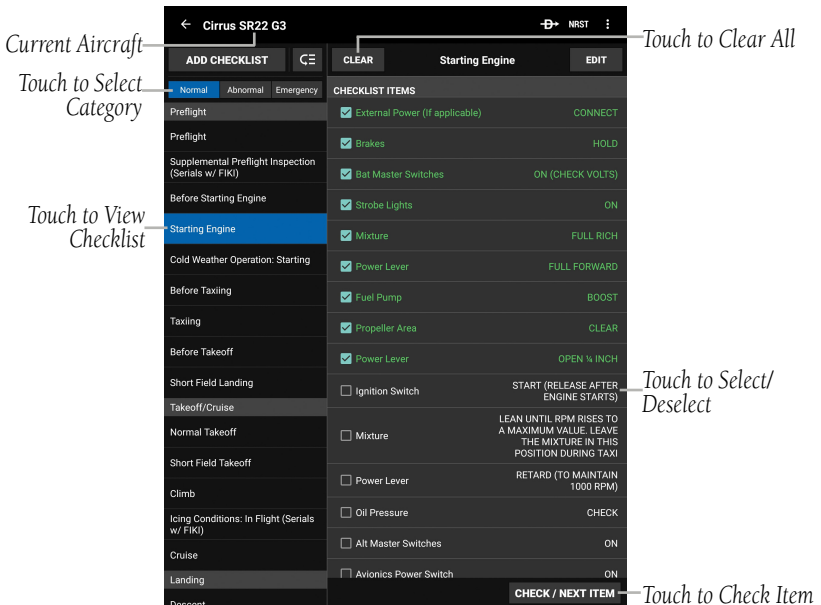
Downloads - Terminal Procedures & Airport Diagrams - Europe

CHECKLISTS

Electronic checklists can be viewed in Garmin Pilot to ensure proper flight procedures. Checklists display the item with the preferred state or outcome, along with a green checkmark to confirm the step has been completed. Checklists are fully customizable to meet the pilot's preferences.

Viewing an aircraft checklist:

- 1) From any page, touch **Home** > .
- 2) Touch the desired aircraft model from the Garmin library under **Checklist Binders**
Or: Add a new checklist binder by manually entering the information from the aircraft's Pilot Operating Handbook (POH), into Gamin Pilot or flyGarmin.
- 3) Touch the desired procedure.
- 4) Touch the appropriate step to indicate that is has been completed. A blue checkmark will indicate the step has been completed.
- 5) Touch the **Clear** button to clear all of the completed checklist items in the selected checklist category.




Electronic Checklists

PLAN

Garmin Pilot's powerful capabilities start with pre-flight planning, providing pilots with the most comprehensive aviation weather information to make better-informed flight decisions. Pilots can check weather radar, visible and infrared cloud imagery, METARs, TAFs, AIRMETs, SIGMETs, PIREPs, NOTAMs, winds and temperatures aloft, TFRs and lightning data. With Garmin Pilot, weather data can be overlaid on VFR Sectionals, IFR low altitude en route charts, IFR high altitude en route charts, WAC, or a simple map showing major roads and borders to visualize the weather for upcoming flights. Add text-based weather widgets and use the exclusive NavTrack feature to view weather information along the planned route.

FASTFIND PREDICTIVE WAYPOINT ENTRY

When entering a waypoint into the flight plan, FastFind Predictive Waypoint Entry populates airport identifiers and navigation aids nearest your location or previous point in the flight plan.

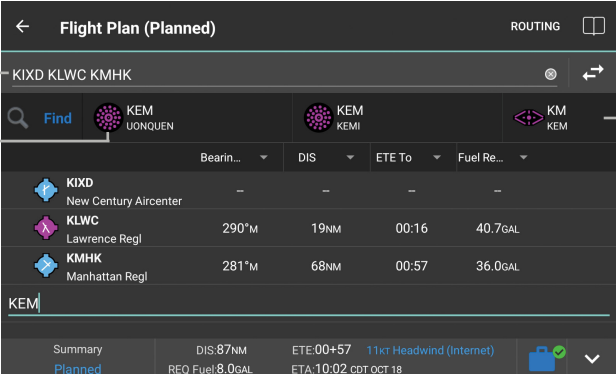

Begin Typing Waypoint(s)

Touch to Add Waypoint

Scroll to View Info

	Bearin...	DIS	ETE To	Fuel Re...
KIXD New Century Aircenter	—	—	—	—
KLWC Lawrence Regl	290°M	19NM	00:16	40.7GAL
KMHK Manhattan Regl	281°M	68NM	00:57	36.0GAL

KEM

Summary	DIS:87NM	ETE:00+57	1kt Headwind (Internet)
Planned	REQ Fuel:8.0GAL	ETA:10:02 CDT OCT 18	

Flight Plan - FastFind

FLIGHT PLAN

The Flight Plan page manages the current flight plan. Flight plans can be created, bookmarked (stored), and reversed from the Flight Plan Page. From the Flight Plan Page, flight plans can be entered in one of two ways. First, touch within the route field and use the keyboard to add waypoints separated by spaces. Second, touch the **+ Add Waypoint** button in the flight plan list and use the keyboard to enter the waypoint identifier, or graphically edit on the map once a departure point is entered. The Flight Plan Page allows for flight plans to be bookmarked or stored for later use. Bookmarked Flight Plans are synchronized through a Garmin Pilot account and are available on any device with Garmin Pilot.

Flight Plan (Planned)

ROUTING: [icon] [icon]

Current Route: KPSP PSP TNP EED DRK INW ZUN ABQ KAEG

Touch to Search For Waypoint

Touch to Bookmark Route

Touch to Reverse Route

	Bearin...	DIS	ETE To	Fuel Re...
KPSP Palm Springs Intl	-	-	-	-
PSP Palm Springs	261°M	5NM	00:02	90.3GAL
TNP Twenty-nine Palms	261°M	36NM	00:15	85.3GAL
EED Needles	262°M	75NM	00:39	78.7GAL

Touch to View Flight Bag Info

Touch to Collapse Details

Expanded Route Details

Summary	DIS:502NM	ETE:02+43	6kt Tailwind	78.0GAL
Planned	REQ Fuel:48.3GAL	ETA:13:12	MDT OCT 29	
Aircraft	Performance Config	Cruise Airspeed	Altitude	Highest Point
N599MR	74%	176kt	12,000FT	Download Required
Initial Fuel	Fuel Burn	Departure Time		Create Trip
92GAL	16.3GALHR	10/29 09:30 MDT		

Touch to Adjust/View Info


Touch to Load Route in Trip Planning

Arrival Airport



Departure Airport

Flight Plan

Creating a Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch within the route field to activate the cursor.
- 3) Use the keyboard to insert waypoints. Separate each waypoint with a space.

Or:

- 1) Touch the  **Add Waypoint** button.
- 2) Use the keyboard to input the waypoint identifier.
- 3) Touch the  **Add Waypoint** button to add additional waypoints.

Or: Enter Lat/Lon information in one of the following formats:

Lat/Lon	Lat/Lon
####N/####W	N##.#/W##.#
N####/W#####	##.#/-##.#
####/-#####	##.#N/O##.#W
##.#N/##.#W	##.#/-O##.#
N##.#/W0##.#	
Spaces are not allowed, slash (/) is required. Any Latitude format can be combined with any longitude format in the same string.	

Lat/Lon Formats

Or: Enter Radial/Distance waypoint in one of the following formats:


Radial/Distance	Descriptions
MSP/190/035 or MSP/190/35	Identifier/Radial/Distance
MSP190035	IdentifierRadialDistance
Spaces are not allowed, when slashes (/) are used the leading zero can be left off the radial and/or distance.	

Radial/Distance Formats

Or: Enter a waypoint at the intersection of two VOR radials in the following format :

VOR/Radial	Descriptions
OKB100MZB020	VORradialVORradial

Radial Intercept Waypoint

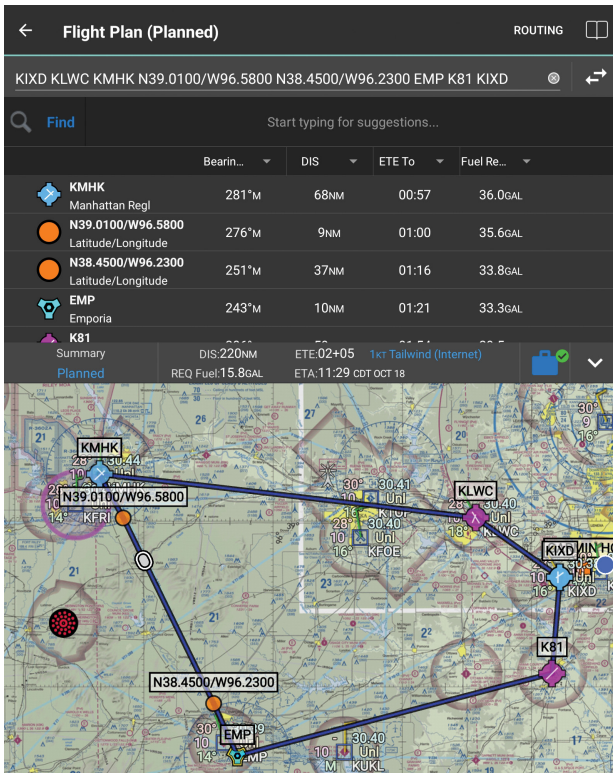

Flight Plan - Lat/Lon Waypoints

Or:

- 1) Use one of the above methods to enter a departure point.
- 2) In the Map View area long-press any location or flight plan leg, to display the rubber-band, drag the rubber-band to the desired map location.
- 3) Once the rubber-band is on or near the desired location release the rubber-band. A list of nearby waypoints is displayed.
- 4) Select the desired waypoint from the list. Or create a User Waypoint.
- 5) Repeat steps 2-4 to add additional waypoints.

ACTIONS MENU

The Flight Plan List contains a waypoint-sensitive Actions Menu. For example, if the selected waypoint is the departure point, the Actions Menu will include an **Add/Remove SID**, if available. If the selected point is the final destination, the Actions Menu will include an **Add/Remove STAR action** item, if available. Or, if the selected waypoint is a valid Airway entry point, the Actions Menu will include a **Load Airway** action item. The Actions Menu also has Action Items for adding, removing, or changing flight plan waypoints.

Action Menu Options - Airport of Origin	
Action	Description
Insert Before	Adds a new line item before the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Insert After	Adds a new line item after the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Remove Waypoint	Removes selected waypoint from the Flight Plan.
Waypoint Info	Displays Waypoint information dialog box.
Direct-To	Opens the Direct To... dialog box.
Add Departure	Opens the Select a Departure dialog box. Select the desired SID to open the submenu of available transitions or Select on Map.
Change Runway	If a Runway had been previously selected, this opens the Select Runway dialog box.
Change Departure	If a Departure had been previously selected, this opens the Select a Departure dialog box. Select the desired SID to open the submenu of available transitions or Select on Map.
Remove Departure	If a Departure had been previously selected, this removes the departure from the Flight Plan.

Action Menu Options - Airport of Origin


Action Menu Options - Enroute	
Action	Description
Insert Before	Adds a new line item before the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Insert After	Adds a new line item after the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Remove Waypoint	Removes selected waypoint from the Flight Plan.
Waypoint Info	Displays Waypoint information.
Direct-To	Opens the Direct To... dialog box.
Load Airway	Only available if the selected item is valid airway entry point. Opens submenu of available Airways. Once an Airway is selected the Select Exit submenu displays a list of available exit waypoints that can be ordered by distance or alphabetically.
Remove Airway	Removes Airway and all associated waypoints.
Change Airway Entry	Opens the Change Entry submenu with a list of entry points. The submenu can be viewed as an ordered list or alphabetically.
Change Airway Exit	Opens the Change Exit submenu with a list of Airway exit points. The submenu can be viewed as an ordered list or alphabetically.
Activate Leg	Activates the selected leg for navigation.


Action Menu Options - Enroute

Action Menu Options - Destination	
Action	Description
Insert Before	Adds a new line item before the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Insert After	Adds a new line item after the selected waypoint. Places the cursor in the empty line and opens the keyboard for waypoint identifier entry.
Remove Waypoint	Removes selected waypoint from the Flight Plan.
Waypoint Info	Displays Waypoint information.
Direct-To	Opens the Direct To... dialog box.
Change Arrival	If an Arrival had been previously selected, this opens the Edit STAR submenu with a list of available STARs. Select the desired STAR to open the submenu of available transitions or Select on Map.
Remove Arrival	If an Arrival had been previously selected, this removes the STAR and all associated waypoints.
Add Arrival	Opens the STAR submenu, listing available STARs. Select the desired STAR to open the submenu of available transition or Select on Map..
Activate Leg	Activates the selected leg for navigation.

Action Menu Options - Destination

Adding a Standard Instrument Departure (SID) to Flight Plan:


- 1) From any page, touch .
- 2) Touch the departure point in the Flight Plan List to open the Actions Menu.
- 3) From the Actions Menu, touch **Add Departure**.

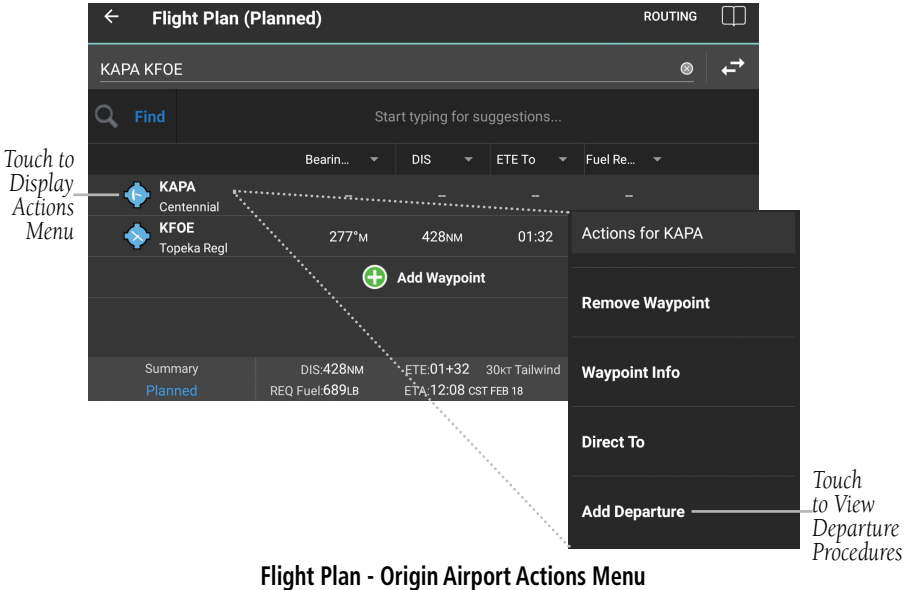

- 4) Touch the desired Departure.
- 5) Touch the desired Runway.
- 6) Touch the desired Transition.


Or: Touch **Select on Map**.

7) Touch the desired Departure.

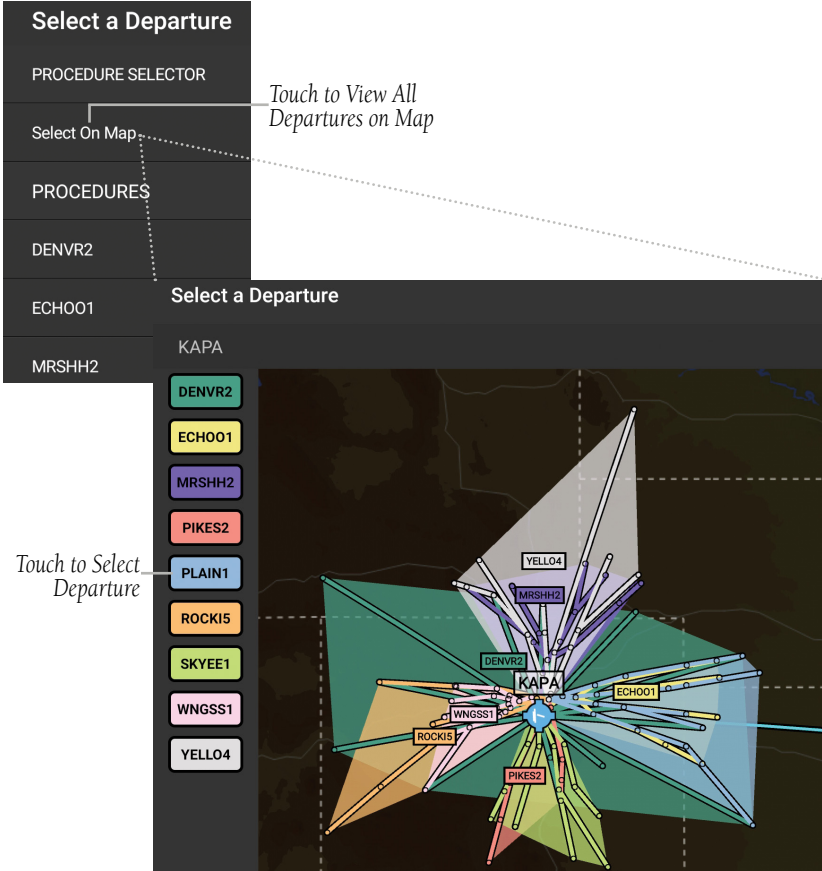


Flight Plan - Selecting Departure on Map

8) Touch the desired Transition.

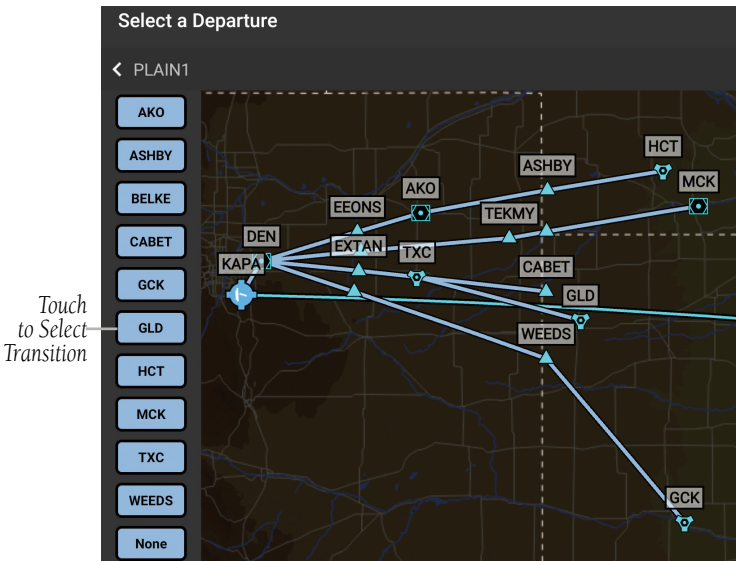

Flight Plan - Selecting Departure Transition on Map

9) Touch the desired Runway. The Departure, Transition, associated waypoints, and Runway are added to the flight plan as a single entry that can be expanded to view all waypoints.

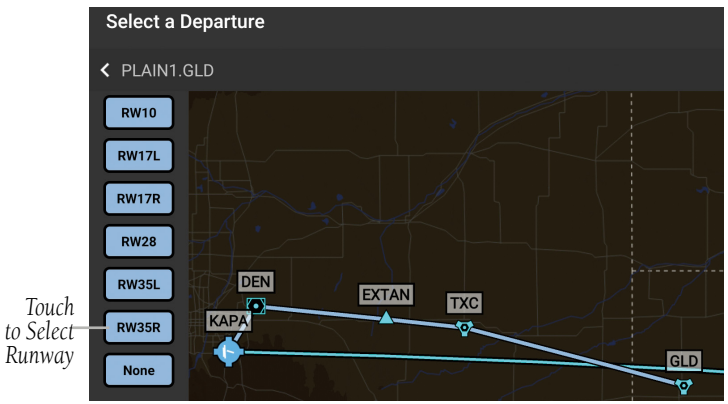


Flight Plan - Selecting Departure Runway on Map

Departure
Included in
Flight Plan

Departure
Procedure

Touch
to View
Departure
Procedure
Details

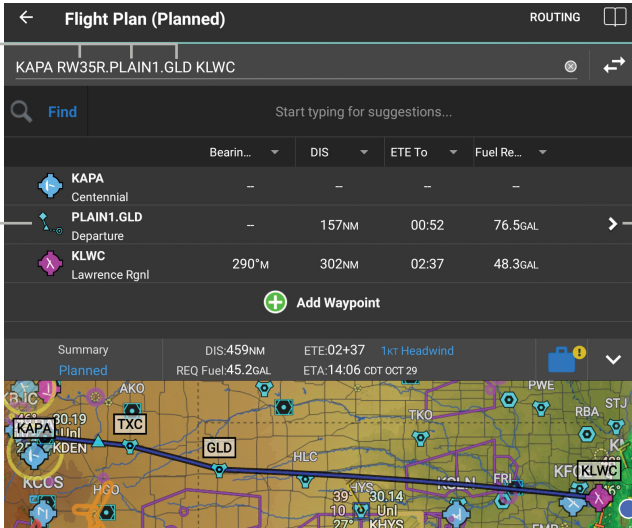


Flight Plan - Viewing Departure Details

Adding a Standard Arrival Route (STAR) to Flight Plan:

- 1) From any page, touch **Flight Plan**.
- 2) Touch the destination in the Flight Plan List to open the Actions Menu.
- 3) From the Actions Menu, touch **Add Arrival**.


Touch to
Display
Actions
Menu

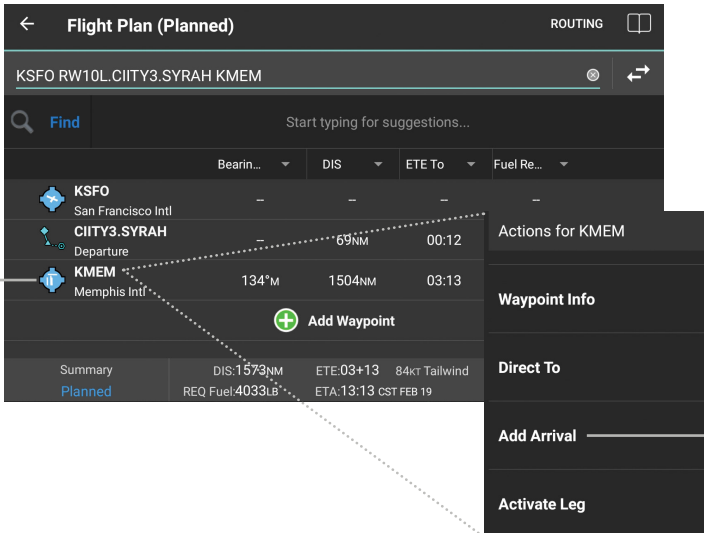

Touch
to View
Arrival
Procedures


Flight Plan - Destination Airport Actions Menu

- 4) Touch the desired Arrival.
- 5) Touch the desired Transition.
- 6) Touch the desired Runway.
- Or:** Touch **Select on Map**.
- 7) Touch the desired Arrival.

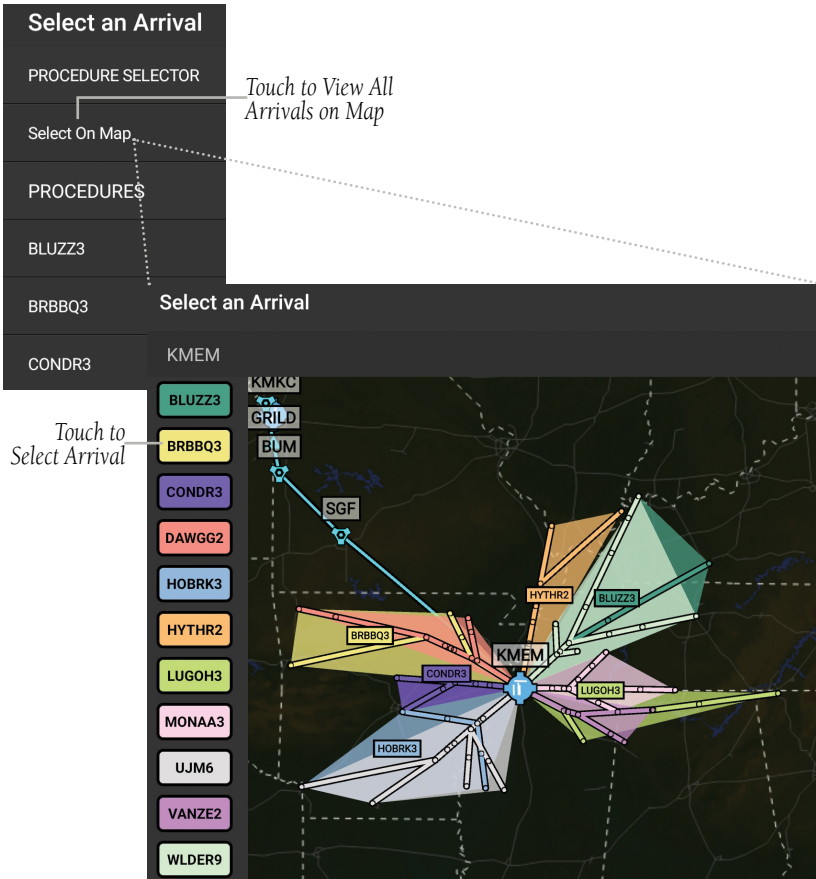


Flight Plan - Selecting Arrival on Map

- 8) Touch the desired Transition.

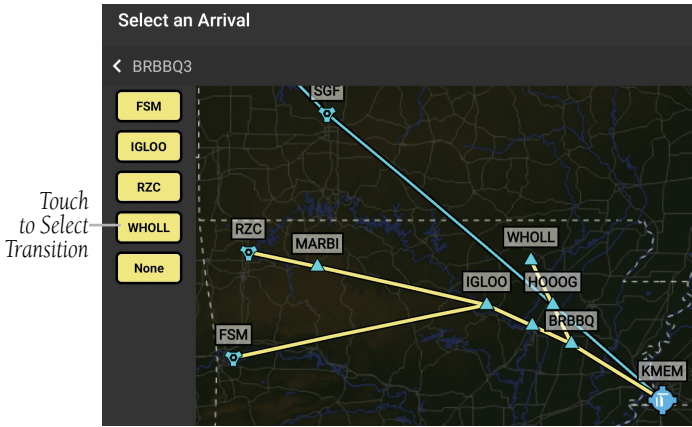

Flight Plan - Selecting Arrival Transition on Map

- 9) Touch the desired Runway. The Arrival, Transition, and associated waypoints are added to the flight plan as a single entry that can be expanded to view all waypoints. Once a STAR has been added to a flight plan, no more waypoints can be added.

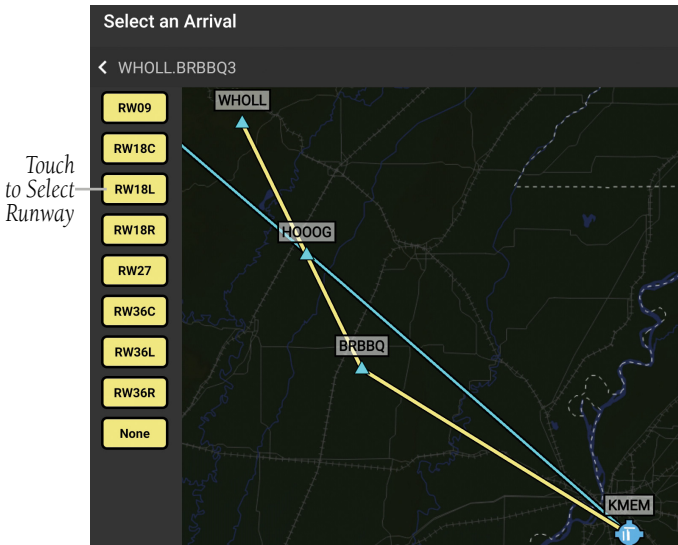


Flight Plan - Selecting Arrival Runway on Map

Expanding/Collapsing SID, STAR, or Airways in Flight Plan List:

- 1) From any page, touch **Home** >
- 2) Touch to expand.
- 3) Touch to collapse any of the expanded fields.

Arrival
Included in
Flight Plan

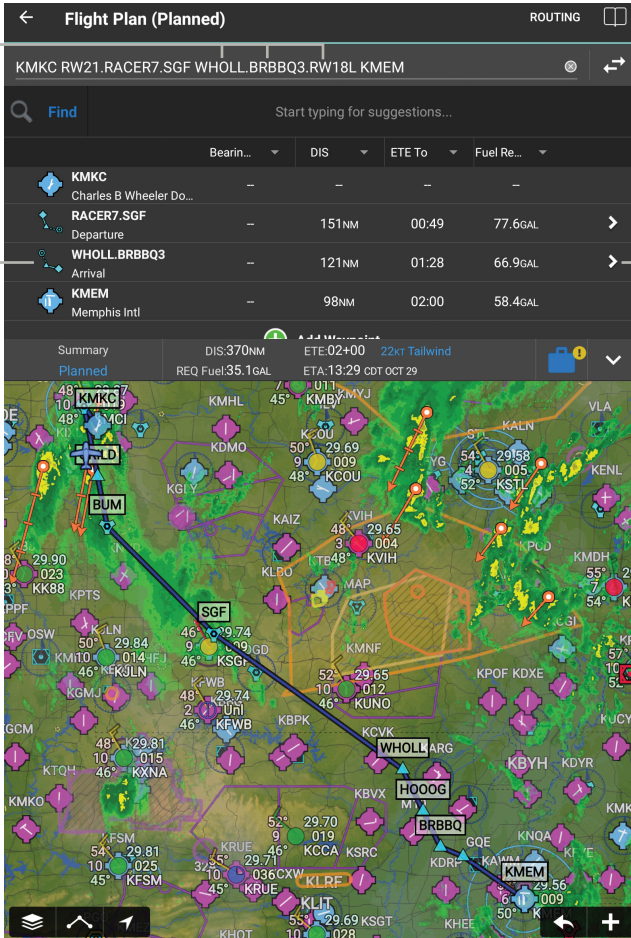


Arrival
Procedure

Touch
to View
Arrival
Procedure
Details

Flight Plan - Viewing Arrival Details

Adding an Airway to Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch a waypoint in the Flight Plan List to open the Actions Menu.
- 3) If the waypoint is a valid Airway entry point, touch **Load Airway** in the Actions Menu. Only valid Airway entry points will have the **Load Airway** action in the Actions Menu.
- 4) Touch the desired Airway.
- 5) Touch the desired Airway exit point from the list. All Airway waypoints from selected entry point to selected exit point will be added to the flight plan list as one entry that can be expanded to show all waypoints.

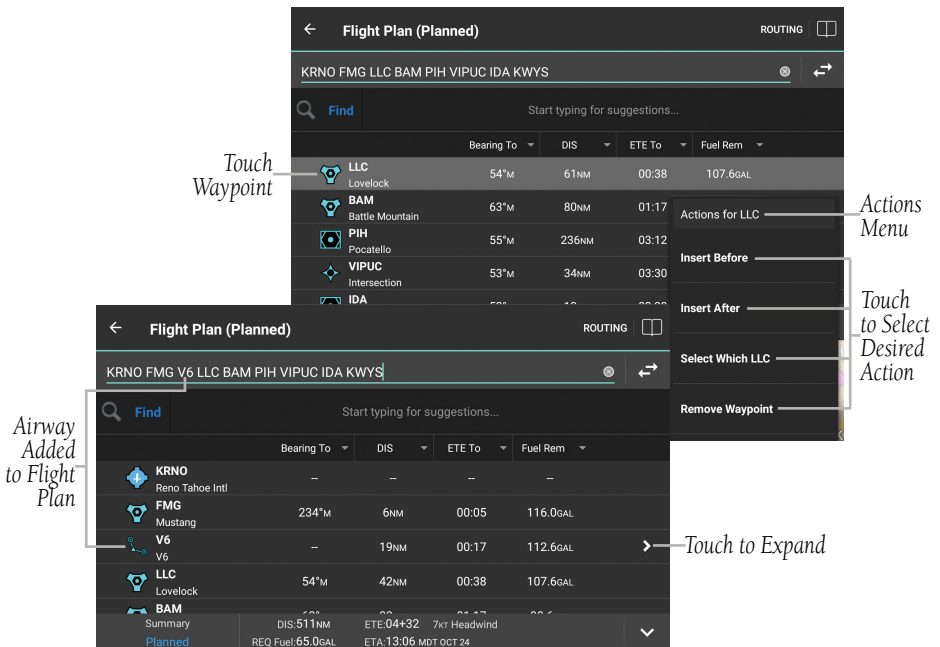



Adding Airway to Flight Plan






Bookmarking Flight Plan:

- 1) From any page, touch **Home** > > .
- 2) Touch **Store current route** to bookmark the Flight Plan. The Flight Plan and all associated waypoints are saved.




Renaming a Flight Plan:

- 1) From any page, touch **Home** >  > .
- 2) Touch and hold on any Flight Plan in the list.
- 3) Touch **Rename**.
- 4) Use text entry to give the flight plan a familiar name, or edit the existing name.
- 5) Touch **Save**.

Sorting Stored Flight Plans:


- 1) From any page, touch **Home** >  or  > .
- 2) Choose to order stored flight plans by either selecting the alphabetical button  or the custom sort button .

Deleting Bookmarked Flight Plans:

- 1) From any page, touch **Home** >  > .
- 2) Touch  > **Remove** to delete the selected Flight Plan.



NOTE: Flight Plans deleted from the Bookmarked FPLs list will also be deleted from other devices when the next sync is performed.

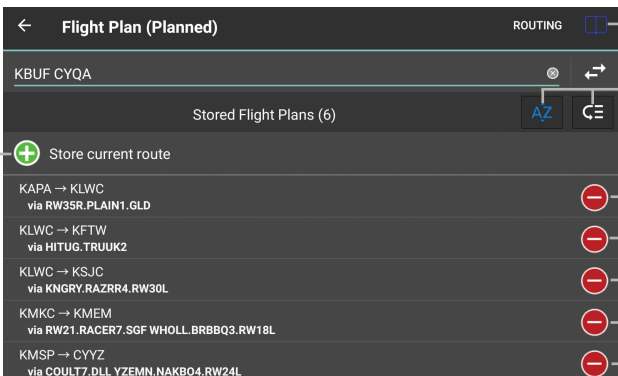

The screenshot shows the 'Flight Plan (Planned)' screen. At the top, there is a back arrow, the title 'Flight Plan (Planned)', and a 'ROUTING' button with a list icon. Below the title, the text 'KBUF CYQA' is displayed. A 'Stored Flight Plans (6)' section contains a list of routes, each with a red minus button to its right. The routes listed are:

- KAPA → KLWC via RW35R.PLAIN1.GLD
- KLWC → KFTW via HITUG.TRUUK2
- KLWC → KSJC via KNGRY.RAZRR4.RW30L
- KMKC → KMEM via RW21.RACER7.SGF.WHOLL.BRBBQ3.RW18L
- KMSP → CYVZ via COULTZ.DLI.YZEMN.NAKB04.RW24L


Annotations with arrows point to various UI elements:

- 'Touch to Store Current Route' points to a green plus icon and the text 'Store current route'.
- 'Touch to View Stored Routes' points to the 'ROUTING' button.
- 'Touch to Sort Routes' points to the 'AZ' and menu icons.
- 'Touch to Delete Stored Route' points to the red minus buttons next to the routes.

Deleting Bookmarked Flight Plan

Reversing Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch to reverse the Flight Plan.

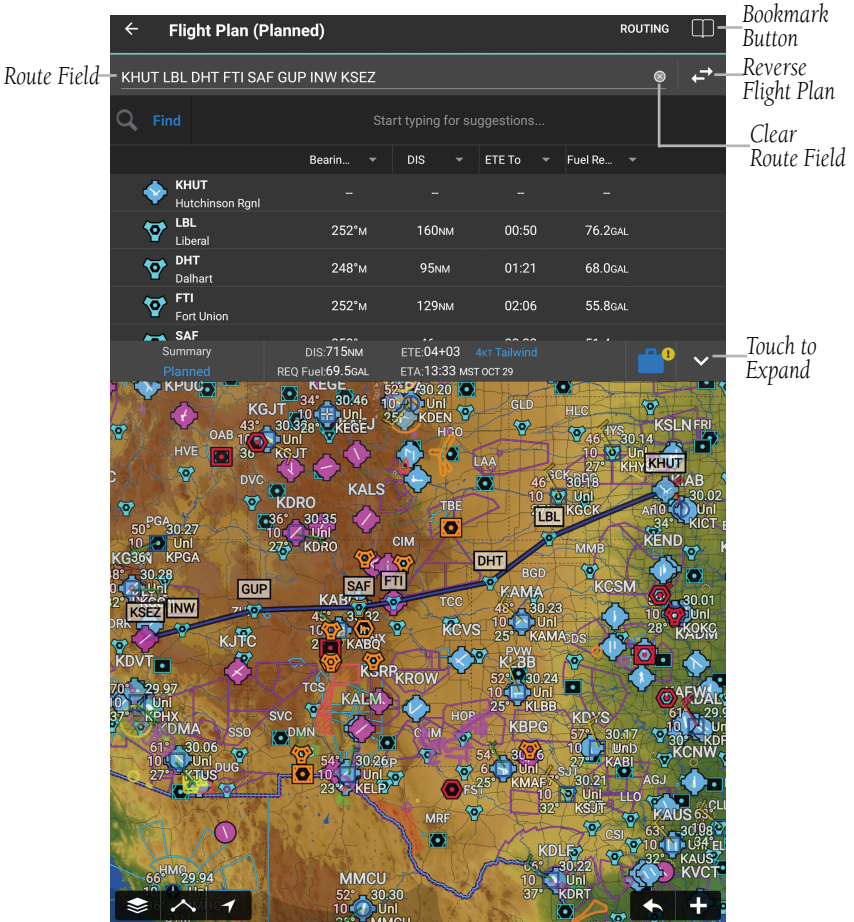

Active Flight Plan Page - Reverse Route



HIGHEST POINT ALONG ROUTE

In support of Helicopter Emergency Management Services (HEMS), Garmin Pilot identifies the highest obstacle along the planned route of flight.






NOTE: A current *Obstacle Database* must be downloaded to view the *Highest Point along the route*.

Viewing Highest Point Along Flight Plan:

- 1) From any page, touch **Home** > .
- 2) If necessary, touch  to expand the Flight Plan Summary information.
- 3) Touch **Highest Point**.
- 4) Scroll down, toggle the button next to **Show on Map/Profile**, as desired.

Setting Corridor Width for Highest Point Along Flight Plan:

- 1) From any page, touch **Home** > .
- 2) If necessary, touch  to expand the Flight Plan Summary information.
- 3) Touch **Highest Point**.
- 4) Adjust the Width slider, as desired.

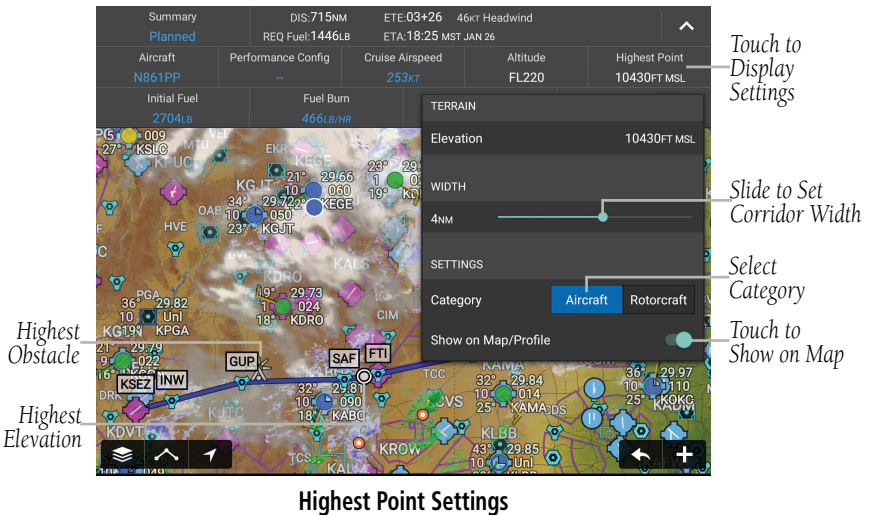

The screenshot displays the flight plan summary and the Highest Point settings menu. The flight plan summary includes:

- Summary: Planned
- DIS: 715NM
- ETE: 03+26
- 46kt Headwind
- REQ Fuel: 1446LB
- ETA: 18:25 MST JAN 26
- Aircraft: N861PP
- Performance Config: --
- Cruise Airspeed: 253kt
- Altitude: FL220
- Highest Point: 10430FT MSL
- Initial Fuel: 2704lb
- Fuel Burn: 466lb/hr

The Highest Point settings menu includes:



- TERRAIN: Elevation 10430FT MSL
- WIDTH: 4NM (with a slider)
- SETTINGS: Category (Aircraft selected, Rotorcraft available)
- Show on Map/Profile: (toggle)

Annotations on the screenshot:




- Highest Obstacle:** Points to a pink obstacle icon on the map.
- Highest Elevation:** Points to a green elevation marker on the map.
- Touch to Display Settings:** Points to the 'Highest Point' header in the summary.
- Slide to Set Corridor Width:** Points to the width slider.
- Select Category:** Points to the 'Aircraft' and 'Rotorcraft' options.
- Touch to Show on Map:** Points to the 'Show on Map/Profile' toggle.


Highest Point Settings

Setting Aircraft Category for Highest Point Along Flight Plan:

- 1) From any page, touch **Home** > .
- 2) If necessary, touch  to expand the Flight Plan Summary information.
- 3) Touch **Highest Point**.
- 4) Scroll down if necessary.
- 5) Touch **Airplane** or **Rotorcraft** in the 'Category' field.

Viewing Highest Point Along Flight Plan on Map Page:

- 1) From any page, touch **Home** > .
- 2) If necessary, touch  to expand the Flight Plan Summary information.
- 3) Touch **Highest Point**.
- 4) Scroll down if necessary.
- 5) Touch  next to **Show on Map/Profile**, as desired.

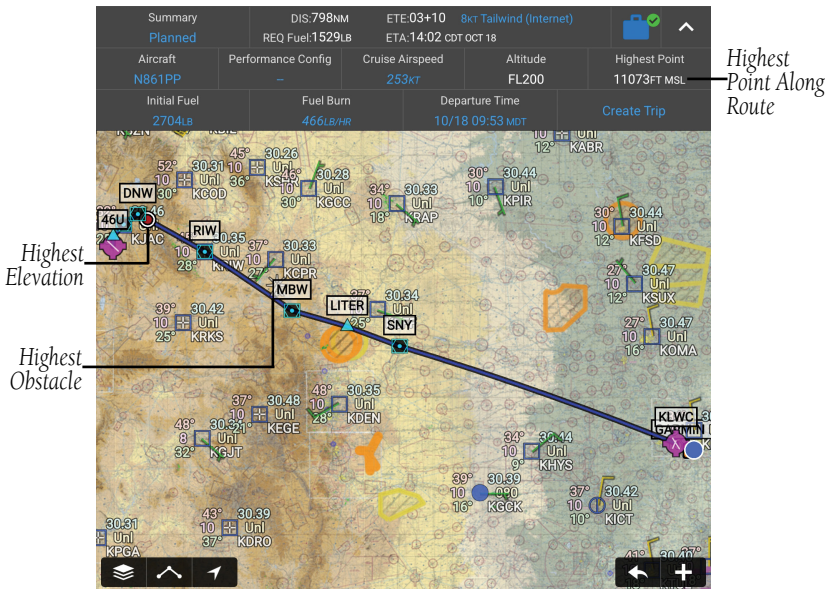

Flight Plan - Fixed Wing - Highest Point Along Route

HAZARD COLORS

Changing the aircraft category as described above will change the color of terrain and obstacle hazard icons on the map.

Aircraft (Terrain and Obstacles)


- Red: Terrain/obstacle is above or within 100 ft below the aircraft altitude.
- Yellow: Terrain/obstacle is between 100 ft and 1000 ft below the aircraft altitude.

Helicopter (Terrain)

- Red: Terrain is more than 250 ft above the aircraft altitude.
- Orange: Terrain is between 250 ft and 0 ft above the aircraft altitude.
- Yellow: Terrain is between 0 ft and 250 ft below the aircraft altitude.

Helicopter (Obstacles)

- Red: Obstacle is at or above current aircraft altitude.
- Yellow: Obstacle is between 0 ft and 250 ft below current aircraft altitude.

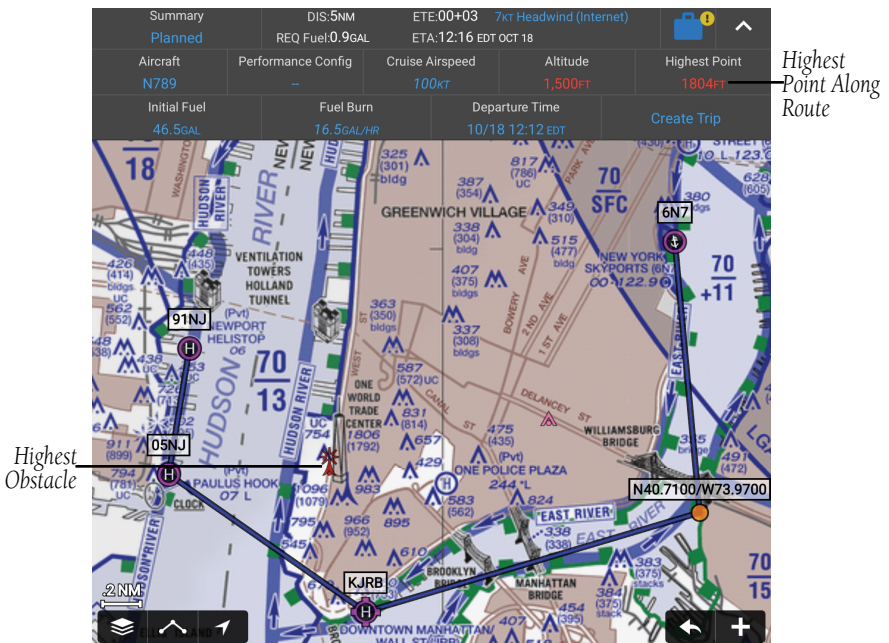

Flight Plan - Rotorcraft - Highest Point Along Route

ROUTE DATA AND CHART DOWNLOADS

Once a flight plan has been created, Garmin Pilot allows the user to quickly verify the route data and charts required for the active flight plan have been successfully downloaded. A flight bag icon, available from the Flight Plan page, will appear in the Flight Plan Summary and, when selected, display the following information:

Flight Plan (Planned) ROUTING

Current Route: KHUT LBL DHT FTI SAF GUP INW KSEZ

Touch to Search For Waypoint

Waypoint	Bearing	DIS	ETE To	Fuel Re.
Fort Union				
SAF Santa Fe	253°M	46NM	02:21	51.2GAL
GUP Gallup	258°M	137NM	03:09	38.1GAL
INW Winslow	258°M	97NM	03:43	28.8GAL
KSEZ Sedona	259°M	50NM	04:02	23.9GAL

Expanded Route Details

Summary	DIS: 715NM	ETE: 04+02	Okt: Tailwind	
Planned	REQ Fuel: 69.6GAL	ETA: 14:32	MST OCT 29	
Aircraft	Performance Config	Cruise Airspeed	Altitude	Highest Point
N599MR	74%	167KT	12,000FT	10,430FT MSL
Initial Fuel	Fuel Burn	Departure Time	Create Trip	
92GAL	16.3GAL/HR	10/29 12:30 CDT		

Touch to Load Route in Trip Planning

Departure Airport

Arrival Airport

Flight Plan - Route Data & Charts - Yellow Flight Bag Annunciator

- indicates all required route data and/or charts for the flight plan are downloaded to the device.
- indicates route data and/or charts need to be downloaded.



NOTE: Weather, AIRMETS, SIGMETs, NOTAMS, TFRs, and Fuel Prices are downloaded automatically in the background.



NOTE: Route Data fetches downloads for the current cycle. Enabling Auto-Downloads will ensure that future cycles are also downloaded when they become available.

Viewing Route Data and Chart Downloads via Flight Bag:

- 1) From any page, touch **Home** > . Enter desired Flight Plan information. If the necessary route data and/or charts are downloaded, will be displayed.
- 2) Touch to view info and touch to expand desired section and view details.
- 3) Touch **OK** to continue and return to the Flight Plan page.

Successful Download ✓ NAVIGATION AND BASEMAPS ▼

TERRAIN AND OBSTACLES ▼

✓ AIRPORT DATA ▼

ENROUTE CHARTS ▼ *Touch to Expand & View Info*

Touch to View Info ✓ TAXI DIAGRAMS ▲

✓ Taxi Diagrams

PROCEDURES AND DIAGRAMS ▲

✓ FliteCharts

Touch to Configure ⓘ You are all set for your flight! *Touch to Close* CONFIGURE DOWNLOAD OK

Route Data & Charts - Successful Download(s)

Downloading Route Data and Charts via Flight Bag:

- 1) From any page, touch **Home** > . Enter desired Flight Plan information.
If the necessary route data and/or charts are not downloaded, will be displayed.
- 2) Touch to view info and touch to expand desired section and view the necessary download(s).
- 3) Touch **Download**. A download status bar will be displayed.
- 4) Once the download is complete, will be displayed next to the title of the applicable download, (e.g. Navigation and Basemaps, Terrain and Obstacles, etc.).
- 5) Touch **OK** to continue and return to the Flight Plan page.

KHUT -> KSEZ

- Successful Download NAVIGATION AND BASEMAPS
- TERRAIN AND OBSTACLES
- AIRPORT DATA
- ENROUTE CHARTS
- Incomplete Download TAXI DIAGRAMS 8MB *Touch to Expand & View Info*
- PROCEDURES AND DIAGRAMS 554MB *Size of Specific Download*
- Touch to View Info* WEATHER DATA





Size of All Downloads


Total needed for trip: 570.0MB *Touch to Download*

Touch to Configure CONFIGURE DOWNLOAD OK *Touch to Close*

Route Data & Charts - Download(s) Needed

Configuring Route Data and Chart Downloads via Flight Bag:

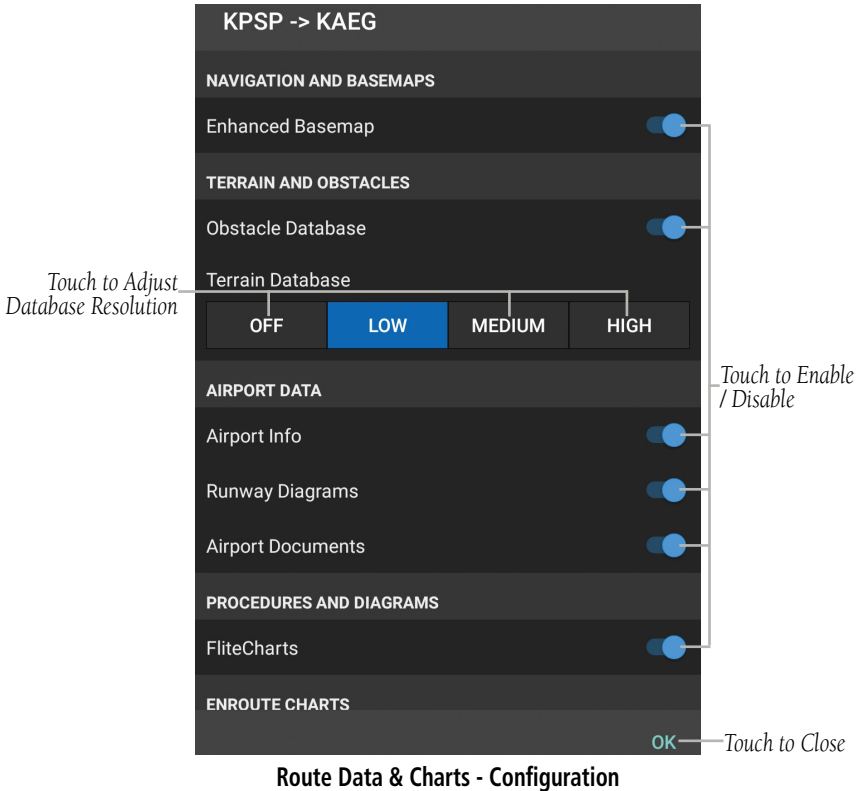

- 1) From any page, touch **Home** > . Enter desired Flight Plan information.
- 2) Touch the Flight Bag icon, either  or .
- 3) Touch **Configure**.
- 4) Touch  to enable/disable desired downloads.
- 5) Touch **OK** to continue and return to the Flight Plan page.




ADVANCED AIRCRAFT PERFORMANCE

Garmin Pilot incorporates cruise, climb, and descent performance tables to increase the accuracy of Estimated Time Enroute (ETE) and fuel burn calculations.

Configuring and viewing advanced aircraft performance data:

- 1) From any page, touch **Home** > .
- 2) Touch  and select the aircraft model data from the Garmin library or manually enter the information from the aircraft's Pilot Operating Handbook (POH). Make sure to enter aircraft data on the **Performance** and **W&B** tabs also.

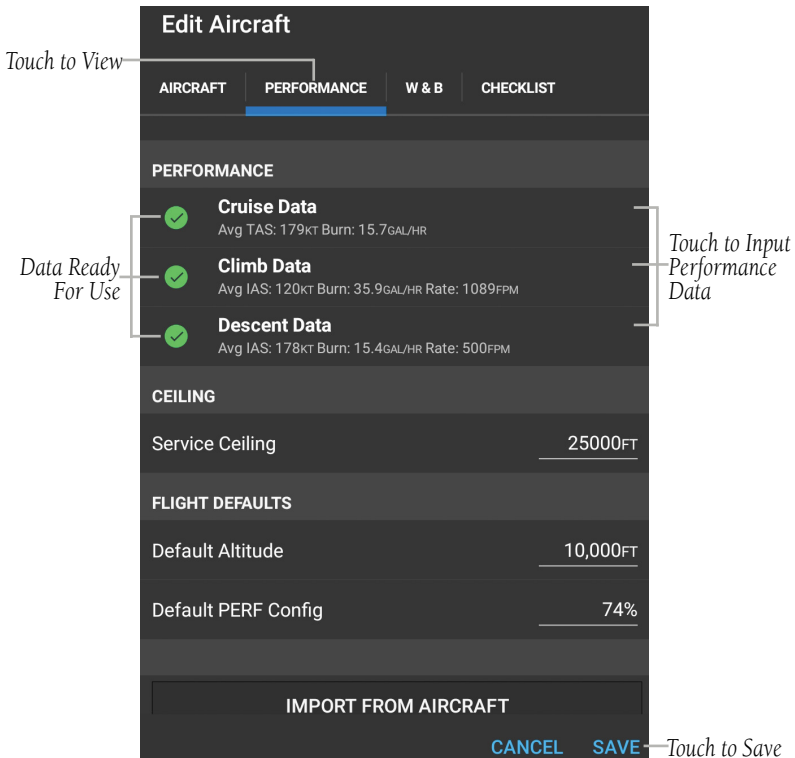

Settings - Advanced Aircraft Performance

- 3) Touch **Altitude** in the flight plan summary to determine the best altitude based on fuel consumption and winds.

Aircraft	Performance Config	Cruise Airspeed	Altitude	Highest Point
N599MR	74%	179kt	12,000FT	10430FT MSL

Altitude	Fuel	TAS	Wind	ETE
2,000FT	75.2GAL (+4.9)	158kt	1kt TW	4+31 (+26)
4,000FT	74.4GAL (+4.1)	161kt	1kt TW	4+26 (+21)
6,000FT	72.4GAL (+2.1)	166kt	2kt TW	4+17 (+12)
8,000FT	71.4GAL (+1.1)	170kt	4kt TW	4+12 (+07)
10,000FT	70.8GAL (+0.5)	177kt	1kt HW	4+09 (+04)

Advanced Aircraft Performance (Flight Plan)

DEMO MODE

Demo Mode simulates flight activity allowing the user to preview a trip before takeoff or review a previous flight. There are three Demo modes available, Manual, Flight Plan, and Logbook Track.






NOTE: When entering a value for Vertical Speed, the aircraft will climb and descend at this rate when altitude changes are made. Setting the vertical speed to zero (0) will override this and cause altitude changes to take effect immediately.




NOTE: In order to autolog Demo Flights, Terrain and Obstacle data must be downloaded. Click **Home > Downloads** to verify and/or download the applicable Obstacle Database & Terrain Database.

Entering Demo Mode - Manual:

- 1) If using the Classic Interface style, from any page, touch **Home > Demo Mode**.
- Or:** If using the Tab Bar Interface style, from any page, touch **More > Demo Mode**.
- 2) Touch the **Manual** tab.
- 3) Enter Desired Track, Altitude, Ground Speed, and Vertical Speed.
- 4) Touch **Tap to Set Starting Point** and enter waypoint information.
- 5) Touch **Playback Speed** to adjust as desired, then touch .
- 6) Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch  at the top of the screen to adjust settings.

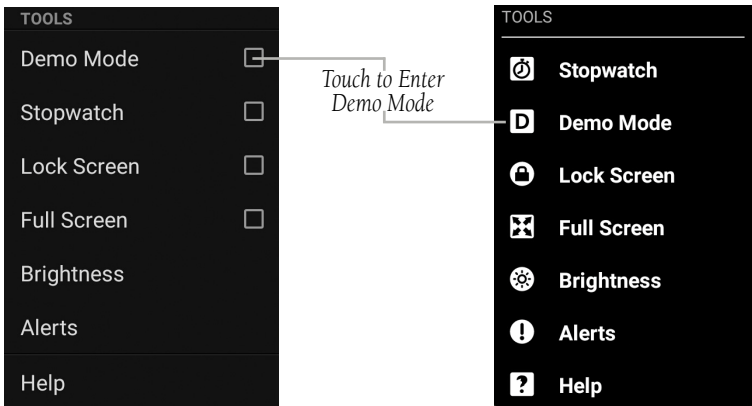

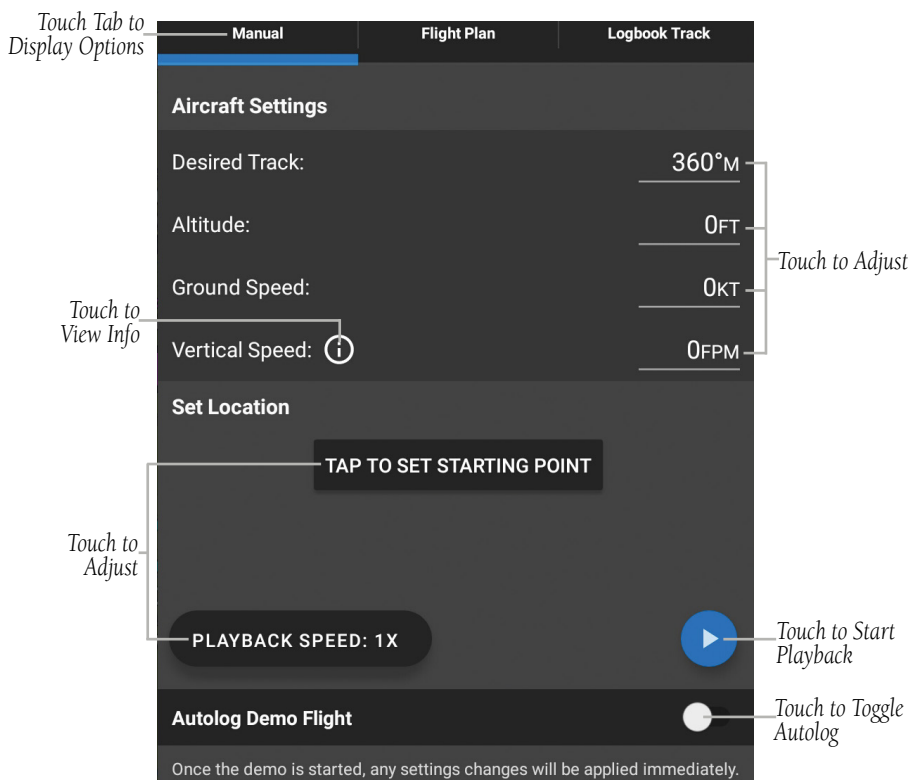


Entering Demo Mode - Classic & Tab Bar



Demo Mode - Manual

Entering Demo Mode - Flight Plan:

- 1) If using the Classic Interface style, from any page, touch **Home > Demo Mode**.
- Or:** If using the Tab Bar Interface style, from any page, touch **More > Demo Mode**.
- 2) Touch the **Flight Plan** tab.
- 3) Enter Desired Altitude, Ground Speed, and Vertical Speed.
- 4) The active flight plan loads automatically. Touch **Edit Route**, if necessary, and enter waypoint information.
- 5) Touch **Playback Speed** to adjust as desired, then touch .
- 6) Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch  at the top of the screen to adjust settings.

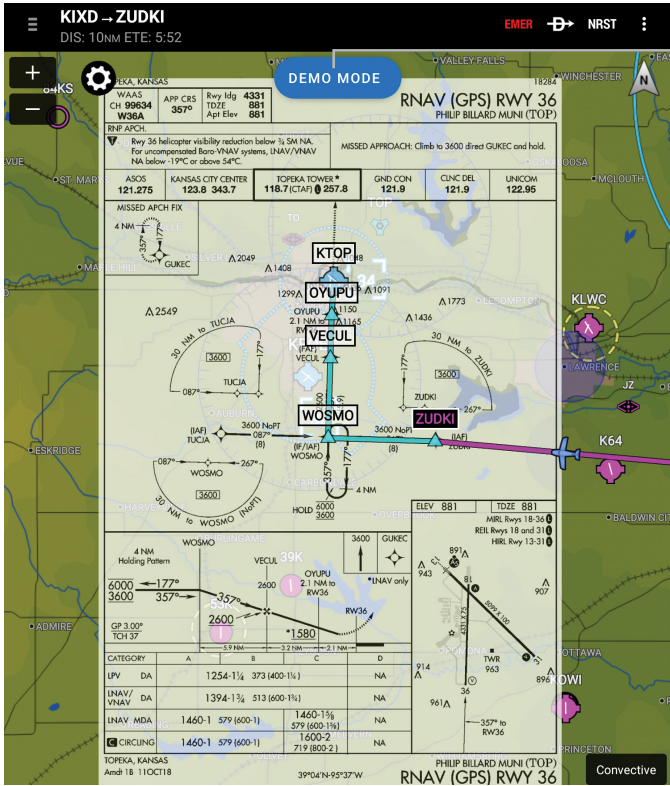


Touch to Adjust Settings

Demo Mode - Flight Plan

Entering Demo Mode - Logbook Track


- 1) If using the Classic Interface style, from any page, touch **Home > Demo Mode**.
- Or: If using the Tab Bar Interface style, from any page, touch **More > Demo Mode**.
- 2) Touch the **Logbook Track** tab.
- 3) Slide the blue circle to adjust Playback Settings.
- 4) Touch the route underneath Logbook Track to view additional route(s) and select desired route.
- 5) Touch **Playback Speed** to adjust as desired, then touch
- 6) Toggle the **Autolog Demo Flight** button, as desired.
- 7) From the Map page with the Demo Mode active, touch **DEMO MODE** at the top of the screen to adjust settings.

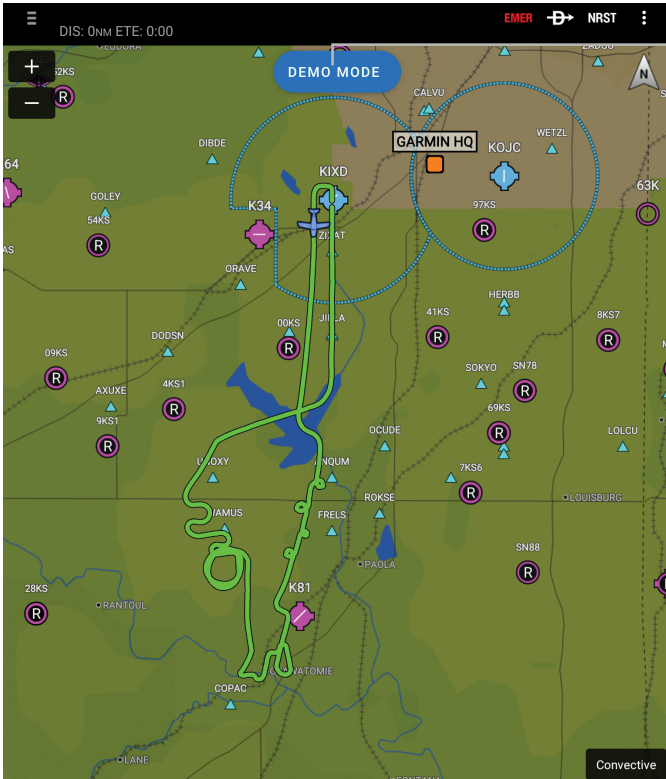


Demo Mode - Logbook Track

Exiting Demo Mode:

Touch **Home** > **Demo Mode**.

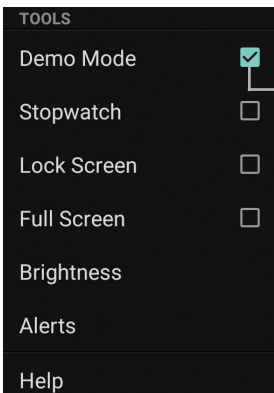


Touch to Exit Demo Mode

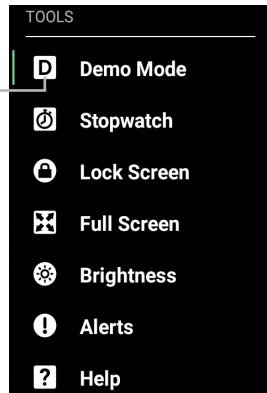

Exiting Demo Mode - Classic & Tab Bar

AIRPORT INFORMATION

Airport information is a downloadable product available free with a Garmin Pilot subscription from the Downloads section of the Settings Menu. Because Garmin Pilot will not automatically remove outdated charts, it is important to always ensure the latest Data Cycle has been downloaded prior to planning a flight. The downloaded cycle number and date range for every map data product is displayed on the Downloads Page and can be viewed by touching **Home > Downloads > U.S. Airport Information**.

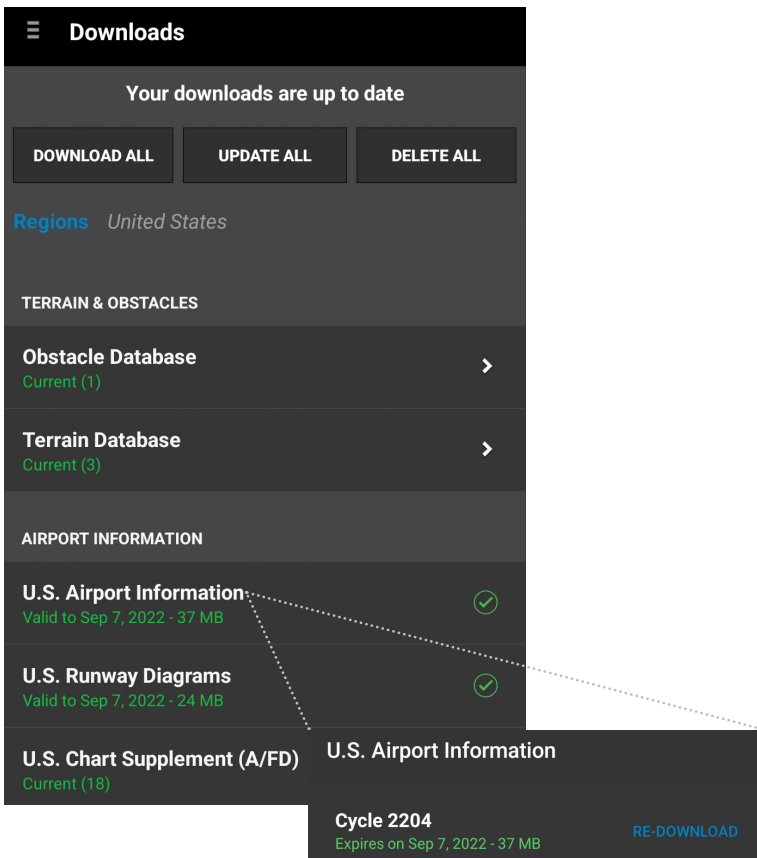

The screenshot shows the 'Downloads' menu in the Garmin Pilot app. At the top, it says 'Your downloads are up to date' and provides buttons for 'DOWNLOAD ALL', 'UPDATE ALL', and 'DELETE ALL'. Below this, the 'Regions' are set to 'United States'. Under the 'TERRAIN & OBSTACLES' section, there are 'Obstacle Database' (Current 1) and 'Terrain Database' (Current 3). Under the 'AIRPORT INFORMATION' section, there are three items: 'U.S. Airport Information' (Valid to Sep 7, 2022 - 37 MB), 'U.S. Runway Diagrams' (Valid to Sep 7, 2022 - 24 MB), and 'U.S. Chart Supplement (A/FD)' (Current 18). A callout box is shown over the 'U.S. Airport Information' item, displaying 'U.S. Airport Information', 'Cycle 2204', 'Expires on Sep 7, 2022 - 37 MB', and a 'RE-DOWNLOAD' button.




Downloads - Airport Information - Cycle Number & Expiration Date

Finding airport information is easy with Garmin Pilot, simply touch **Home** >  to view the Airport Information Page. The Airport Information Page is divided into two sections. The top of the page under the control bar is a banner menu containing airport information, such as;


<ul style="list-style-type: none"> • Public/Private/Military • Elevation (MSL) 	<ul style="list-style-type: none"> • Sunrise/Sunset (Local) • Zulu Time Offset 	<ul style="list-style-type: none"> • Best Runway for Current Weather
<ul style="list-style-type: none"> • Magnetic Variation • Longest Runway & Width 	<ul style="list-style-type: none"> • Pattern Altitude (MSL) • Wind Direction, Ceilings, & Visibility 	<ul style="list-style-type: none"> • ATIS, Clearance, Ground, Tower, Frequencies, etc.

Airport Info Banner Menu Items

The banner menu contains seven (7) buttons:

	Select Airport	Displays the Select Airport sub-menu, where the user can manually Search for an Airport, & view Recents, Relevant, &/or Nearest airports.
	Airport Diagram	Displays the runway(s) length and I.D.
	SafeTaxi	Displays the SafeTaxi page (Optional), which provides a geo-referenced airport diagram with graphical NOTAMs.
	View on Map	Displays the Airport on the Map Page in Garmin Pilot.
	View in Google Maps	Displays the Airport in the Google Maps program. Select 'Satellite' or 'Hybrid', then '3D' (if available).
	Chart Supplement	Displays the Airport, General, & Supplemental information.
	Fuel Prices	Displays the Fuel Prices Page, where data can be filtered by fuel type (Jet, 100LL, MOGAS), location, and price.

Airport Info Banner Menu Buttons

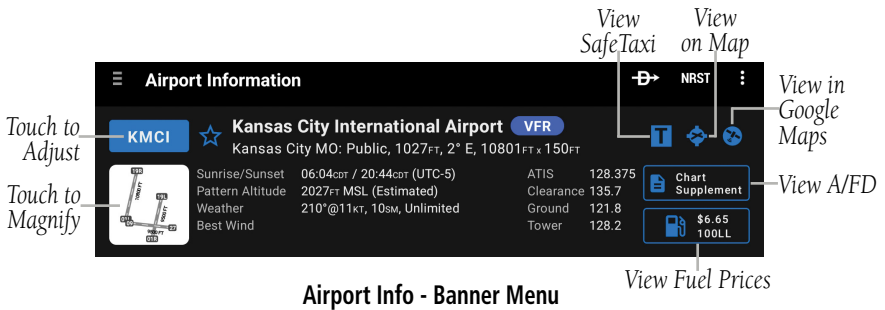


Airport Info - Banner Menu

From the Airport Information Page, touching the ICAO I.D. (e.g. **KMCI**) on the left side of the banner menu opens the Select Airport menu, which filters the airport data into three categories; Relevant, Search, and Nearest.


Selecting Relevant Airport(s):


- 1) Touch **Home** > > **KMCI** > **Relevant**.
- 2) Touch the desired airport from the Active Flight Plan or Recents list.
- 3) Touch the 'Back' button or **Close** to exit.

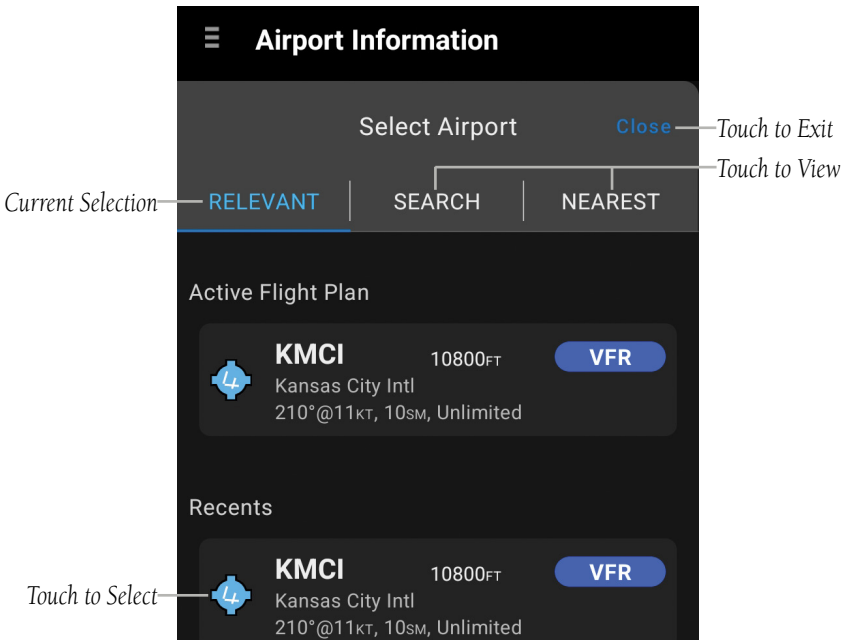

Airport Info Page - Banner Menu - Airport Search - Relevant


Searching for Airport(s):


- 1) Touch **Home** >  > **KMCI** > **Search**.
- 2) Manually enter text into the search box, then select the desired airport.
- 3) Touch the 'Back' button or **Close** to exit.

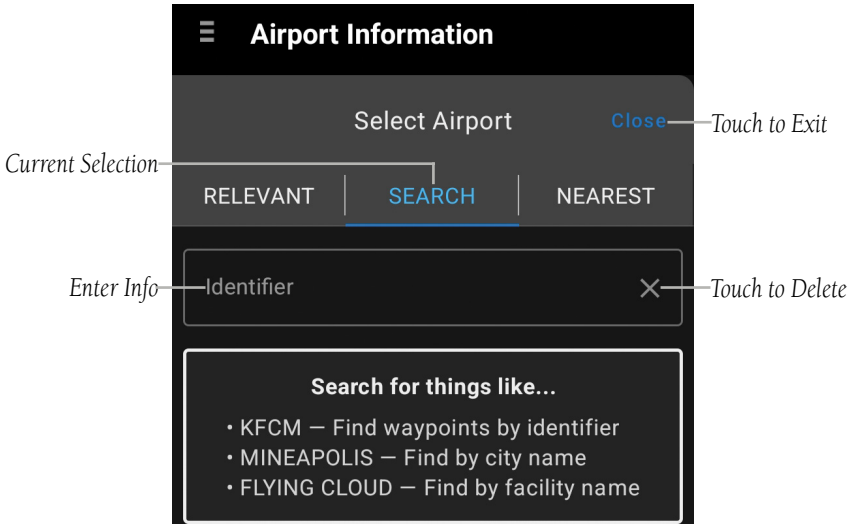

Airport Info Page - Banner Menu - Airport Search - Search

Selecting Nearest Airport(s):

- 1) Touch **Home** >  > **KMCI** > **Nearest**.
- 2) Touch the 'Arrow' to view airports Nearest the current GPS position
- Or:** Touch the 'Near XXXX' (e.g. KMCI) to view airports Nearest the current airport selected in Garmin Pilot.
- 3) Towards the bottom of the list, touch **Public Airports** or **All Airports**, as desired.
- 4) Touch the desired airport from the Nearest list.
- 5) Touch the 'Back' button or **Close** to exit.

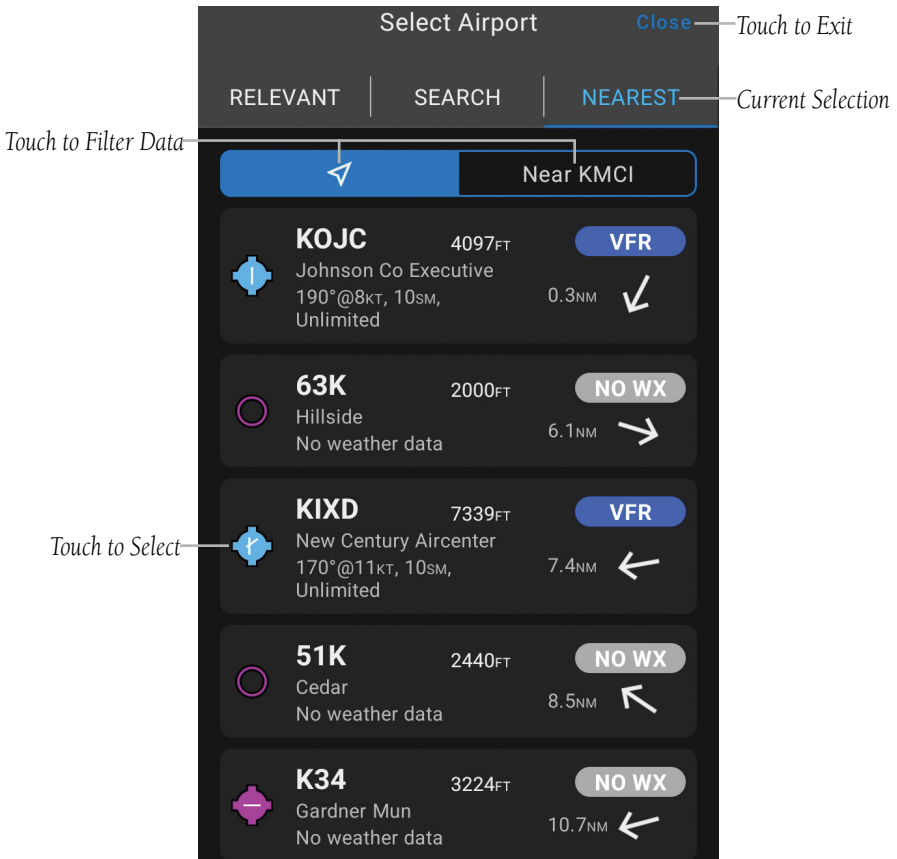

Airport Info Page - Banner Menu - Airport Search - Nearest

Viewing Chart Supplement:

- 1) From any page, touch Home > > Chart Supplement
- 2) Touch the airport I.D., (e.g. KMCI) to view A/FD information.
- 3) Touch **General** to view the Airport Legend.
- 4) Touch **Supplemental** to view Special Notices, (e.g. Washington DC FRZ).
- 5) Touch or the 'Back' button to exit.

Airport Information NRST

Touch to Exit Chart Supplement Touch to View

Current Tab KMCI GENERAL SUPPLEMENTAL

MISSOURI 241

KANSAS CITY INTL. (MCI) (WMO) 38° 18' N 94° 42' W UTO-64-8071 N39°17.86' W94°42.83' **KANSAS CITY**
N-5C L-10L A
IMP AD

1027 B LRA Class I, ARFF Index C NOTAM FILE MCI

RWY 01L-10R H1080X150 (ASPH-GRVD) 5-75, D-204, 25-175,
20-400, 20202-450 PCN 93 F3/DW/T HIRL CL

RWY 01L MALSR, TDZL, PAPI(P4R)—GA 3.0° TCH 78' RVR-TMR
0.4% down

RWY 10R ALSF2, TDZL, PAPI(P4R)—GA 3.0° TCH 80' RVR-TMR Rgt
ttc 0.3% up

RWY 09-27 H9500X150 (ASPH-GRVD) 5-75, D-125, 25-159,
20-180, 20202-260 PCN 65 F3/DW/T HIRL

RWY 09 MALSR, RVR-TR

RWY 27 MALSR, PAPI(P4L)—GA 3.0° TCH 72' RVR-TR Rgt ttc
0.3% down

RWY 01R-10L H9500X150 (CONC-GRVD) 5-75, D-204, 25-175,
20-400, 20202-450 PCN 71 F3/DW/T HIRL CL

RWY 10R ALSF2, TDZL, PAPI(P4R)—GA 3.0° TCH 74' RVR-TMR

RWY 10L MALSR, TDZL, RVR-TMR 0.6% up

REWIRED/REPLACED DISTANCE INFORMATION

RWY 10L-TORA-10801 TODA-10801 ASDA-10801 LDA-10801

RWY 01R-TORA-9500 TODA-9500 ASDA-9500 LDA-9500

RWY 09 TORA-9501 TODA-9501 ASDA-9501 LDA-9501

RWY 10L-TORA-9500 TODA-9500 ASDA-9500 LDA-9500

RWY 10R-TORA-10801 TODA-10801 ASDA-10801 LDA-10801

RWY 27 TORA-9501 TODA-9501 ASDA-9501 LDA-9501

SERVICE FUEL 100LL, JET A

NOISE Noise abatement procedures in effect 0400-1200Z with landing on Runways 01L and 19L, takeoffs on Runways 01R and 19R

AIRPORT REMARKS: Attended continuously. Waterfowl on and in/ovt airt. ASSC in use. Operate transponders with altitude reporting mode and ADS-B (if equipped) enabled on all airport surfaces. CE tower has limited visibility on numerous gates at all 3 terminals. Windshield wiper system on aprt. Pushback clearance required at gates 43 thru 57 in terminal B and gates 68 thru 77 in terminal C, pushback from these gates enters Taxi D. When using hi-speed exits C5 and C6 continue until first parallel taxi, then use extreme care when turning in excess of 90 degrees. Design group V and VI npr an aprt excpt on Taxi D between Taxi J and Taxi I. Taxi B bty Taxi B and E/EDCA aprt; cockpit over crnth steering required. PPR to park at airline gates ctc respective airline. No actg parking on postal apron. Flight Notification Service (ADCLUS) avtd at gate 50. Military actg may be charged ramp/parking fees. Taxi I bty Taxi LI and Taxi D wingspan restriction of 118'. Taxi C2 bty Taxi C3 and Taxi C1 wingspan restriction of 118'.

AIRPORT MANAGER: 816-243-5248

WEATHER DATA SOURCES: ASOS (816) 329-2808 LLWAS, TDWR

COMMUNICATIONS: B-ARTS 128.319 816-329-2729 UNICOM 122.95
RCO 122.65 (COLUMBIA RADIO)

APP CON: 120.195

INTERNATIONAL TOWER 128.2 GND CON 121.8 CLNC DEL 135.7

DEP CON 124.7 (191)-0099 123.95 (1010)-1909

CPDLC (LOGGON KUSA)

PISC

AIRSPACE CLASS B See VFR Terminal Area Chart.

RADIO AIDS TO NAVIGATION: NOTAM FILE MCI.

HI IN VFR/ENR 113.25 MCI Chan 75W) N39°17.12' W94°44.22' 051° 1.3 NM to Rd. 1017/S.E.

LS/DME 110.5 I-DOT Chan 42 Ray 01L, Class IT.

LS/DME 110.75 I-PW Chan 44W) Ray 01R, Class IIE.

LS/DME 109.7 I-RN Chan 34 Ray 09, Class IS.

LS/DME 109.55 I-DWH Chan 32W) Ray 19L, Class IE.



LS/DME 109.1 I-PAJ Chan 28 Ray 19R, Class IIE.


LS/DME 109.7 I-UDY Chan 34 Ray 27, Class IE.

MCI, 14 JUL 2022 to 8 SEP 2022

Airport Info Page - Banner Menu - Chart Supplement - KMCI

Viewing Fuel Prices:

- 1) From any page, touch Home >  >  \$6.65 100LL
- 2) Select **Jet**, **100LL**, or **MOGAS**, as desired.
- 3) Touch the '\$' to sort fuel providers by fuel price.
- 4) Touch the arrow to sort fuel providers by distance from the selected airport.
- 5) Touch **Close** or the 'Back' button to exit.

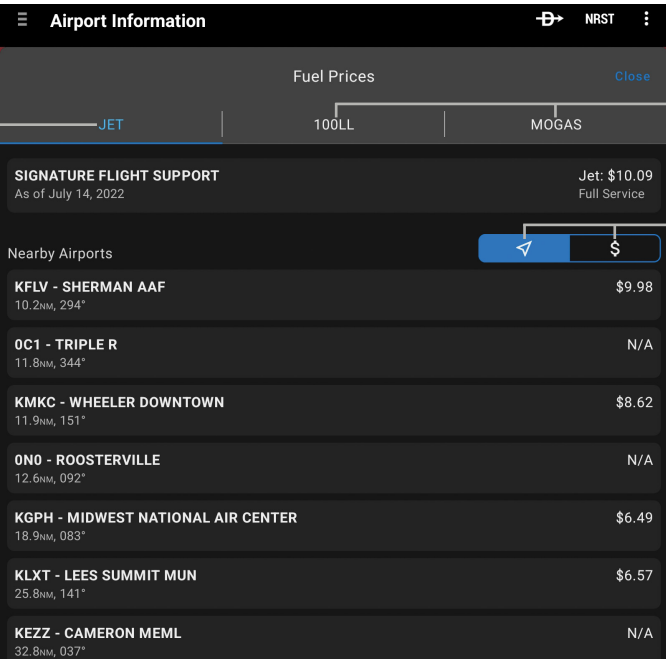

Current Tab → JET

Fuel Prices Close

100LL MOGAS



SIGNATURE FLIGHT SUPPORT Jet: \$10.09
As of July 14, 2022 Full Service


Nearby Airports Touch to Sort

Airport	Distance	Fuel Price
KFLV - SHERMAN AAF	10.2NM, 294°	\$9.98
0C1 - TRIPLE R	11.8NM, 344°	N/A
KMKC - WHEELER DOWNTOWN	11.9NM, 151°	\$8.62
0N0 - ROOSTERVILLE	12.6NM, 092°	N/A
KGPH - MIDWEST NATIONAL AIR CENTER	18.9NM, 083°	\$6.49
KLXT - LEES SUMMIT MUN	25.8NM, 141°	\$6.57
KEZZ - CAMERON MEML	32.8NM, 037°	N/A

Airport Info Page - Banner Menu - Fuel Prices

Viewing SafeTaxi (Subscription Required):

- 1) From any page, touch **Home** >  > .
 - 2) Toggle 'NOTAMs On/Off', as desired, then touch NOTAMs to view information, if necessary.
- Or:** Touch the graphical NOTAM to view details.
- 3) Touch the 'Back' button to exit.

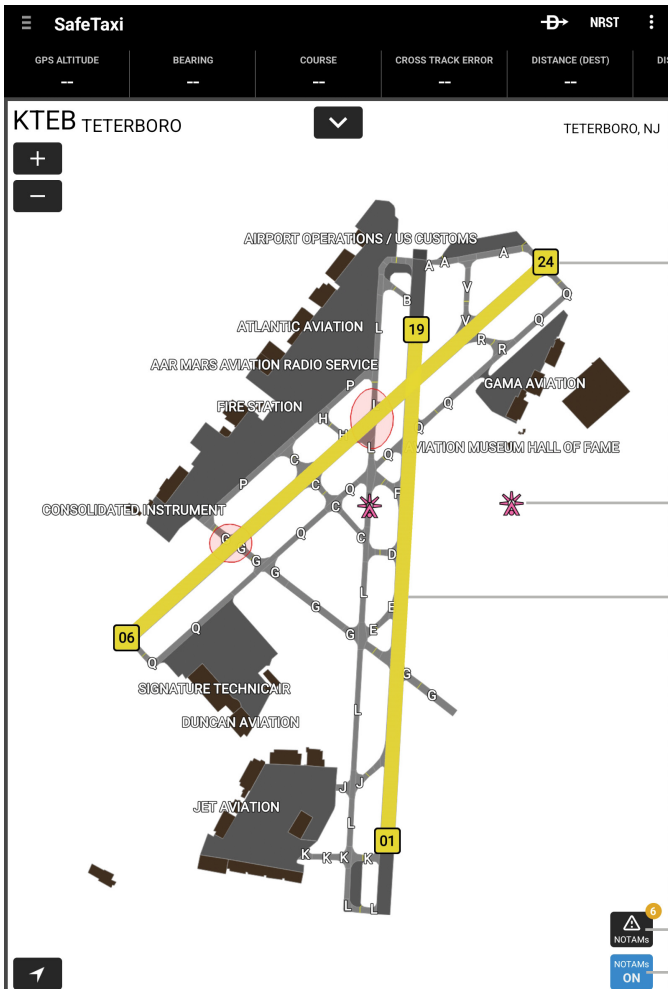

Touch
to View
NOTAMs

Touch to
Toggle
On/Off

Airport Info Page - Banner Menu - SafeTaxi





Viewing Airport Using Garmin Pilot Map:


From any page, touch **Home** >  > .

Viewing Airport Using Google Maps:



NOTE: Google Map functionality requires an active Wi-Fi or cellular connection.

- 1) From any page, touch **Home** >  > .
- 2) Touch **Satellite** or **Hybrid**.
- 3) Touch  to view in the Google Maps program.
- 4) Touch '3D' (if available) or '2D' to toggle display.
- 5) Touch  to view Map Controls.
- 6) Touch the 'Back' button to exit.

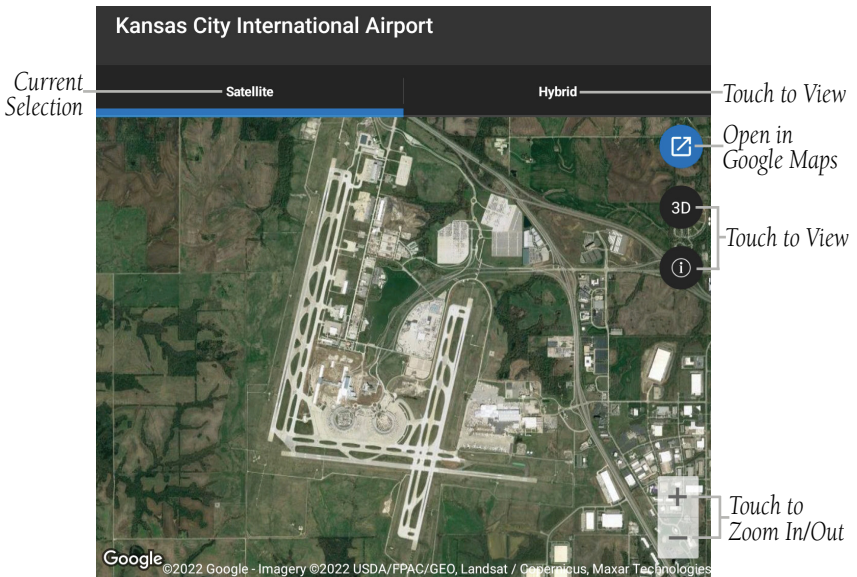

Airport Info Page - Banner Menu - View in Google Maps

Immediately below the banner menu are six (6) main selectable tabs for viewing detailed airport information; Info, Runway, Chart, FBO, Weather, and NOTAM. Many of the main tabs also provide a horizontal navigation bar to view additional information.



NOTE: Garmin Pilot references the FAA list of Clearance Delivery phone numbers as an option when receiving a clearance, to help improve communication and efficiency. Not all airports will have a Clearance Delivery phone number listed. The phone numbers will be published as they are listed in the chart supplement

Banner Menu

Current Tabs

Touch to View

Category	Frequency
ATIS	
ATIS	128.375
CLEARANCE DELIVERY	
INTERNATIONAL CLEARANCE	135.7
GROUND CONTROL	
INTERNATIONAL GROUND (SECONDARY)	121.65
INTERNATIONAL GROUND	121.8
TOWER	
INTERNATIONAL TOWER (SECONDARY)	125.75
INTERNATIONAL TOWER	128.2
UNICOM	
INTERNATIONAL UNICOM	122.95
DEPARTURE	
KANSAS CITY DEPARTURE 009-189*	123.95
KANSAS CITY DEPARTURE 190-009*	124.7

Airport Info Page - Info - Frequencies

AIRPORT INFO TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The first tab is **Info**, which contains the following additional tabs; Frequencies, General, NAVAIDs, Remarks, and Services.

Viewing Airport Info:

From any page, touch **Home** >  > **Info**.

FREQUENCIES


Selecting **Frequencies** on the horizontal navigation bar displays the following information:

• ATIS	• Tower	• Approach
• Clearance Delivery	• UNICOM	• Class B
• Ground Control	• Departure	• Other (e.g. FSS)

Airport Information Page - Info Tab - Frequencies

Viewing Frequencies:

- 1) From any page, touch **Home** > > **Info**.
- 2) Touch **Frequencies** on the horizontal navigation bar. Scroll to view additional information, if necessary.

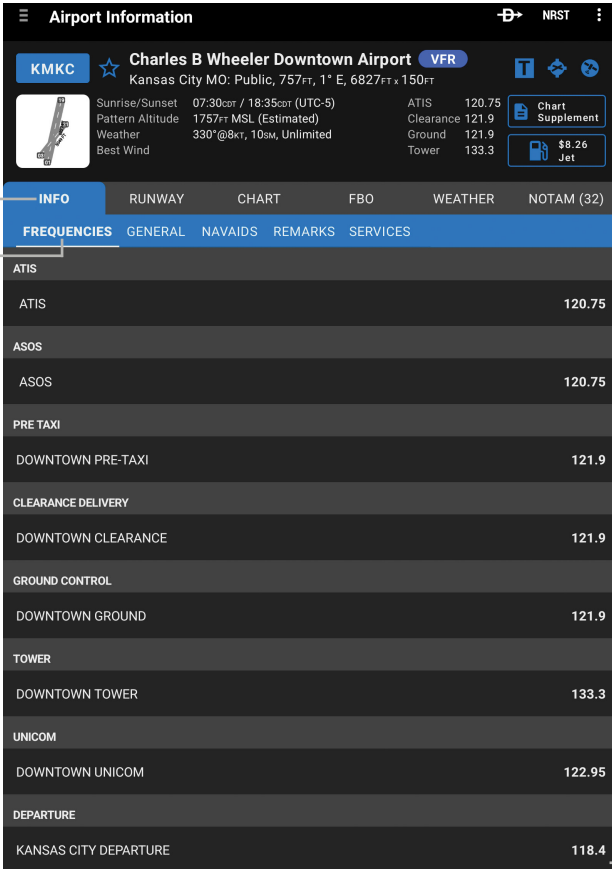

Airport Info Page - Info Tab - Frequencies

GENERAL


Selecting **General** on the horizontal navigation bar displays the following information:

• Elevation	• Sectional	• Handling Required
• Magnetic Variation	• Flight Service	• Slots Required
• Lat/Lon	• Hours	• Phone Numbers
• Sunrise/Sunset	• Fees	• Other (e.g. website)
• Time Offset	• Customs Available	

Airport Information Page - Info Tab - General

Viewing General Airport Information:

- 1) From any page, touch **Home** > > **Info**.
- 2) Touch **General** on the horizontal navigation bar. Scroll to view additional information, if necessary.

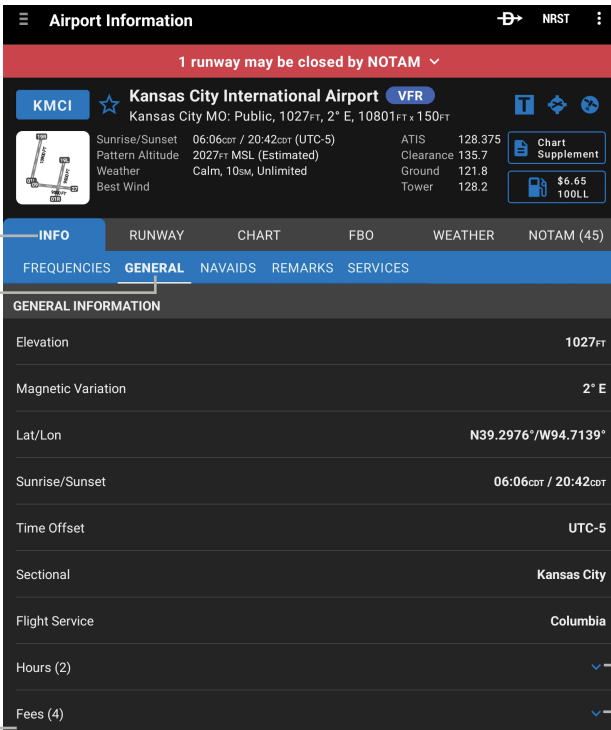

Airport Info Page - Info Tab - General


NAVAIDs


Selecting **NAVAIDs** on the horizontal navigation bar displays the following information:

• Type (e.g. NDB, VOT, VORTAC)	• Radial From
• I.D.	• Navigation Frequency
• Distance From (nm)	

Airport Information Page - Info Tab - NAVAIDs

Viewing NAVAIDs:

- 1) From any page, touch **Home** >  > **Info**.
- 2) Touch **NAVAIDs** on the horizontal navigation bar. Scroll to view additional information, if necessary.

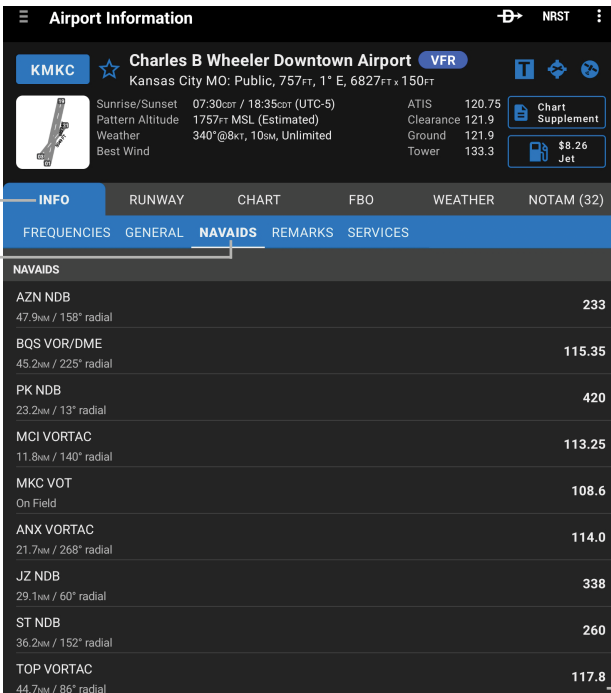

Airport Info Page - Info Tab - NAVAIDs

REMARKS


Selecting **Remarks** on the horizontal navigation bar displays some of the following information:

• Equipment Requirements	• Noise Abatement Procedures
• Taxiway Limits/Recommendations	• Pushback Clearance Details
• Gate Info	• Windshear Alert System Status

Airport Information Page - Info Tab - Remarks

Viewing Remarks:

- 1) From any page, touch **Home** > > **Info**.
- 2) Touch **Remarks** on the horizontal navigation bar. Scroll to view additional information, if necessary.

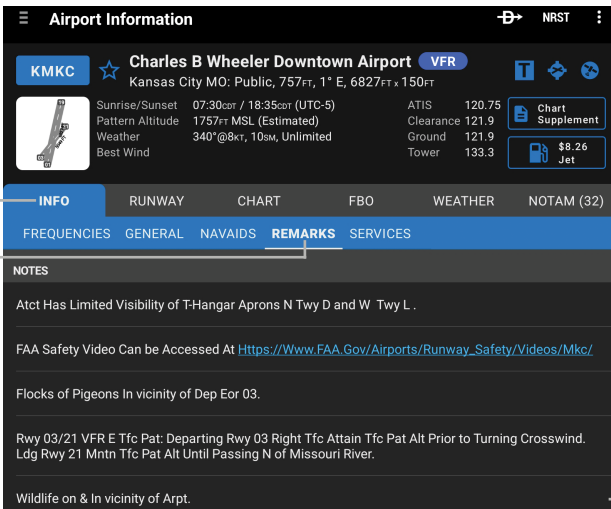

Current Tabs


Scroll to View Info


Airport Info Page - Info Tab - Remarks

SERVICES

Selecting **Services** on the horizontal navigation bar displays details about Customs (if available).

Viewing Services:

- 1) From any page, touch **Home** >  > **Info**.
- 2) Touch **Services** on the horizontal navigation bar. Scroll to view additional information, if necessary.

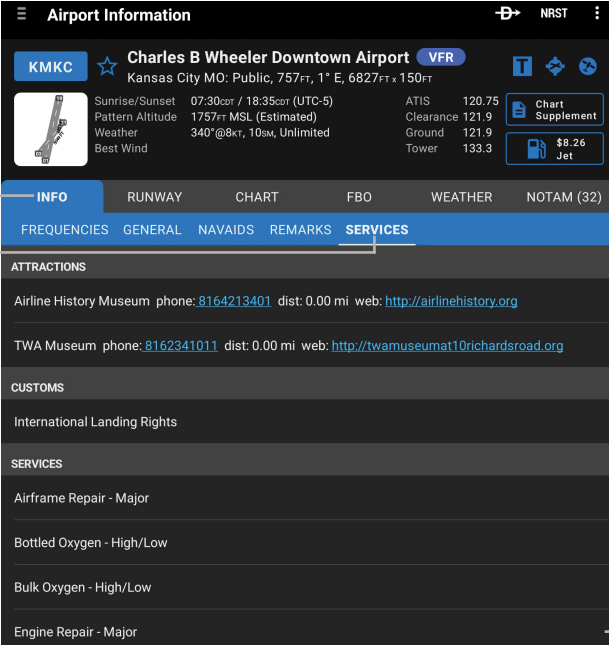

The screenshot shows the 'Airport Information' page for Charles B Wheeler Downtown Airport (KMKC). The 'SERVICES' tab is selected and highlighted in blue. The page content includes sections for 'ATTRACTIONS', 'CUSTOMS', and 'SERVICES'. The 'SERVICES' section lists: Airframe Repair - Major, Bottled Oxygen - High/Low, Bulk Oxygen - High/Low, and Engine Repair - Major. A label 'Current Tabs' points to the horizontal navigation bar, and a label 'Scroll to View Info' points to the 'SERVICES' section.

Category	Item
ATTRACTIONS	Airline History Museum phone: 8164213401 dist: 0.00 mi web: http://airlinehistory.org
ATTRACTIONS	TWA Museum phone: 8162341011 dist: 0.00 mi web: http://twamuseumat10richardsroad.org
CUSTOMS	International Landing Rights
SERVICES	Airframe Repair - Major
SERVICES	Bottled Oxygen - High/Low
SERVICES	Bulk Oxygen - High/Low
SERVICES	Engine Repair - Major

Airport Info Page - Info Tab - Services

Scroll to View Info


AIRPORT RUNWAY TAB




NOTE: If Garmin Pilot has not recently connected to weather data services, either over Wi-Fi, cellular, SiriusXM, or using other avionics, weather data may be outdated and unreliable.

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The second tab is **Runway**, which displays the runway I.D., length, width, traffic pattern (Left unless stated otherwise), lighting, type of surface (e.g. asphalt) and conditions (e.g. grooved, fair condition).

The Airport Information page recommends runways based on winds and preferences for surface type and runway dimensions. This recommended Best Runway appears in the airport summary section of the Airport Information page.

To set the preferred runway surface type and runway length, touch **Home** >  > **General**.

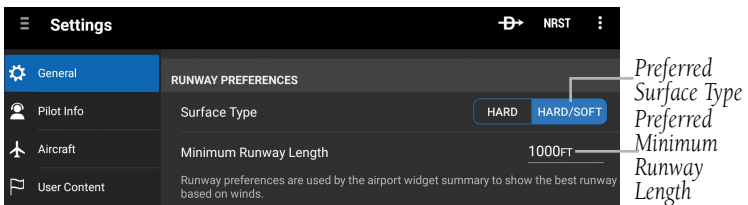

General - Settings - Runway Preferences

The Runways tab also shows winds on that runway, sourced from current weather reports. This wind information is shown divided into two components: headwind/tailwind magnitude, and crosswind direction and magnitude.

Viewing Runway Info:

From any page, touch **Home** > > **Runway**.

Airport Information NRST

4 runways may be closed by NOTAM

KBOS **General Edward Lawrence Logan Intern...** LIFR

Boston MA: Public, 19°FT, 15° W, 10083FT x 150FT

Sunrise/Sunset: 07:09EDT / 17:45EDT (UTC-4) ATIS: 135
Pattern Altitude: 1019FT MSL (Estimated) Clearance: 121.65
Weather: Fog, 1/4sm, 300FT Ground: 121.75
Best Wind Tower: 128.8

Chart Supplement \$11.60
Jet

INFO **RUNWAY** CHART FBO WEATHER NOTAM (44)

15R/33L
10083FT x 150FT
15R: \uparrow 2KT \rightarrow 7KT
33L: \downarrow 2KT \leftarrow 7KT
Lights: Full Time

Surface: Asphalt, Grooved, In Excellent Condition
 Δ FICON 5/5/5 100 PCT WET

Obstructions: Runway 15r: Trees, 140 Ft Left Of Center, 62 Ft High, 3,040 Ft From End, 45:1 Clearance Slope
Runway 33l: Boat, 160 Ft High, 5,075 Ft From End, 30:1 Clearance Slope

04R/22L RWY CLSD
10006FT x 150FT
04R: \downarrow 7KT \leftarrow 1KT
22L: \uparrow 7KT \rightarrow 1KT
Lights: Full Time

Surface: Asphalt, Grooved, In Good Condition
 Δ FICON 5/5/5 100 PCT WET

Obstructions: Runway 04r: Boat, 157 Ft High, 1,550 Ft From End, 8:1 Clearance Slope
Runway 22l: Boat, 45 Ft High, 525 Ft From End, 7:1 Clearance Slope

04L/22R RWY CLSD
7864FT x 150FT
04L: \downarrow 7KT \leftarrow 1KT
22R: \uparrow 7KT \rightarrow 1KT
Lights: Full Time

Airport Info Page - Info Tab - Runway - FICON

AIRPORT CHART TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The third tab is **Chart**, which displays the following information:









NOTE: Terminal procedures (e.g. SIDs, STARs, instrument approach procedures, airport diagrams, Hot Spots, and Take-off Minimums) are available for selection from the Airport Information Page. Any charts that are not geo-referenced will open in the default PDF document viewer.

• Airport Diagram	• Takeoff Minimums
• Climb/Descent Table	• Instrument Approaches
• Hot Spot	• Arrival Procedures
• INOP Components	• Departure Procedures

Airport Information Page - Chart Tab

Viewing and Organizing Procedures:

- 1) From any page, touch **Home** > .
 - 2) Touch the Procedures Tab. All available charts and procedures are shown including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by  have already been downloaded to the device.
 - 3) Touch the desired chart to view.
- Or:** To organize charts
- 4) Touch  to create a Chart Binder or add to an existing binder.
 - 5) Touch  and enter a Binder Name or select from the list of available binders.
 - 6) Touch  for each additional chart to add to a binder.

1 runway may be closed by NOTAM

KMCI **Kansas City International Airport** **VFR**
Kansas City MO: Public, 1027FT, 2° E, 10801FT, 150FT

Sunrise/Sunset 06:06cdt / 20:42cdt (UTC-5) ATIS 128.375
Pattern Altitude 2027FT MSL (Estimated) Clearance 135.7
Weather Calm, 10sm, Unlimited Ground 121.8
Best Wind Tower 128.2

Chart Supplement
\$6.65
100LL

INFO RUNWAY **CHART** FBO WEATHER NOTAM (45)

AIRPORT INFORMATION

- AIRPORT DIAGRAM APD **Map** **>**
- CLIMB/DESCENT TABLE MIN **>**
- HOT SPOT HOT **>**
- INOP COMPONENTS MIN **>**
- TAKEOFF MINIMUMS MIN **>**

INSTRUMENT APPROACHES

- ILS OR LOC RWY 01L IAP **RWY CLSD** **Map** **>**
- ILS OR LOC RWY 01R IAP **RWY CLSD** **Map** **>**

Current Tab

Successfully Downloaded

NOTAM

Touch to View on Map

Touch to Add to Binder

Airport Info Page - Chart Tab

AIRPORT FBO TAB


The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The fourth tab is **FBO**, which displays the following information:

• Fuel Providers	• Amenities (e.g. Courtesy Car, Hangar)
• FBO Name & Phone Number	• Fuel Prices
• ARINC Frequency	• Rental Car Agencies
• Unicom Frequency	• Ability to Edit/Configure Icons

Airport Information Page - FBO Tab

Viewing FBO:

- 1) From any page, touch **Home** > > **FBO**.
- 2) Touch the FBO phone number to place a call, if desired.
- 3) Touch any icon to view additional information.

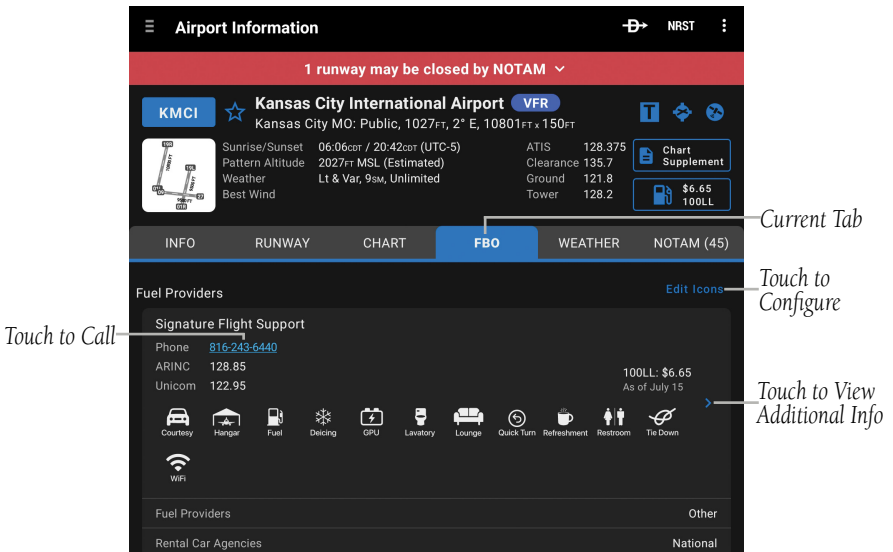


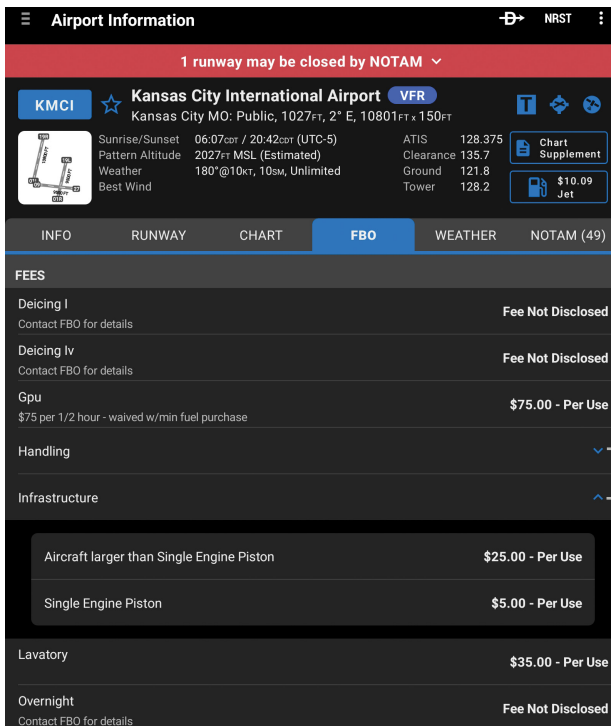
Airport Info Page - FBO Tab

FBO FEES


A coalition of industry leaders, including AOPA, EAA, GAMA, NATA, NBAA and HAI, have called for Fee Transparency, asking FBOs to publish their pricing. FBO fees are displayed on the FBO tab of the Airport Information Page.

Viewing FBO Fees:

- 1) From any page, touch **Home** >  > **FBO**.
- 2) Touch the desired FBO.
- 3) Scroll down to the 'FEES' section.



1 runway may be closed by NOTAM ▾

KMCI  **Kansas City International Airport** **VFR**
 Kansas City MO: Public, 1027FT, 2° E, 10801FT x 150FT

Sunrise/Sunset 06:07^{CDT} / 20:42^{CDT} (UTC-5) ATIS 128.375
 Pattern Altitude 2027FT MSL (Estimated) Clearance 135.7
 Weather 180°@10KT, 10SM, Unlimited Ground 121.8
 Best Wind Tower 128.2


FEES

Deicing I Contact FBO for details	Fee Not Disclosed
Deicing Iv Contact FBO for details	Fee Not Disclosed
Gpu \$75 per 1/2 hour - waived w/min fuel purchase	\$75.00 - Per Use
Handling	▾ Touch to Expand/Collapse
Infrastructure	▴ Touch to Expand/Collapse
Aircraft larger than Single Engine Piston	\$25.00 - Per Use
Single Engine Piston	\$5.00 - Per Use
Lavatory	\$35.00 - Per Use
Overnight Contact FBO for details	Fee Not Disclosed

Airport Info Page - FBO Tab - Fees

Configure FBO Settings:

- 1) From any page, touch **Home** > > **FBO** > **Edit Icons**.
- 2) Touch next to **Show Fuel Providers** to toggle display On/Off.
- 3) Touch next to **Show Rental Car Providers** to toggle display On/Off.
- 4) Touch any of the icons to toggle display On/Off. When toggled 'On', the icon will be displayed if the amenity is available at the selected FBO.
- 5) Touch the 'Back' button to exit.

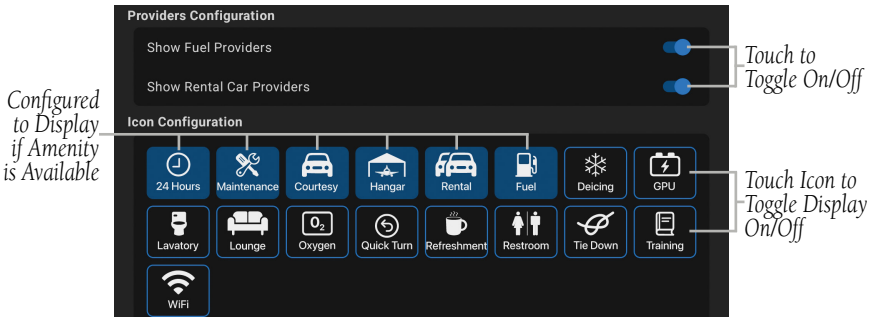

Airport Info Page - FBO Tab - Configure

AIRPORT WEATHER TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The fifth tab is **Weather**, which contains the following additional tabs; METAR, TAF, MOS, Winds Aloft, Forecast Discussion, PIREP, & AIR/SIGMET:

Viewing Weather Info:

From any page, touch **Home** > > **Weather**.

METAR

Selecting **METAR** on the horizontal navigation bar displays the following information:

• Wind	• WX	• Altimeter
• Ceiling	• Temp	• Density Altitude
• Visibility	• Dewpoint	• Clouds

Airport Information Page - Weather Tab - METAR

Viewing METAR:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **METAR** on the horizontal navigation bar. Scroll to view additional information, if necessary.
- 3) Touch to expand the Clouds section and view additional info.

1 runway may be closed by NOTAM

KMCI **Kansas City International Airport** **VFR**
 Kansas City MO: Public, 1027FT, 2° E, 10801FT x 150FT

Sunrise/Sunset 06:06cst / 20:42cst (UTC-5) ATIS 128.375
 Pattern Altitude 2027FT MSL (Estimated) Clearance 135.7
 Weather 320°@3kt, 9sm, Unlimited Ground 121.8
 Best Wind Tower 128.2

Chart Supplement
 \$6.65
 100LL

INFO RUNWAY CHART FBO **WEATHER** NOTAM (46)

Touch to View — **METAR** TAF MOS WINDS ALOFT FORECAST DISCUSSION PIREP AIR/SI

KANSAS CITY INTL **VFR**

Wind 320°@3KT
 Ceiling Unlimited
 Visibility 9SM
 WX ---
 Temp 86°F (ISA+31°F)
 Dewpoint 68°F
 Altimeter 29.99IN
 Density Alt 3,217FT
 Clouds

3500FT Scattered
 7000FT Scattered

WX Data Source, Age, & Location: KMCI 181653Z 32003KT 9SM SCT035 SCT070 30/20 A2999 RMK AO2 SLP143 TCU DSNT SE-S T03000200
 Internet | 38min old | On Airport

Airport Info Page - Weather Tab - METAR

TAF


Selecting **TAF** on the horizontal navigation bar displays the following information:

• Validity Timestamp	• Clouds
• Wind	• Expiration Date & Time
• Visibility	• Raw Data

Airport Information Page - Weather Tab - TAF

Viewing TAF:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **TAF** on the horizontal navigation bar. Scroll to view additional information, if necessary.

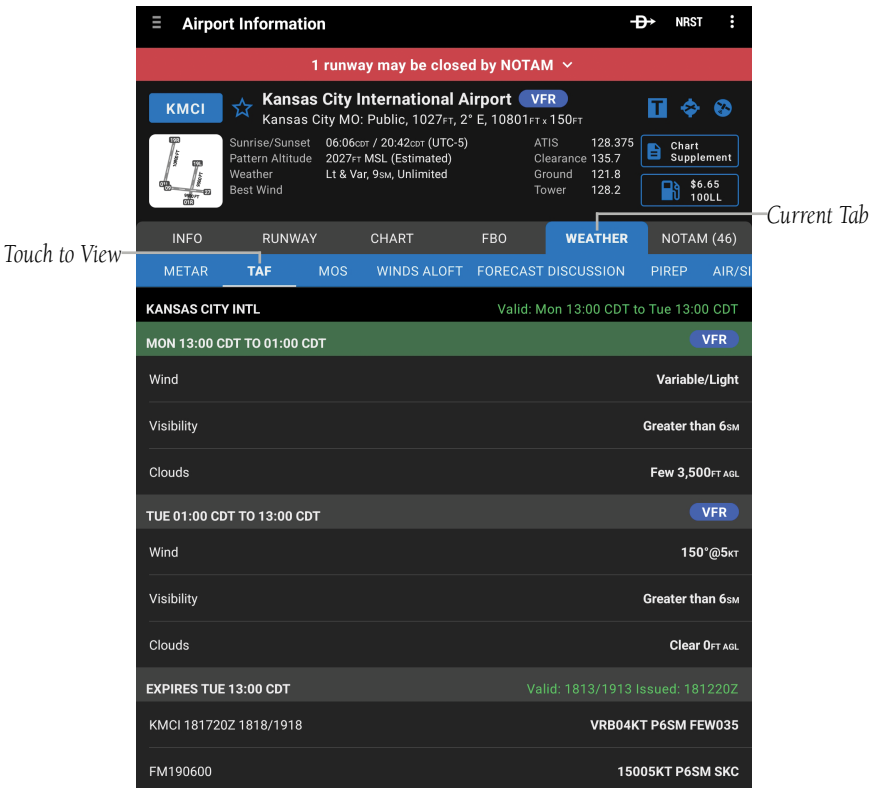

Airport Info Page - Weather Tab - TAF

MOS


Selecting **MOS** on the horizontal navigation bar displays the following information:

• Validity Timestamp	• Clouds
• Wind	• Temperature
• Visibility	• Dew Point

Airport Information Page - Weather Tab - MOS

Viewing MOS:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **MOS** on the horizontal navigation bar. Scroll to view additional information, if necessary.

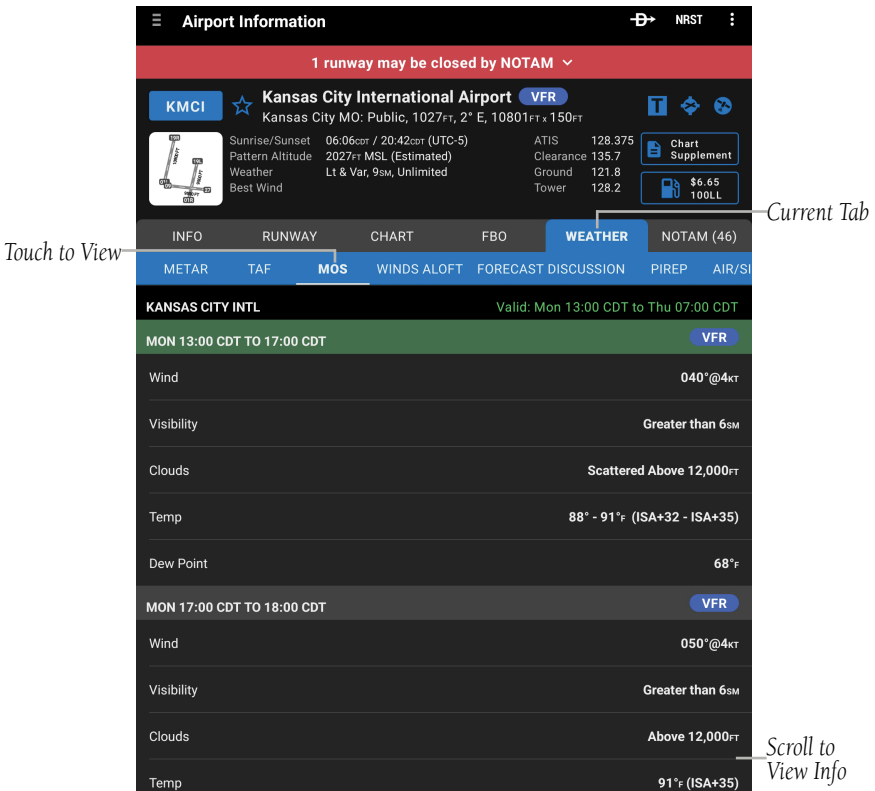

Airport Info Page - Weather Tab - MOS

WINDS ALOFT

Selecting **Winds Aloft** on the horizontal navigation bar displays the following information:

• Lat/Lon	• Wind Direction & Velocity
• Forecast Date Range	• Temperature
• Altitude	• ISA Temperature

Airport Information Page - Weather Tab - Winds Aloft

Viewing Winds Aloft:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **Winds Aloft** on the horizontal navigation bar. Touch **Previous** and/or **Next** to view additional information. Scroll to view additional information, if necessary.

1 runway may be closed by NOTAM

KMCI **Kansas City International Airport** **VFR**
 Kansas City MO: Public, 1027FT, 2° E, 10801FT x 150FT

Sunrise/Sunset 06:06cdt / 20:42cdt (UTC-5) ATIS 128.375
 Pattern Altitude 2027FT MSL (Estimated) Clearance 135.7
 Weather Lt & Var, 9SM, Unlimited Ground 121.8
 Best Wind Tower 128.2

Chart Supplement \$6.65
 100LL

INFO RUNWAY CHART FBO **WEATHER** NOTAM (46)

METAR TAF MOS **WINDS ALOFT** FORECAST DISCUSSION PIREP AIR/S

39.57°,-94.57°

Previous Jul 18, 10:00 - Jul 18, 13:00 CDT Next

3000FT	20° @ 5KT	68°F (ISA+20)
6000FT	30° @ 12KT	63°F (ISA+25)
9000FT	0° @ 17KT	54°F (ISA+27)
12000FT	360° @ 17KT	46°F (ISA+31)
15000FT	350° @ 25KT	39°F (ISA+34)
18000FT	0° @ 32KT	30°F (ISA+36)
21000FT	360° @ 40KT	21°F (ISA+38)
24000FT	350° @ 42KT	9°F (ISA+36)
27000FT	350° @ 42KT	-6°F (ISA+32)
30000FT	350° @ 50KT	-18°F (ISA+31)
33000FT	350° @ 52KT	-31°F (ISA+29)

Airport Info Page - Weather Tab - Winds Aloft

FORECAST DISCUSSION


Selecting **Forecast Discussion** on the horizontal navigation bar displays the following information:

<ul style="list-style-type: none"> • Name/Location of Meteorological Support 	<ul style="list-style-type: none"> • Aviation Advisories
<ul style="list-style-type: none"> • Textural Discussion 	<ul style="list-style-type: none"> • EAX Watches/Warnings/Advisories

Airport Information Page - Weather Tab - Forecast Discussion

Viewing Forecast Discussion:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **Forecast Discussion** on the horizontal navigation bar. Scroll to view additional information, if necessary.

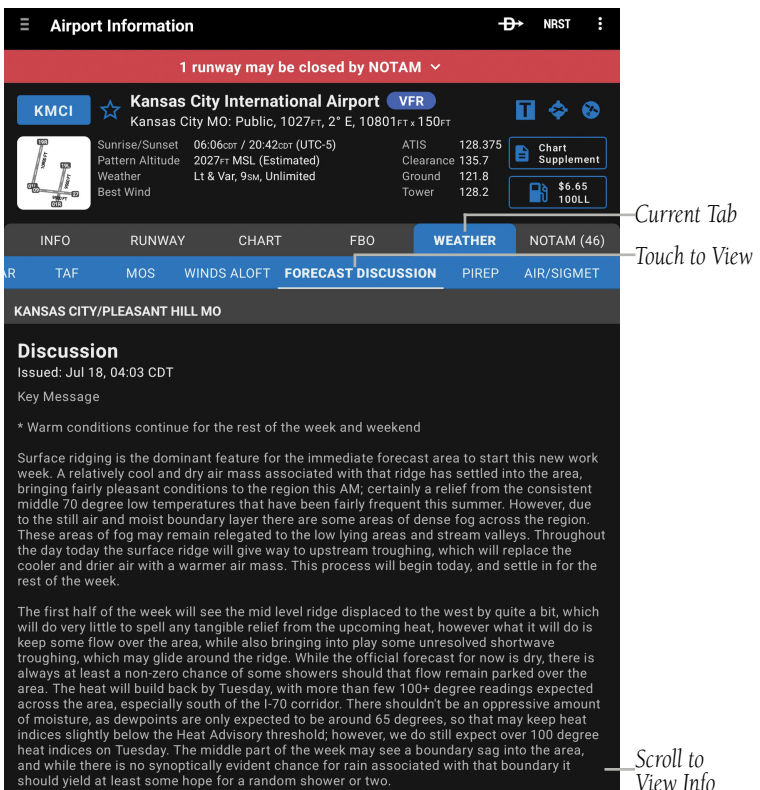

Airport Info Page - Weather Tab - Forecast Discussion


PIREP


Selecting **PIREP** on the horizontal navigation bar displays the following information:

• Type of PIREP (e.g. Routine)	• Aircraft
• Location	• Sky
• Time	• Remark

Airport Information Page - Weather Tab - PIREP

Viewing PIREP:

- 1) From any page, touch **Home** >  > **Weather**.
- 2) Touch **PIREP** on the horizontal navigation bar. Scroll to view additional information, if necessary.

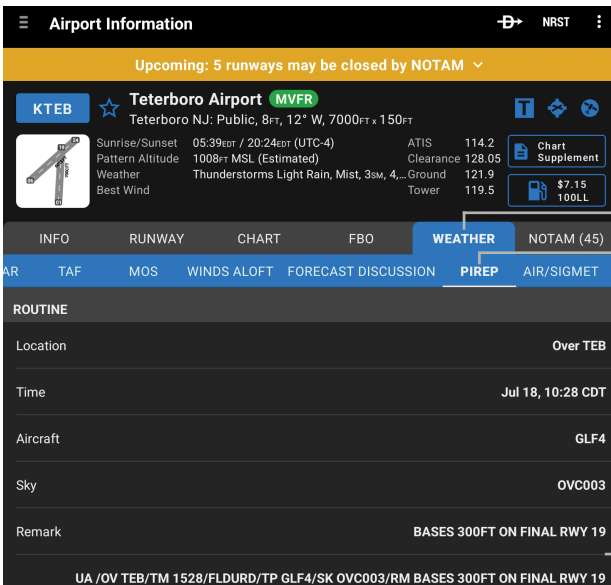

Current Tab
Touch to View

Scroll to View Info

Airport Info Page - Weather Tab - PIREP

AIR/SIGMET


Selecting **AIR/SIGMET** on the horizontal navigation bar displays the following information:

• IFR	• Convective Outlook
• IFR Outlook	• Icing
• Convective	• Turbulence

Airport Information Page - Weather Tab - AIR/SIGMET

Viewing AIR/SIGMET:

- 1) From any page, touch **Home** > > **Weather**.
- 2) Touch **AIR/SIGMET** on the horizontal navigation bar. Scroll to view additional information, if necessary.

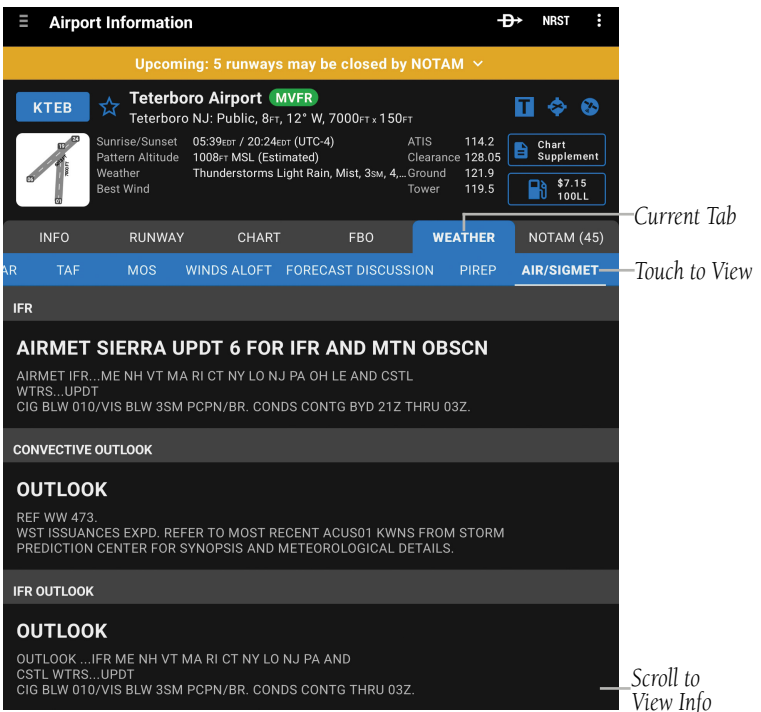

Airport Info Page - Weather Tab - AIR/SIGMET

AIRPORT NOTAM TAB

The Airport Information section has six (6) tabs; Info, Runway, Chart, FBO, Weather, and NOTAM. The sixth tab is **NOTAM**, which contains the following additional tabs; All, Aerodrome, Runway, Taxiway, FDC, Navigation, and Obstacle:

Viewing NOTAM Info:

From any page, touch **Home** > > **NOTAM**.

ALL

Selecting **All** on the horizontal navigation bar displays the following information:

• Upcoming	• Aerodrome	• FDC
• Today	• Runway	• Navigation
• Last 30 Days	• Taxiway	• Obstacle


Airport Information Page - NOTAM - All

Viewing All NOTAMs:

1) From any page, touch **Home** > > **NOTAM** > **All**.




2) Touch **ALL** on the horizontal navigation bar.

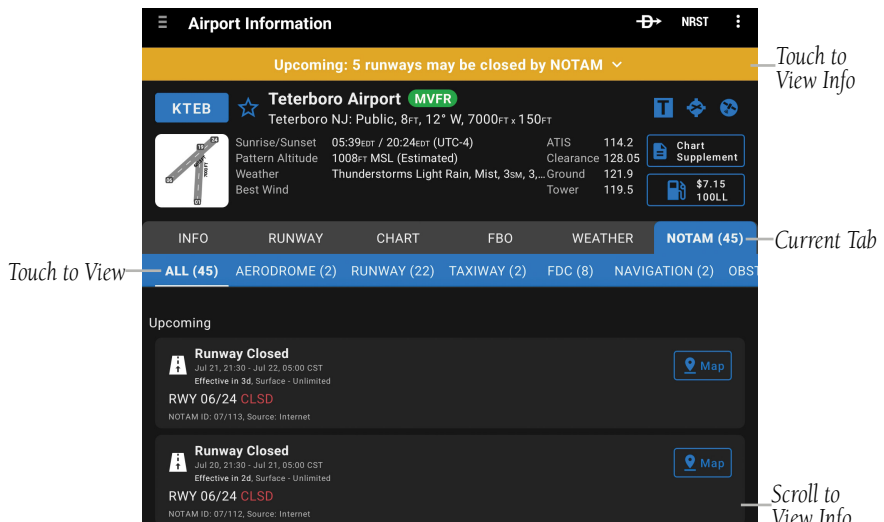
Or: Touch the NOTAM banner message. Scroll to view additional information, if necessary.



Airport Info Page - NOTAM Tab - All

AIRPORTS WIDGET

Airport information is also accessible via the Map page's split-screen widgets. To access the Airports Widget, touch **Home** >  >  > **Widgets**. If necessary, touch **Add Widget**. Touch the widget type in the upper left of a widget, and select **Airports** from the list. The Airports widget has four tabs of airport information. The Summary shows a Best Runway recommendation and brief summaries of multiple types of information. The Freq tab shows ATC, approach and navaid frequencies. The Runways tab shows all runways and details, including runway winds. The Fuel tab shows available fuel vendors and fuel prices. To select a different airport, touch and drag the Navtrack slider to a different point along the flight plan, or touch the airport selector at the upper right corner of the widget. Touch the  icon to view the airport in full in the Airport Information page.

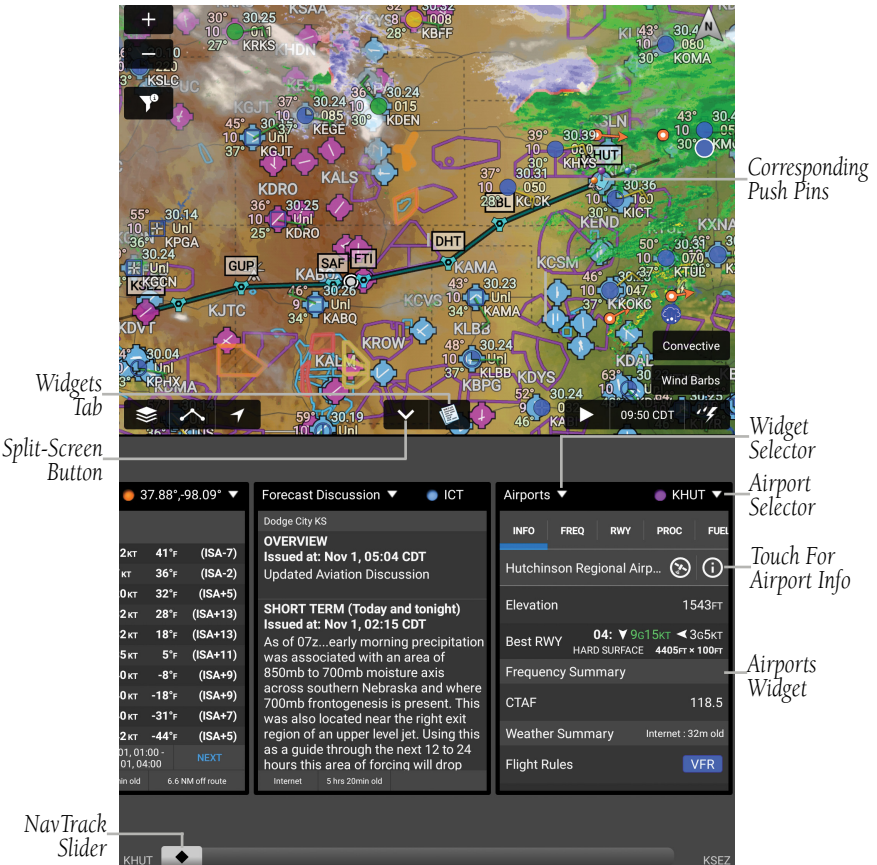

Map - Split Screen - Airports Widget

FILE

With Garmin Pilot, users can easily enter a flight plan and interactively edit it on the map. Pre-loaded forms makes it quick to save and reuse data for frequently flown routes. And when the flight plan is ready, Garmin Pilot makes it simple to file, cancel or close the flight plan via a Filing Service Provider (Leidos Flight Services, etc.). Garmin Pilot helps European users plan routes for IFR flights quickly via the European Autorouting feature.

TRIP PLANNING



NOTE: *A data connection (e.g., Wi-Fi or cellular) is required to receive preflight weather briefings, file, amend, cancel or close flight plans from Garmin Pilot.*

The Trip Planning Page manages all of the trip planning details for each trip. When a new trip is created and activated on the Trip Planning Page it becomes the active flight plan. Flight plans created on the Flight Plan Page do not become the active trip plan. The Flight Plan must be imported to become the active trip. Trips created on the Trip Planning Page will default to a direct-to route from departure to destination. Add additional waypoints in the route field by entering fixes, NAVAIDs, airway, departures, arrivals or airports. For Long or complex routes use the Flight Plan page to create the flight plan and then import.

Complete the trip plan by entering pilot information, aircraft information, departure/arrival times, altitude, airspeed, etc.. Some of the data will be auto-filled based on data from the Garmin Pilot account that's currently logged in. Once all mandatory fields have been completed, Garmin Pilot creates a trip summary, and Navlog. If Garmin Pilot has been linked to a Filing Service Provider, Garmin Pilot will retrieve a Standard Weather Briefing for the route of flight for the Estimate Time of Departure (ETD). Garmin Pilot also uses the Filing Service Provider to file, amend, cancel or close flight plans.

Trips can be cloned and/or deleted on the Trip Planning Page. Cloning a trip copies the current trip. Any changes made after the clone is created are not copied. The selected trip can not be deleted. Cloned trips are saved in the Trips List. All trip data is cloned including pilot information, aircraft information, route of flight and all other associated data. Trips that have been cloned are available for use at a future date. Activate a cloned trip, change the date and all applicable data, refresh the briefing, and the trip is ready to be filed.


PREPARING TO FILE





NOTE: Prior to filing the flight plan, ensure that all of the information entered on the Trip Planning Page is correct including the route of flight.

Garmin Pilot provides a quick and easy method to file, close or cancel flight plans. When a flight plan is complete, its route of flight, pilot information, aircraft information, type of flight plan (IFR/VFR), number of persons onboard, fuel onboard, date, estimated time of departure (ETD), altitude, airspeed, and any optional data including alternate, and remarks can be transmitted to the Filing Service Provider. The ETD must be at least 30 minutes in the future or the flight plan will not be transmitted. To file a flight plan with a departure time less than 30 minutes in the future, call the FSS.

Creating an Active Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch within the route field to activate the cursor.
- 3) Use the keyboard to insert waypoints. Separate each waypoint with a space.

Or:


- 1) Touch the  **Add Waypoint** button.
- 2) Use the keyboard to input the waypoint identifier.
- 3) Touch the  **Add Waypoint** button to add additional waypoints.

Or: Enter Lat/Lon information.

Or: Enter Radial/Distance waypoint in one of the following formats:

Or:

- 1) Use one of the above methods to enter a departure point.
- 2) On the Map Page touch **Menu > Graphical Route Edit**.
- 3) Long press on the map area to display the rubber-band. Place the rubber-band on or near the desired location and then release the rubber-band. A list of nearby waypoints is displayed.
- 4) Select the desired waypoint from the list, or create a User Waypoint.
- 5) Repeat steps 3 and 4 to add additional waypoints.
- 6) Touch **Save** to continue or **Cancel** to exit without saving.

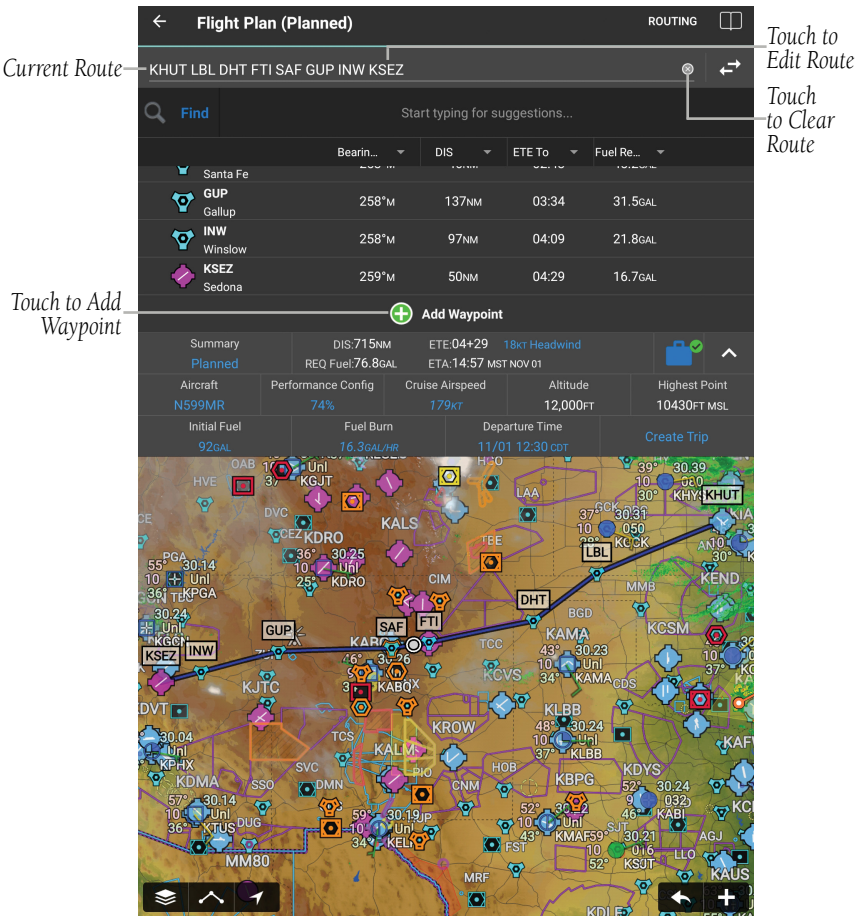

PLANNING A TRIP

CREATING A NEW TRIP:

- 1) From any page, touch **Home** >
 - 2) Touch **Add Trip**.
 - 3) Enter Departure, Routing, and Destination.
- Or:** Enter Departure, Destination and Choose a Preferred ATC Route after the trip is created.
- Or:** Touch **Load Flight Plan** to import the Flight Plan. Importing the Flight Plan will fill the Departure, Routing, and Destination fields. Complete the remaining fields as necessary.

Trip Planning

← ADD TRIP KHUT → KSEZ ACTIVATE

Distance 715NM Time Enroute 4+32 18KT HW - Internet

Required Fuel: 77.3GAL ETA: 15:01 MST NOV 01

Upcoming (1)

KHUT → KSEZ Not Filed

11/01 12:30 cdt
N599MR Not Filed

Previous (5)

KAPA → KLWC Not Filed

10/11 11:11 MDT
N599MR Not Filed

KLWC → KFTW Not Filed

09/15 10:17 cdt
N599MR Not Filed

KIAD → KORF Not Filed

08/18 16:30 EDT
N599MR Not Filed

KMKC → KMEM Not Filed

08/11 07:30 cdt
N599MR Not Filed

KPSP → KAEG Not Filed

05/28 07:30 PDT
N599MR Not Filed

GENERAL

Pilot JILL PILOT

Filing Provider Leidos Filing Provider

ICAO Form

Flight Rules VFR

Aircraft N599MR

Call Sign Optional

FLIGHT PLAN

LOAD FLIGHT PLAN

Departure KHUT

Departure Time 11/01 12:30 cdt

Destination KSEZ

ATC PROPOSED




Routing LBL DHT FTI SAF GUP INW

MINIMUM FLIGHT REQUIREMENT WARNINGS

Garmin Pilot checks the TAFs for the departure and destination airports when a trip is created. If any TAF shows the weather conditions for an airport fall below VFR or IFR minimums, Garmin Pilot displays a Minimum Flight Requirement Warning icon. Minimum Flight Requirement Warning icons appear in the following places to notify of severe weather conditions: Next to the Trip Planning icon in the Home menu; Next to the airport code in the Trip Planning form; and Watermark-style warning in Upcoming trips list

Minimums Warning

Minimums Warning in Upcoming Trips

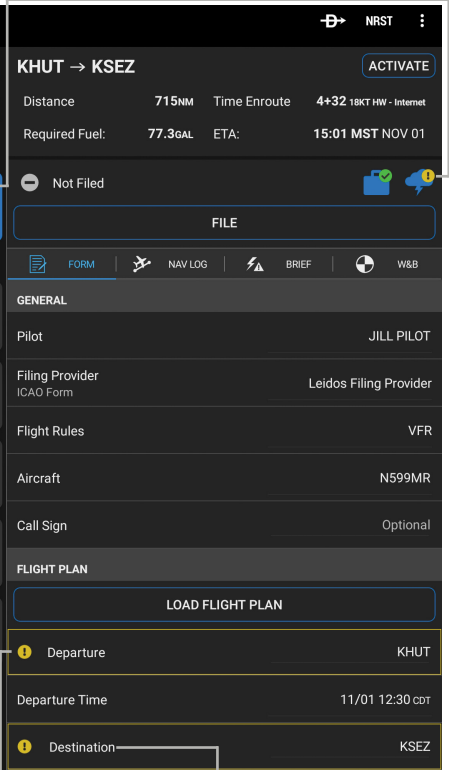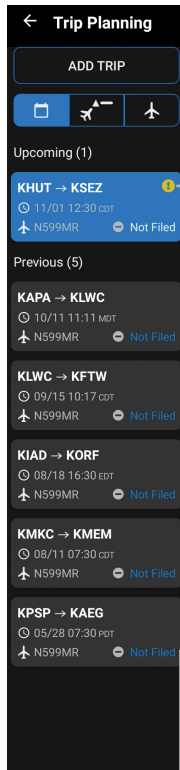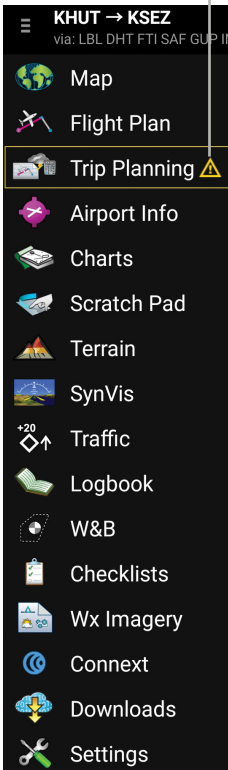

Minimums Warning at Departure Airport


Minimums Warning at Destination Airport

Trip Planning - VFR/IFR Minimums Warning

Choosing Preferred ATC Route:

- 1) Touch **View Planned ATC Routing** to view Preferred ATC Routes.
- 2) Touch **Altitude, Aircraft, Date,** or **Popular** to sort the list.
- 3) Touch the desired route from the list, to add the route to the trip.

Selected Trip

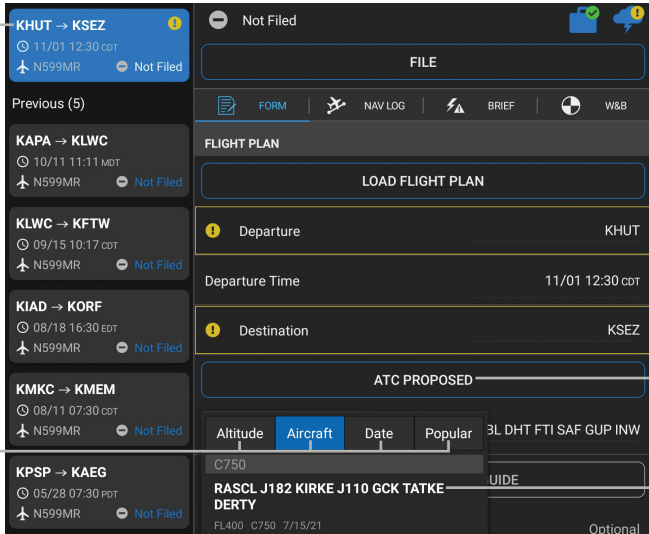

The screenshot displays the 'FILE' screen in the Garmin Pilot app. On the left, a list of previous trips is shown, including 'KHUT → KSEZ', 'KAPA → KLWC', 'KLWC → KFTW', 'KIAD → KORF', 'KMKC → KMEM', and 'KPSP → KAEG'. The 'KHUT → KSEZ' trip is selected. The main area shows the 'FLIGHT PLAN' section with a 'LOAD FLIGHT PLAN' button. Below this, the 'ATC PROPOSED' section is visible, with a 'Touch to View ATC Routing' annotation pointing to it. The 'ATC PROPOSED' section includes a table with columns for 'Altitude', 'Aircraft', 'Date', and 'Popular'. The 'Aircraft' column is currently selected, and a list of aircraft is shown, including 'C750', 'RASCL J182 KIRKE J110 GCK TATKE', and 'UIDE'. A 'Touch to Load Route' annotation points to the 'UIDE' aircraft. The 'Date' column shows '3L DHT FTI SAF GUP INW'. The 'Popular' column shows 'Optional'.

Touch to
Filter Data

Touch to View
ATC Routing

Touch to
Load Route


Trip Planning - Preferred ATC Routes

Entering Pilot Information:

- 1) Touch the Pilot field.
- 2) Enter pilot's Contact Info, Personal Minimums, and Filing Service Provider.

Or:

- a) Touch **New**.
- b) Enter the Required Contact Information by touching each field. A keyboard will appear to enable typing in each selected field.
- c) Touch **Add New**.
- d) Touch the desired Pilot from the list.

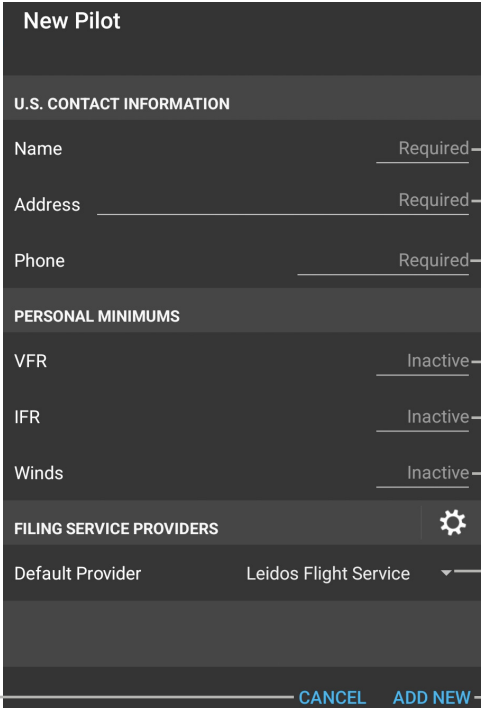

New Pilot

U.S. CONTACT INFORMATION

Name Required

Address Required


Phone Required

PERSONAL MINIMUMS

VFR Inactive

IFR Inactive

Winds Inactive

FILING SERVICE PROVIDERS 

Default Provider Leidos Flight Service ▼ Touch to Adjust

Touch to Cancel CANCEL ADD NEW Touch to Save

Trip Planning - Add New Pilot

Entering Aircraft Information:



NOTE: Performance data is used to create the NavLog and to calculate trip parameters.

- 1) Touch the Aircraft field.
- 2) Select the desired aircraft from the list.

Or:


- a) Touch **New**.
- b) Enter the Required Aircraft Information by touching each field and using the keyboard.
- c) Enter optional performance data.
- d) Touch **Add New**, then the desired Aircraft from the list.

Enter type of Flight Plan:

Touch **Flight Rules** and select the desired rule set, e.g. IFR, VFR, DC SFRA, etc., from the drop down menu.

Enter Date, ETD, Altitude, and Airspeed:

Touch the applicable field and enter the desired value(s). The Airspeed will be populated with the Cruise TAS (kts) entered for the aircraft. The Altitude selector is auto-populated with fuel, ETE and wind values based on aircraft performance and weather reports.

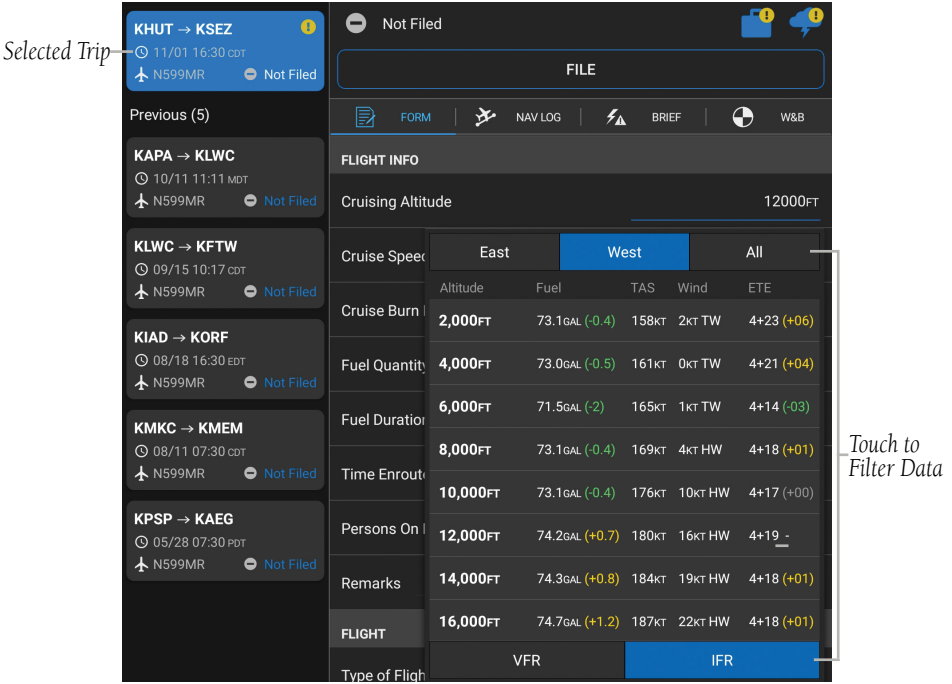

Trip Planning - Altitude Selector

Enter Persons Onboard:

Touch the Persons on Board field to enter the number of occupants.

Enter Fuel:


Touch the Fuel field to enter the number of hours:minutes of fuel onboard. The Fuel field is automatically populated with the Default Fuel/Cruise Burn Rate, but should be adjusted to reflect the actual fuel onboard the aircraft.

Enter Optional Data (SIC, Call Sign, Alternate and Remarks):

Touch the applicable field and enter the desired information.

EUROPEAN AUTOROUTING


Garmin Pilot allows European Users to quickly find a suitable route for the particular pilot, aircraft, etc. If not already completed, you need to enable your pilot profile in Garmin Pilot to use the proper filing provider for Trip Planning.

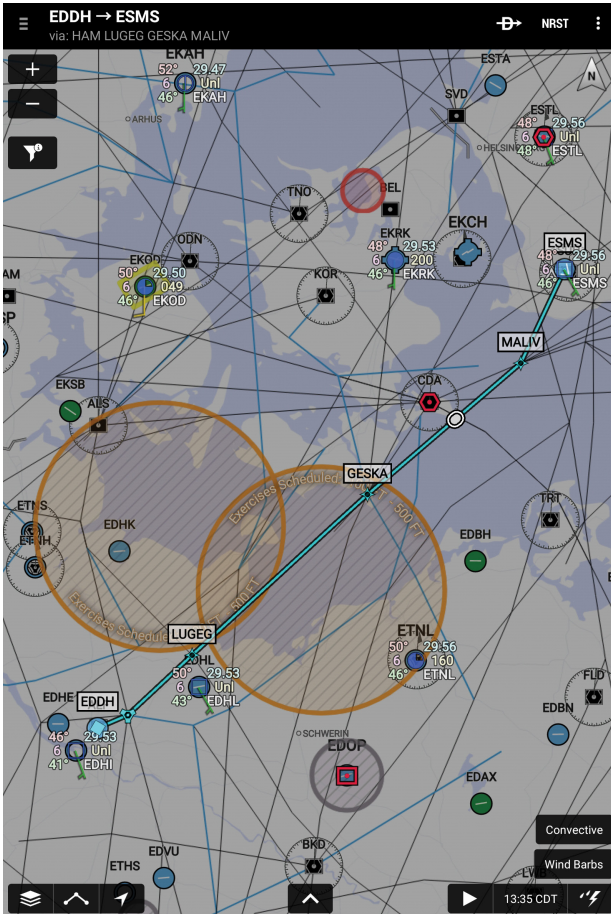


European Autoroute - IFR

Entering/Updating Pilot Information

- 1) Touch the Pilot field (e.g. JILL PILOT).
- 2) Touch the Pencil icon next to the Pilot name.
- 3) Touch the Gear icon towards the bottom of the Edit Pilot window.
- 4) Touch **Add New**.
- 5) Touch **Eurocontrol IFR Filing Service**.
- 6) Touch **Add > Done > Save**.
- 7) With the updated Pilot Info saved, touch the Filing Provider field > **European Provider**.

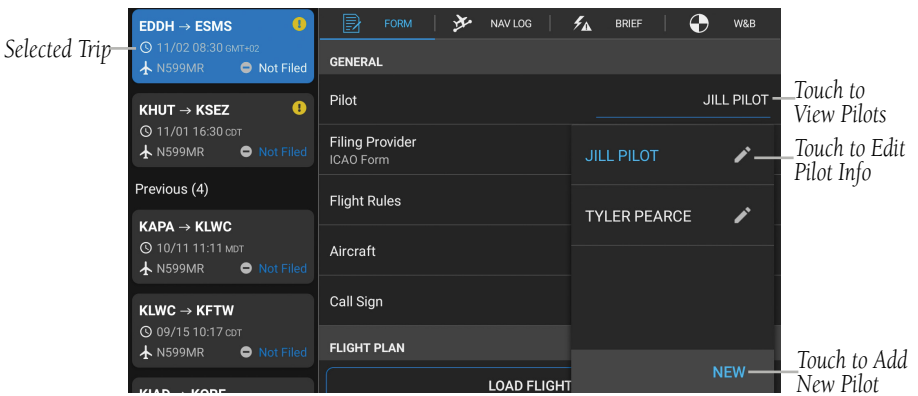

Trip Planning - European Autoroute - Pilot

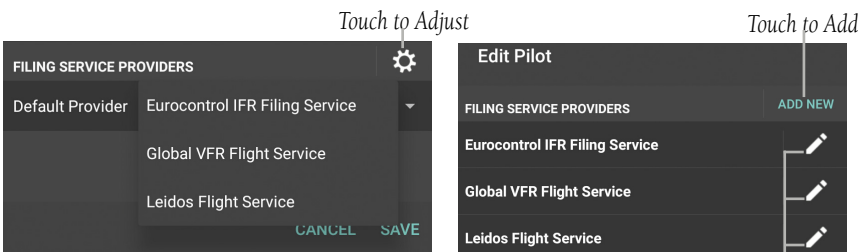


Trip Planning - Edit Pilot - Filing Service Providers

Using European Autorouting:



NOTE: If you already know the route you would like to use, you can manually enter the route by touching **Enter Manual IFR Route**. After entering data, touch **Confirm** to continue, or **Back** to exit without saving.

- 1) After Entering/Updating Pilot Info, enter required information in Trip Planning (General, Flight Plan, Flight Info & Advanced).
- 2) Touch **Autoroute** to view Autorouting Options.

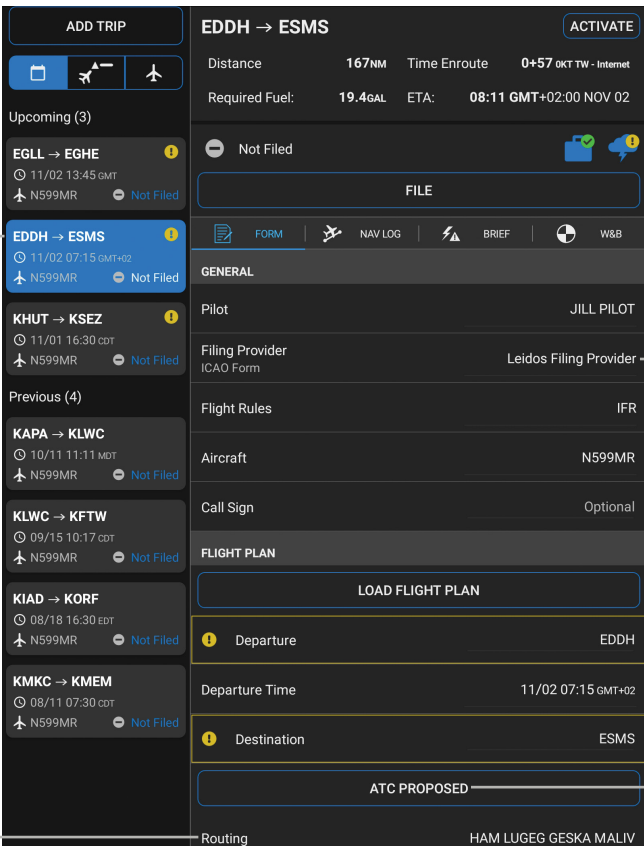

Selected Trip

Current Filing Provider

Current Route


Touch to View Autoroute

Trip Planning - European Autoroute


- 3) Verify information in the General Data section.
- 4) Scroll down and adjust the Advanced section, as needed. If necessary, touch **Manage Fly-By Waypoints** and adjust.
- 5) Touch **Autoroute** to save and continue to Route Proposals

Or:

- 6) Touch **Cancel** to close without saving.

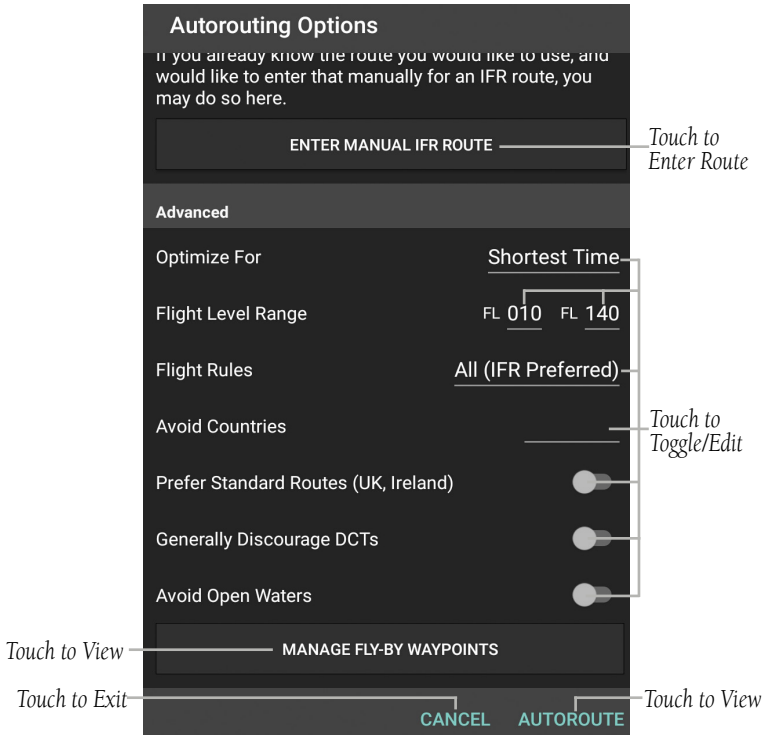

Trip Planning - European Autorouting Options

- 7) Touch  to expand/collapse route details, then select the desired route by "checking" the associated box.
- 8) Touch **Show Map** to view the route on the Map. Touch **Back** to return to Route Proposals.

- 9) Touch **Next** to view the Route Summary. If necessary, touch anywhere in the route to edit manually.

The screenshot shows the 'Route Proposals' screen with the following elements and callouts:

- Touch to Select Route:** Points to the checkmark icon next to the selected route '1+39, VFR to VFR'.
- Touch to Expand/Collapse Info:** Points to the upward-pointing arrow icon on the right side of the selected route.
- Touch to Edit:** Points to the list of waypoints: LFRG IRDIB/N0096F120 IFR DCT GOTRO J251 NEMED J150 MATID DCT DIVON DCT BV DCT BVS DCT SOPIG DCT VEMIL DCT ESTOC DCT CGN DCT BUZIK DCT MOSUD DCT UTELA DCT VALPO DCT BATAG VFR LFOK.
- Touch to View Route:** Points to the 'SHOW MAP' button.
- Touch to Save & Continue:** Points to the 'NEXT' button at the bottom right.

Route Summary Data:


Cruise Altitude	FL100
Fuel Required ⓘ	12.8GAL
Route Distance	188NM 15% Overhead (25 NM)
Flight Rules	VFR
ETE	1+39

Trip Planning - European Route Proposals


- 10) Touch **Confirm** to view route in Trip Planning.
- 11) Verify the information is correct then touch **Validate**.

Using Aircraft Setup Guide:



NOTE: When in Trip Planning, if  is visible next to your Aircraft, your aircraft may not be configured correctly (ICAO info, Performance Data, etc.).


- 1) After Entering/Updating Pilot Info, enter the required information in Trip Planning (General, Flight Plan, Flight Info & Advanced).
- 2) Touch **Autoroute** to view Route Summary.
- 3) Touch **Autoroute** to view Autorouting Options > **Resolve Issues With Aircraft Setup Guide**.

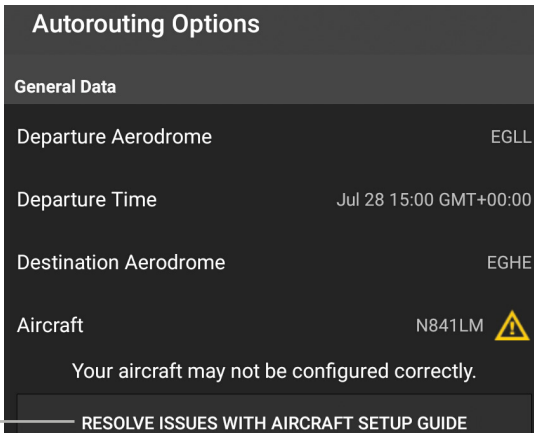

Touch to View

European Autorouting Options - Aircraft Issues

- 4) A brief description of the issue(s) will be displayed. Touch **Resolve Issues With Aircraft Setup Guide**.
- Or:**
- 5) Touch **Ignore Issues** to continue without fixing issues.

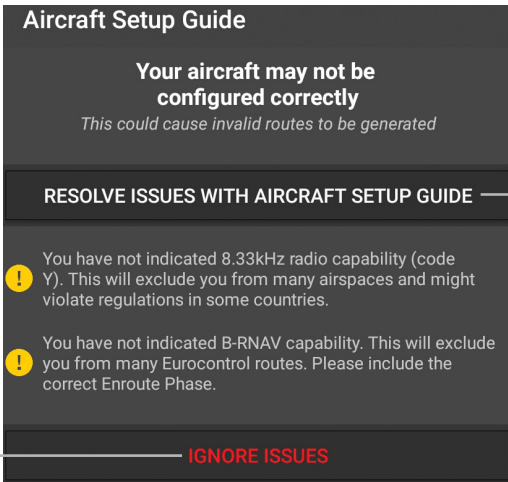

Aircraft Setup Guide

Your aircraft may not be configured correctly
This could cause invalid routes to be generated

RESOLVE ISSUES WITH AIRCRAFT SETUP GUIDE — *Touch to Resolve Issues*


! You have not indicated 8.33kHz radio capability (code Y). This will exclude you from many airspaces and might violate regulations in some countries.

! You have not indicated B-RNAV capability. This will exclude you from many Eurocontrol routes. Please include the correct Enroute Phase.

Touch to Ignore & Continue — **IGNORE ISSUES**

European Autorouting - Aircraft Setup Guide

- 6) A brief description of the issue(s) will be displayed, e.g. ICAO Equipment. Touch the underlined text across from the issue to view details.
- 7) Touch the necessary item(s) to remedy the issue, e.g. VHF with 8.33 kHz spacing > **Done**. Repeat this process for any additional issues > **Continue**.

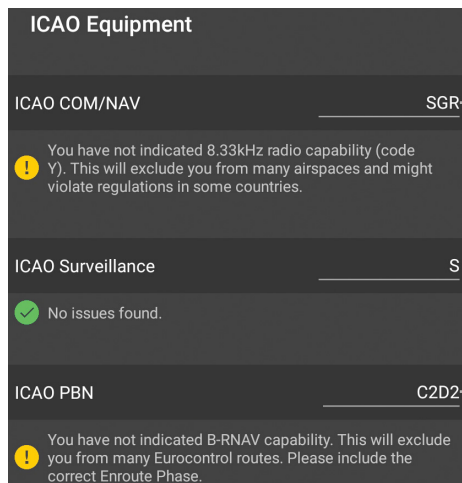

ICAO Equipment

ICAO COM/NAV SGR

! You have not indicated 8.33kHz radio capability (code Y). This will exclude you from many airspaces and might violate regulations in some countries.

ICAO Surveillance S

✓ No issues found.

ICAO PBN C2D2

! You have not indicated B-RNAV capability. This will exclude you from many Eurocontrol routes. Please include the correct Enroute Phase.

Touch to Resolve Issues

European Autorouting - Aircraft Setup Guide - ICAO

With the issues resolved or ignored, the user is now directed to the Route Proposals window, and can follow steps 5-11 in the Using European Autorouting procedures.


NAVLOG

Garmin Pilot generates a navigation log using the Active Flight Plan waypoints, user-provided Trip Plan information, user-provided aircraft performance data, and DUAT-sourced weather data. The Navlog provides navigation information for each leg of the Active Flight Plan. The column values are user selectable, touch each column header to cycle through the available units, or touch a column header to change the column group.


NAVLOG COLUMN OPTIONS:


- Crosswind
- Distance End (Dist End)
- Distance Leg (Dist Leg)
- Distance Flown (Dist Leg)
- Distance Remaining (Dist Rem)
- ETA
- ETE Leg
- ETE To
- ETE Remaining (ETE Rem)
- Fuel Burned
- Fuel Leg
- Fuel Remaining (Fuel Rem)
- Ground Speed (GS (kts))
- Headwind (kt)
- Magnetic Course (Mag Crs)
- Magnetic Heading (Mag Hdg)
- Temperature (Temp (C°))
- True Air Speed (TAS (kts))
- True Course (True Crs)
- True Heading (True Hdg)
- Wind (kt)
- Wind Correction

Viewing Navlog:

- 1) From any page, touch **Home** > .
- 2) Touch **Navlog**, to view the Garmin Pilot generated Navlog.

Changing Navlog Column Values:

- 1) From any page, touch **Home** > .
- 2) Touch a column header to view the column header options menu.
- 3) Touch the desired value.

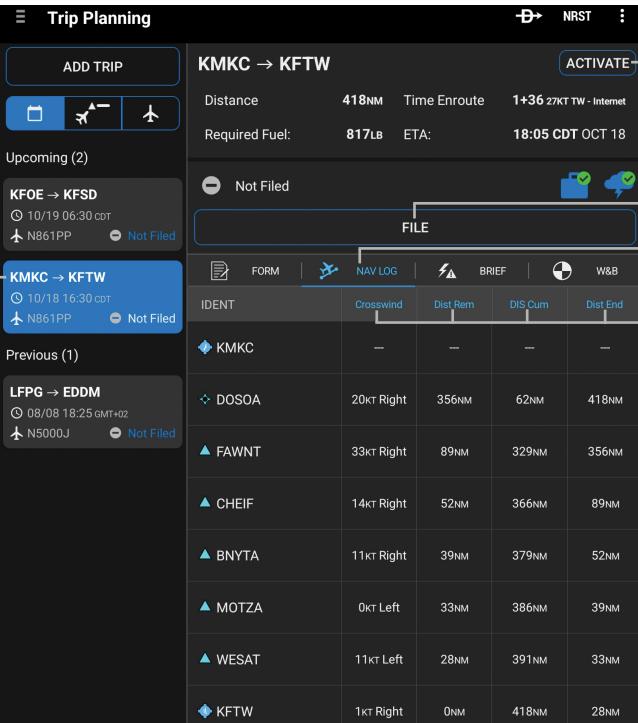

Selected Trip →

Touch to Activate →




Touch to File to View →

Touch to Adjust Info →


IDENT	Crosswind	Dist Rem	DIS Cum	Dist End
◆ KMKC	—	—	—	—
◆ DOSOA	20kt Right	356NM	62NM	418NM
▲ FAWNT	33kt Right	89NM	329NM	356NM
▲ CHEIF	14kt Right	52NM	365NM	89NM
▲ BNYTA	11kt Right	39NM	379NM	52NM
▲ MOTZA	0kt Left	33NM	386NM	39NM
▲ WESAT	11kt Left	28NM	391NM	33NM
◆ KFTW	1kt Right	0NM	418NM	28NM

Trip Planning - Nav Log


Expanding Flight Plan Legs:

- 1) From any page, touch **Home** > .
- 2) Touch **Navlog**.
- 3) Touch  for flight plan legs containing a Departure, Arrival, or Airway to expand the leg and view all waypoints for that leg. Touch  again to collapse the leg.


Cloning Trip:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Clone Trip**.

Viewing Cloned Trip:


- 1) From any page, touch **Home** > .
- 2) Touch **History** to view the list of cloned trips
- 3) Touch **Date, Route,** or **Aircraft** to organize the Trips List by date created, route of flight, or aircraft used.


Activating Cloned Trip:

- 1) From any page, touch **Home** > .
- 2) Touch **History** to view the list of cloned trips
- 3) Touch **Date, Route,** or **Aircraft** to organize the Trips List by date created, route of flight, or aircraft.
- 4) Touch the desired trip from the Trips List.
- 5) Touch the Date Field to change the date to the current date. Edit other desired Trip Plan Fields.
- 6) Touch **Menu** > **Activate** to activate the Trip.

Or: Touch **Trip Not Active Touch To File** > **File** to activate and file the Trip.

Deleting Trips:

- 1) From any page, touch **Home** > .
- 2) Long press the desired trip from the Trips List.
- 3) Touch **Delete Trips,** or **Cancel** to close.

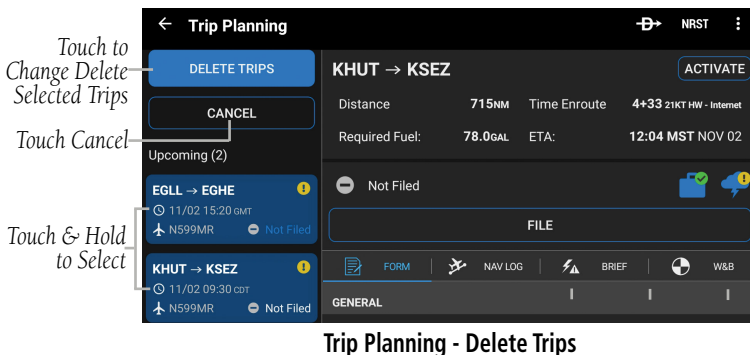


BRIEF

When a flight plan is complete, Garmin Pilot will retrieve a preflight weather briefing based on the parameters of the Active Flight Plan and Trip Plan. The Brief Tab contains a standard weather briefing for the route of flight including; Weather Synopsis, Severe Weather, SIGMETs, AIRMETs, Center WX Advisories, METARs, PIREPs, Radar Summaries, Terminal Forecasts, Winds Aloft, TFRs, and NOTAMs.

Accessing Preflight Weather Briefing:

- 1) From any page, touch **Home** >
- 2) Touch **Brief**, to view the Standard Weather Briefing for the route of flight.
- 3) Touch **Refresh** if necessary to update the weather information.
- 4) Touch to expand individual fields or **Expand All**.
- 5) Touch to collapse any of the expanded fields or **Collapse All**.

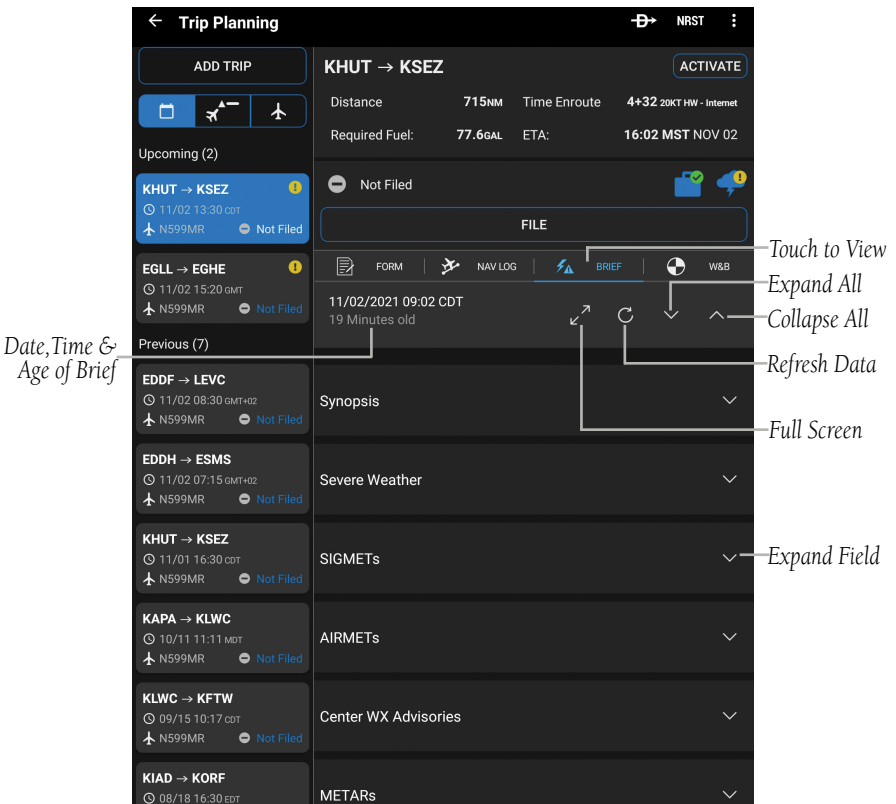

Trip Planning - Briefing Tab


FILE FLIGHT PLAN



NOTE: A data connection (e.g., Wi-Fi or cellular) is required to receive preflight weather briefings and to file flight plans.

Once all required information is entered and after reviewing the weather briefing and supplemental weather information, file the flight plan. A notification appears on the Summary Tab stating the status of the flight plan. The notification on the Summary Tab gives the time the flight plan will be transmitted to the appropriate FSS. A confirmation e-mail is also sent giving the time the flight plan will be transmitted to the appropriate FSS. If the flight plan was not successfully transmitted to the Filing Service Provider, a notification window will provide the reason it was not transmitted.

Filing:

- 1) From any page, touch **Home** > .
- 2) Touch the desired Trip in the Trips List.
- 3) Touch **File** to file the Trip. The trip status changes from Not Filed to Filed and a notice appears stating the flight plan was successfully filed.



GARMIN PILOT.
PLAN. FILE. FLY. LOG.

Your flight plan departing from **KHUT** and arriving at **KSEZ** with a scheduled departure time of 2021-11-02T13:30:00-0500 and an estimated enroute time of 06:12 has been **filed**.


Comments: Your flight plan has been successfully filed with Leidos Flight Services

Flight Plan Information:


FORM TYPE	7. AIRCRAFT IDENTIFICATION	8. FLIGHT RULES	TYPE OF FLIGHT
ICAO	N9536F	IFR	G
9. NUMBER (AIRCRAFT)	TYPE OF AIRCRAFT	WAKE TURBULENCE CATEGORY	10. EQUIPMENT
	C206	L	BDGLOYIC
13. DEPARTURE AIRPORT	TIME (UTC)	15. CRUISING SPEED (KT)	LEVEL (FT)
KHUT	1830Z	124 kts	8500 ft
ROUTE			
DCT LBL DCT DHT DCT FTI DCT SAF DCT GUP DCT INW DCT			
15. DESTINATION AIRPORT	TOTAL ETE (HHMM)	ALTN AIRPORT	2ND ALTN AIRPORT
KSEZ	06:12	5AZ8	
18. OTHER INFORMATION			
19. ENDURANCE (HHMM)	PERSONS ON BOARD	EMERGENCY RADIO	
08:47	1		
SURVIVAL EQUIPMENT		JACKETS	
DINGHY NUMBER	DINGHY CAPACITY (PERSONS)	DINGHY COVERED	DINGHY COLOR
AIRCRAFT COLOR AND MARKINGS		REMARKS (SUPPLEMENTARY)	
W			

Filed Flight Plan - Email Confirmation


Amending Filed Flight Plan:


- 1) From any page, touch **Home** > .
- 2) Touch the desired Trip in the Trips List that is marked as Filed.
- 3) Touch **Amend**.
- 4) Make the desired changes on the Trip Planning Page.
- 5) Touch **File**, or **Revert** to cancel changes and use original flight plan.

Canceling Filed Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch the desired Trip in the Trips List that is marked as Filed.
- 3) Touch **Cancel**. The Trip status displays Not Filed.

Closing Filed Flight Plan:

- 1) From any page, touch **Home** > .
- 2) Touch the desired Trip in the Trips List that is marked as Filed.
- 3) Touch **Close**. The trip status displays Closed.

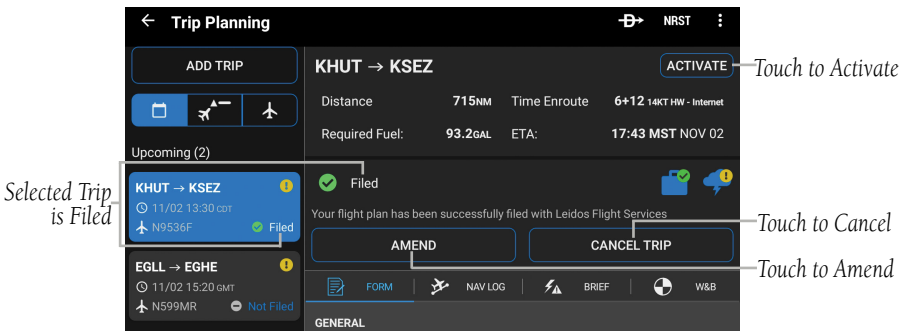

Trip Planning - Filed Flight Plan


FLY

Garmin Pilot provides full en-route navigation capabilities on its moving map. The ability to view navigation data such as ETE, ETA, crosstrack error, and distance information. Touch and hold any location on the map and the Radial Menu provides quick and easy access to navigation information, including airports, nav aids, and METARs. The Radial Menu also provides a ready means of navigating direct-to, creating user waypoints or graphically editing the route of flight. After takeoff, pilots can continue to view updated weather information via a compatible FIS-B device (sold separately), by connecting to SiriusXM Weather with a satellite weather receiver (sold separately, subscription required), or using Garmin Weather Data Services which requires a data connection through Wi-Fi or cellular network.

MAP PAGE





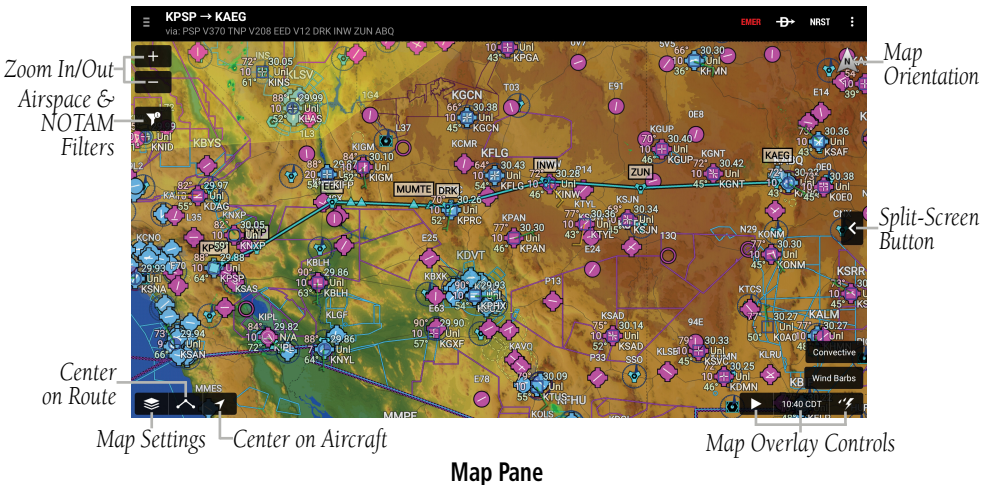





The Map Page is comprised of a highly configurable Map Pane which can be displayed in either full or split-screen. The Split-screen option allows the Map Pane to be divided between the Map Pane and either Widgets, Panel, Charts, or SafeTaxi displays.

The Split-screen feature is available in either portrait or landscape screen orientation. In portrait orientation, the screen is split horizontally with the Map Pane always appearing in the upper portion of the screen. In landscape orientation, the screen is split vertically with the Map Pane always appearing to the left.



MAP PANE CONTROLS

The Map Pane has a number of buttons that control the Base Map, Map Overlays, and center map and split-screen. The table below shows the Map Pane Controls.

Control	Icon	Description
Map Settings		Map/Chart Selection/Settings, Map Overlay Selection, Overlay Opacity Settings, and General Map Settings
Center on Aircraft		Centers the Map Pane on the current GPS location. Highlighted in blue when selected.
		
Center on Route		Centers the entire route in Map Pane. Highlighted in blue when selected.
		
Zoom In		Zooms In on the map
Zoom Out		Zooms out on the map
Split-Screen		Selects full screen map or partial map with Widgets, Panel, Charts, and SafeTaxi.
Map Orientation		Toggles map orientation from north up to track up. The Icon is blue when track up is active.
Filter Settings		Displays a list of active and upcoming Airspace & NOTAM filters along with the ability to adjust filter display settings.


Map Pane Controls

MAP SETTINGS

The Map Settings button shown in the table above and located on the lower left corner of the Map Pane opens the Map Settings Menu. The Map Settings Menu contains seven tabs titled Map / Charts, Overlays, Filters, Radar / IR Color, Opacities, Ownship / Route, and General. Each tab provides access to controls for configuring the various features of the Map Pane display.

MAP / CHARTS SELECTION AND SETTINGS

There are three maps and four charts available by touching the Map Settings button in the lower left corner of the Map Pane and selecting from the Map/Chart Menu. The three available map selections are Roads/Borders, VFR, and IFR. Many of the symbols and other map features including victor airways shown on the VFR and IFR maps may be added directly to a flight plan using the graphical flight plan editing feature.

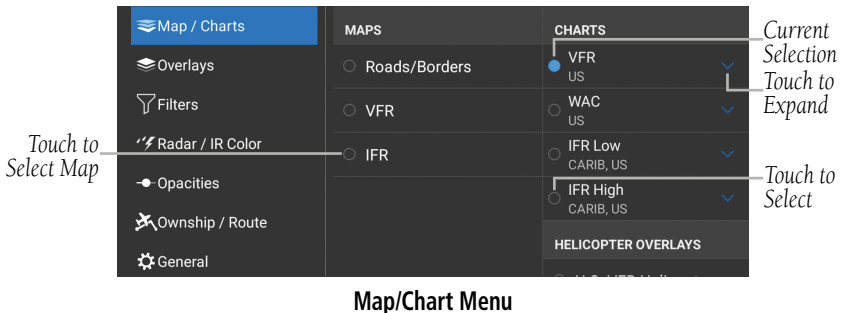

Map/Chart Menu




The following charts are available for viewing in the map pane: Sectional TAC, IFR Low, and IFR High. These charts are high-resolution color images that resemble the paper version of the National Aeronautical Navigation Products (AeroNav) published charts.

Each of the Maps under the Maps column have an adjacent Map Setup button, which provides access to the Map Setup menu. The Map Setup menu consists of five tabs labeled General, Airports, NAVAIDs, Airspaces, and Cities. Under each tab, there are a number of slider controls enabling the map ranges at which the related map features become visible on the map as well as buttons for toggling the individual features off or selecting the size of the label shown on the map: small, medium, or large



Selecting Map or Chart:

- 1) Touch  > **Map/Chart**.
- 2) Touch the radio button or Map/Chart title to select a Map/Chart.



Map Panning:


- 1) From any page, touch **Home** > .
- 2) Touch and drag within the Map Pane to pan the map to the desired area.
- 3) Touch  to center the Map Pane over the route of flight
- 4) Touch  to center the Map Pane over the current location.

Choosing Map Topography:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Map/Chart**.
- 3) Select one of the three available maps under the Maps column.
- 4) Select one of the buttons labeled **Off**, **Shade**, or **On**.

Choosing Map Color:


- 1) From any page, touch **Home** > .
- 2) Touch  > **Map/Chart**.
- 3) Select one of the three available maps under the Maps column.
- 4) Touch the **Map Setup** button.
- 5) Touch one of the buttons labeled **White**, **Green**, or **Brown**.

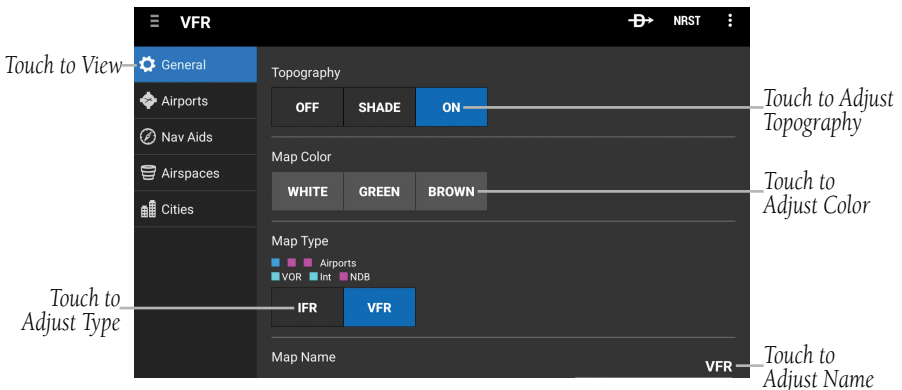

Map Setup - VFR - General

Setting Visibility Range and Label Size for Airports


- 1) From the Map Setup, touch the **Airports** Tab.
- 2) Use the slider controls to select the map range at which selected airports appear. At map ranges greater than the selected figure, the airport symbol will not appear on the map.
- 3) Scroll to bring the Label Size selections into view.
- 4) Touch the corresponding buttons to the right of the listed items, as desired.
- 5) Touch the **Done** button located in the upper right corner of the Map Setup Menu.

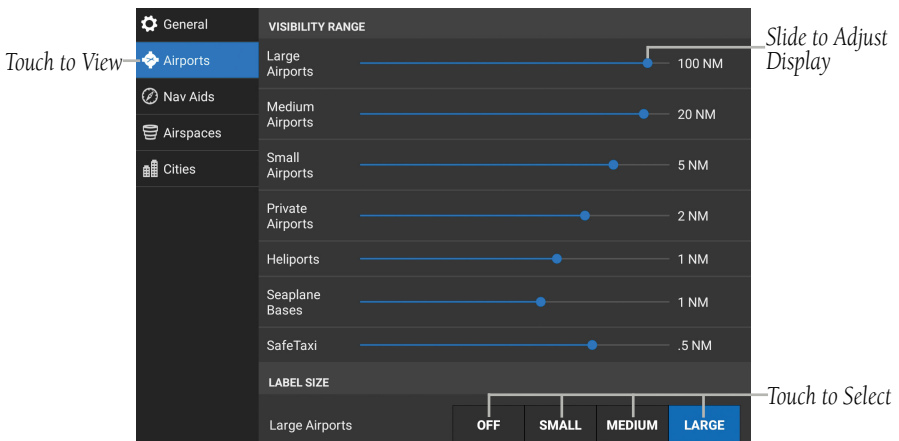

Map Setup - Airports Menu

Setting Visibility Range and Label Size for NAVAIDs


- 1) From the Map Setup, touch the **Nav Aids** Tab.
- 2) Use the slider controls to select the map range at which selected nav aids appear. At map ranges greater than the selected figure, the nav aid symbol will not appear on the map.
- 3) Scroll to bring the **Label Size** selections into view.
- 4) Touch the corresponding buttons to the right of the listed items, as desired.
- 5) Touch the **Done** button located in the upper right corner of the Map Setup Menu.

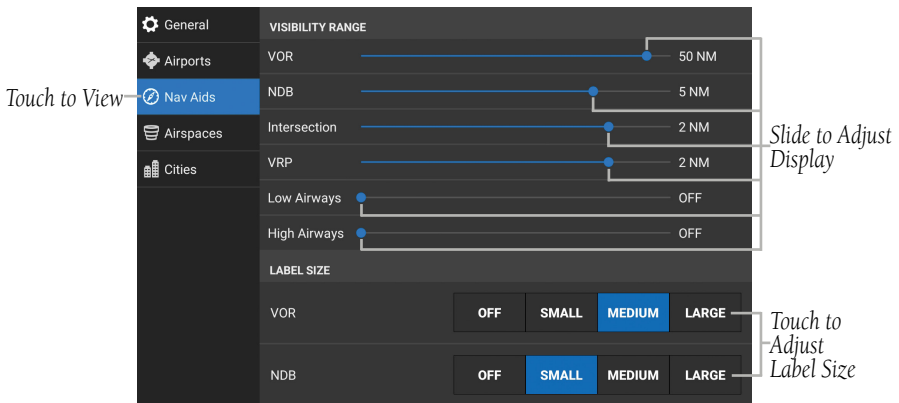

Map Setup - NAVAIDs Menu

Setting Visibility Range for Airspaces


- 1) From the Map Setup, touch the **Airspaces** Tab.
- 2) Use the slider controls to select the map range at which selected airspace boundaries appear. At map ranges greater than the selected figure, the airspace boundaries will not appear on the map.
- 3) Touch the **Done** button located in the upper right corner of the Map Setup Menu.

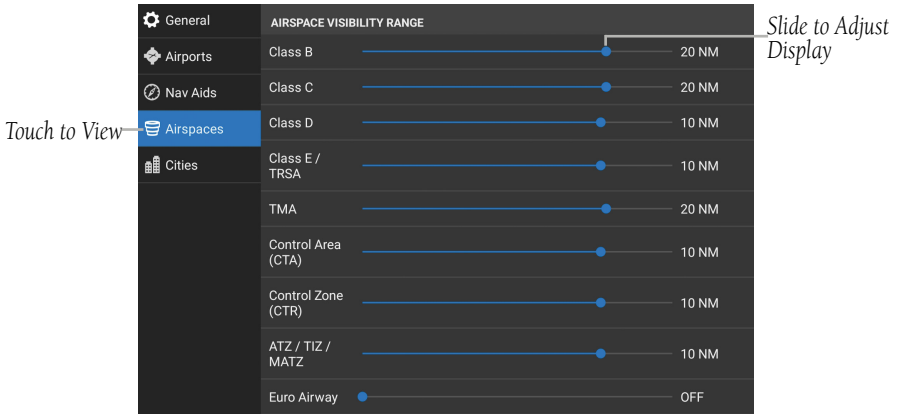

Map Setup - Airspaces Menu

Setting Visibility Range and Label Size for Cities

- 1) From the Map Setup, touch the **Cities** Tab.
- 2) Use the slider controls to select the map range at which selected cities appear. At map ranges greater than the selected figure, the city symbol will not appear on the map.
- 3) Scroll to bring the **Label Size** selections into view.
- 4) Touch the corresponding buttons to the right of the listed items, as desired.
- 5) Touch the **Done** button located in the upper right corner of the Map Setup Menu.

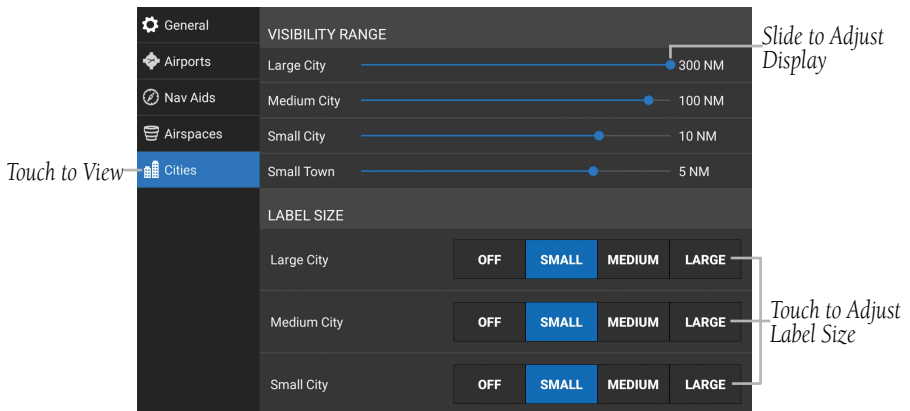

Map Setup Cities Menu


Selecting Helicopter Chart Overlay:




NOTE: A chart basemap must be selected to display helicopter overlays.





NOTE: For information on downloading Helicopter Charts, refer to the 'Downloads' section.

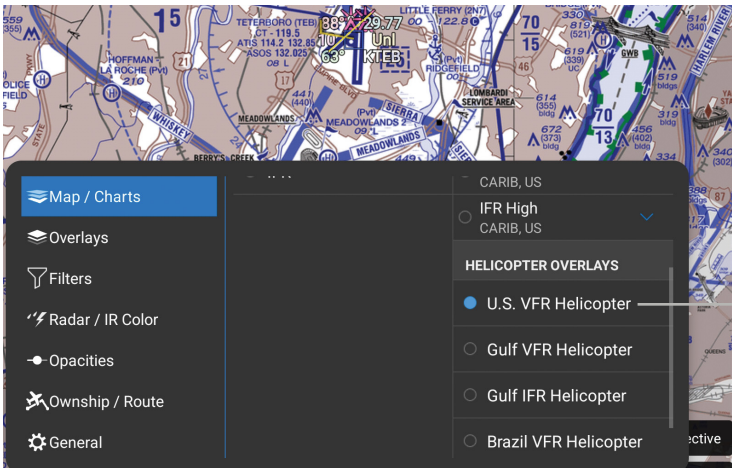- 1) After downloading the desired Helicopter Charts, touch  > **Map/Chart**.
- 2) Touch a chart basemap (**VFR**, **IFR Low**, or **IFR High**).
- 3) Touch a Helicopter Overlay (**U.S. VFR Helicopter**, **Gulf VFR Helicopter**, or **Gulf IFR Helicopter**).



VFR Helicopter Chart Overlay


Accessing Advanced Map Settings:

- 1) Touch  > **Map/Chart** > **Map Name** > .
- 2) Touch **General**, **Airports**, **Nav Aids**, **Airspaces**, or **Cities**.
- 3) Use the sliders and selection buttons to set Visibility Ranges and Label Sizes for map features.
- 4) To give the new settings a name, Touch **General** > **Map Name**, and use the keyboard to enter a name.
- 5) Touch **Done** to save and exit, or touch **Restore Defaults** to restore the default Map Theme setting.

Categories	Map Item	Options			
General	Topography	Off, Shade, or On			
	Map Color	White, Green, or Brown			
	Map Type	IFR, or VFR			
	Map Name	User Defined Name			
Airports	Visibility Range	Large Airports Off - 200 nm	Med Airports Off - 50 nm	Small Airports Off - 20 nm	Pvt Airports Off - 20 nm
		Heliports Off - 20 nm	Seaplane Base Off - 50 nm	SafeTaxi Off - 2 nm	
	Label Size	Off, Small, Medium, Large			
Nav Aids	Visibility Range	VOR Off - 100 nm	NDB Off - 50 nm	Intersection Off - 10 nm	
		VRP Off - 10 nm	Low Airways Off - 100 nm	High Airways Off - 100 nm	
	Label Size	VOR, NDB, Intersection, VRP Off, Small, Medium, Large			
Airspaces	Filter All Airspaces	Hide All Airspaces Above Numerical Entry		Smart Airspace On/Off	
	Visibility Range	Class B Off - 200 nm	Class C Off - 200 nm	Class D Off - 100 nm	
		Class E/TRSA Off - 100 nm	TMA Off - 200 nm	Control Area CTA Off - 100 nm	
		Control Zone CTR Off - 100 nm	ATZ/TIZ/MATZ Off - 100 nm	Euro Airway Off - 100 nm	
	SUA Visibility Range	Restricted Off - 200 nm	Alert/Warning Off - 200 nm	Parachute Area Off - 100 nm	MOA Off - 200 nm
		ADIZ Off - 100 nm	Danger Off - 100 nm	Other Off - 100 nm	
	Label Style	Airspace Size Off, Small, Medium, Large			
Airspace Style Standard, Enhanced					
	Airspace Color Standard, Dark				
Cities	Visibility Range	Large City Off - 500 nm	Medium City Off - 200 nm	Small City Off - 100 nm	Small Town Off - 50 nm
	Label Size	Large City, Medium City, Small City, Small Town Off, Small, Medium, Large			

OVERLAYS

Map Overlays provide graphical weather products such as graphical TFRs, graphical NOTAMs, graphical Obstacles, Terrain, Live Track Log, Lightning, and Clouds. Multiple Overlays can be selected for display. Some overlays are mutually exclusive such as Radar and FIS-B. Overlays in the right column, (e.g. PIREPs, Winds Aloft, Fuel Prices, and Weather) are also mutually exclusive.

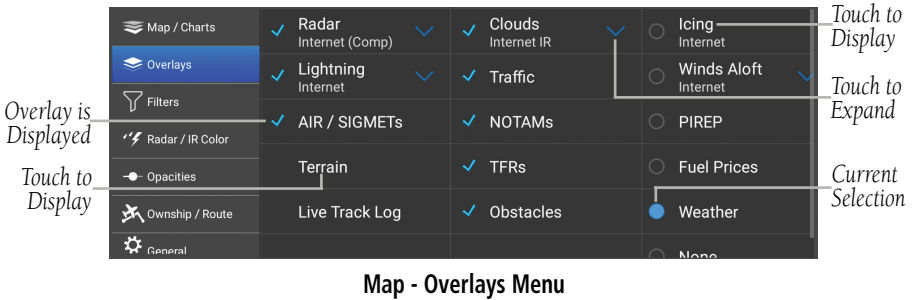




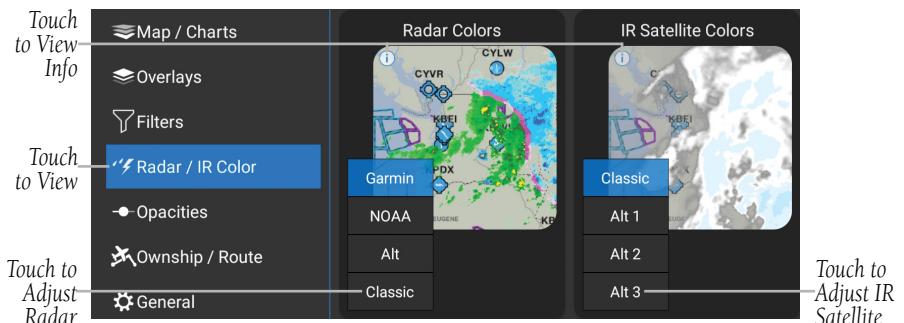
Map - Overlays Menu

RADAR/IR COLOR

The radar and infrared color palettes and the color of the intensity returns can be configured.

Viewing radar and infrared satellite color palettes:


- 1) From any page, touch **Home** > .
 - 2) Touch  > **Radar/IR Color**.
 - 3) Touch  on the top left of the 'Radar Colors' or 'IR Satellite Colors' box to view the color palettes options.
 - 4) Touch **Garmin**, **NOAA**, **Alt**, or **Classic** for the desired 'Radar Colors'.
- Or:** Touch **Classic**, **Alt 1**, **Alt 2**, or **Alt 3** for the desired 'IR Satellite Colors'.



Map - Radar / IR Color Menu

OPACITIES


The Opacities menu provides sliders to set the opacity for many items, some of which include: Radar, Clouds, Lightning, AIR/SIGMETs, Route, PIREPs, Winds Aloft, Fuel Prices, Weather, TFRs, and Traffic.

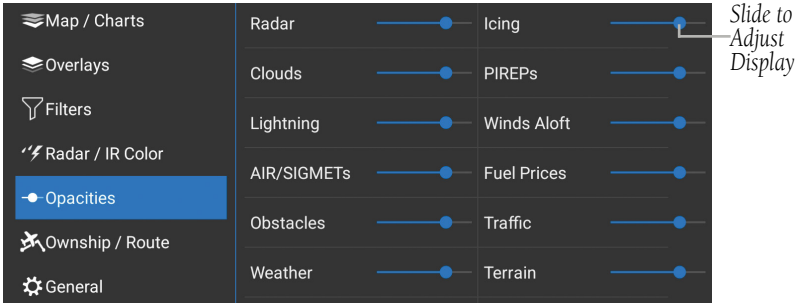

Map - Opacities Menu

OWNSHIP/ROUTE

The Ownship / Route tab provides access to controls for activating and configuring the Track Vector and Range Rings as well as for changing the Ownship Symbol. The Aircraft Symbol is displayed on maps, Geo-referenced FliteCharts, and SafeTaxi diagrams when the application senses movement, otherwise the blue system location symbol is used.

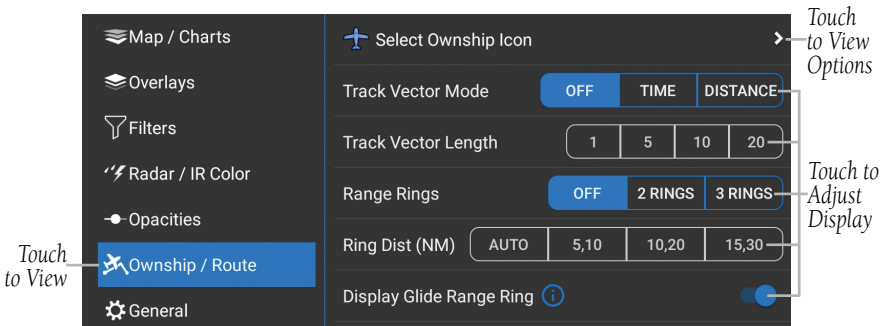

Map - Ownship / Route Menu

Changing Ownship Symbol:



- 1) From the map pane, touch .
- 2) Touch the **Ownship / Route** Tab.
- 3) Touch **Select Ownship Icon**.
- 4) Touch the desired Ownship aircraft symbol from the list.



Ownship Aircraft Symbol Example



System Location Symbol

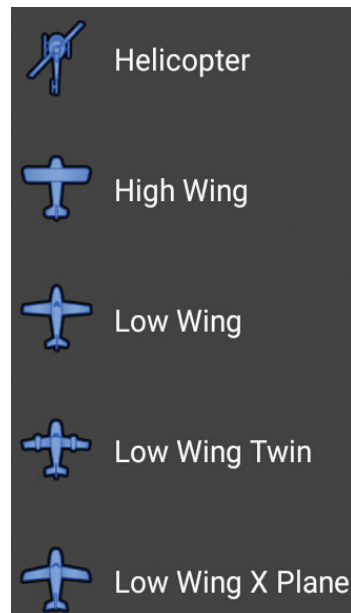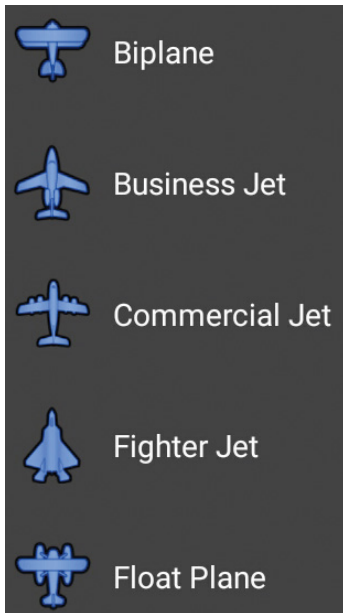


List of Ownship Aircraft Symbols

RANGE RINGS

The Range Rings are rings drawn around and centered on the aircraft's present position and can be configured Off, or as 2/3 Rings. When configured for 2 Rings the range can be set to **AUTO**, **5/10**, **10/20**, or **15/30**. When configured for 3 Rings the range can be set to **AUTO**, **5/10/20**, **10/20/40**, or **15/30/60**. When **AUTO** is selected the Range Rings will dynamically change from as little as 200FT to as much as 1200NM based on the current map range.

EXTENDED CENTERLINES

Extended Centerlines provide a graphical extension of the centerline for each runway for all airports that are part of the Flight Plan. Extended Centerlines can be very helpful when approaching an unfamiliar airport. The Extended Centerlines Visibility slider sets the Map Scale (OFF(default)-5NM) at which the extended centerlines will become visible on the map. Extended Centerlines can be configured as magenta feathers (**Feathered**), or as dashed light and dark green lines (**Dashed Line**)

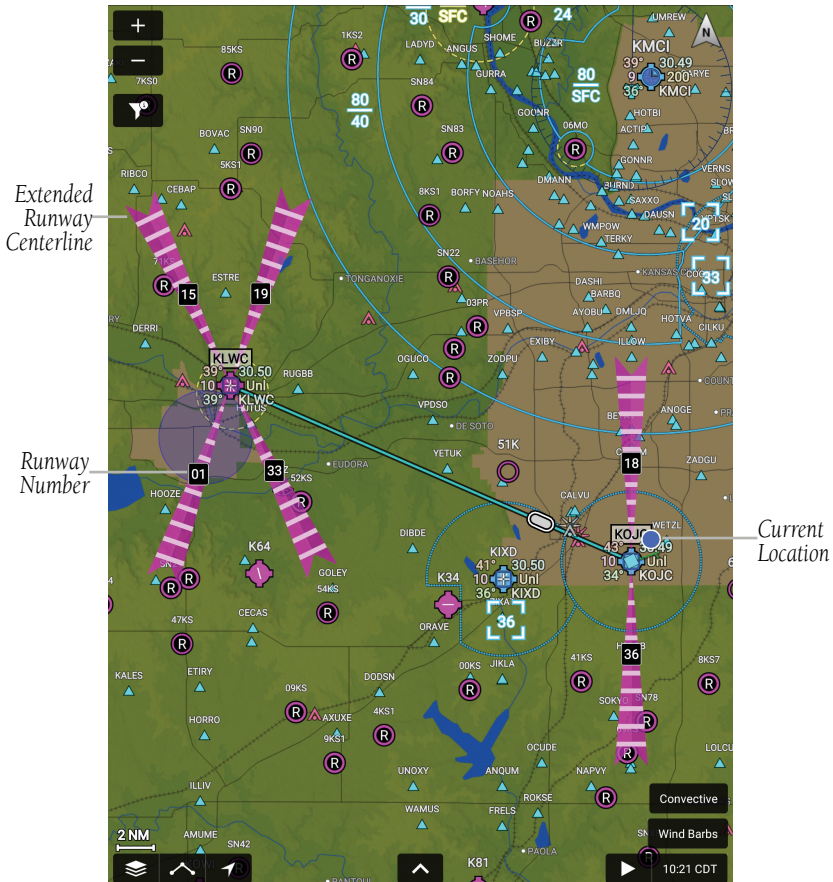



Extended Runway Centerlines - Feathered

TRACK VECTOR


The Track Vector is a solid blue line segment that extends from the Ownship symbol to a predicted location. The track vector can be configured for a look ahead time (1, 5, 10, or 20 minutes) or a look ahead distance (1, 5, 10, or 20 nautical miles). When a look ahead time is selected the length of the vector varies based on ground speed. The track vector is useful in minimizing track angle error and for avoiding traffic, obstacles and terrain.

Enabling/Disabling and Configuring the Track Vector:

- 1) Touch **Home** > .
- 2) Touch  > **Ownship / Route**.
- 3) Select the Track Vector Mode **Off**, **Time** (min), or **Distance** (NM).
- 4) Select the Track Vector Length **1**, **5**, **10** or **20**.

GLIDE RANGE RING


This feature is an aid to estimate accessible airports and terrain if the aircraft were forced into glide circumstances. The displayed ring updates in real time, derived from the selected aircraft's altitude, speed, and performance details. Since Garmin Pilot supports multiple aircraft, the Glide Range Ring refers to the current active flight plan to determine which aircraft performance details to calculate the ring shape.

The Glide Range Ring requires glide performance details to be specified in Garmin Pilot's settings. This is accessed through **Home** >  > **Aircraft**. Touch on an aircraft (not aircraft type) to edit its details, and scroll down to the Glide section to specify the **Glide Ratio** and **Best Glide Speed**. Refer to the aircraft documentation for these values.

The **Glide Range Buffer** setting can be used to shrink the Glide Range Ring in situations where glide performance is expected to be less than ideal, perhaps due to shifting winds. Increasing this setting will decrease the size of the Glide Range Ring. Enabling **Shape Glide Ring for Terrain** will alter the shape of the Glide Range Ring to show intersection with terrain. Enabling **Shift Glide Ring for Wind** will factor in local wind conditions when calculating the Glide Range Ring shape. Note the Glide Range Ring uses the most recent weather data, which may be outdated if Garmin Pilot does not have access to real time weather data over Wi-Fi or with outboard hardware such as a GDL 39.

Enabling/Disabling the Glide Range Ring:


- 1) Touch  > **Ownship/Route**.
- 2) Touch the **Display Glide Range Ring** switch to **On**.

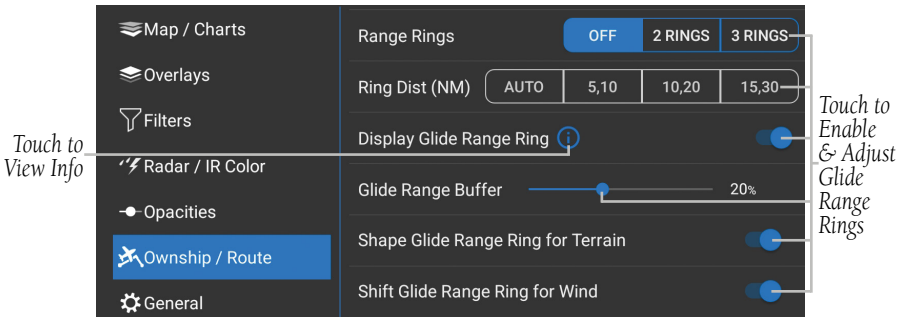

Map - Ownship/Route - Glide Range Rings

GENERAL MAP SETTINGS

The General tab provides access to controls for activating/deactivating Night Mode, Auto Zoom, GPS Pulse Animation, map centering on current track, and Map Performance Boost. Additionally, there are controls for displaying and configuring the Nav Bar, displaying Route Icons, User Waypoints, Route Labels, Persistent Map Scale, and Stadium TFRs.

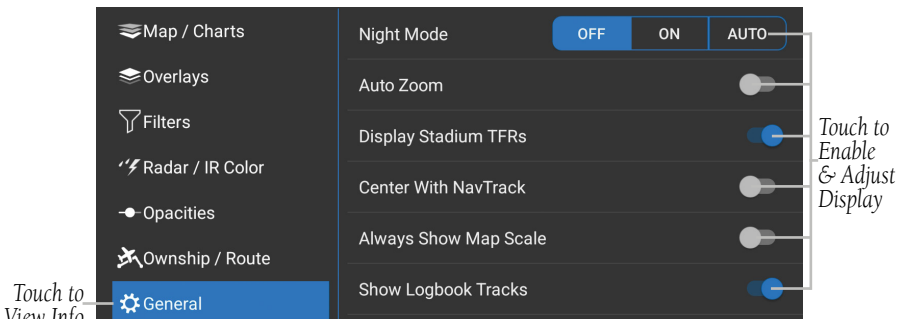




Map - General

NIGHT MODE

Enabling Night Mode presents the map with a high-contrast background for easy viewing in low light. SafeTaxi charts support Night Mode, however, other charts do not. Night Mode can also be set to Auto to automatically change the map based on time of day.

Enabling/Disabling Night Mode for Map and SafeTaxi:

- 1) Touch **Home** > .
- 2) Touch  > **General**.
- 3) Select the desired Night Mode: **Off**, **On**, or **Auto**.

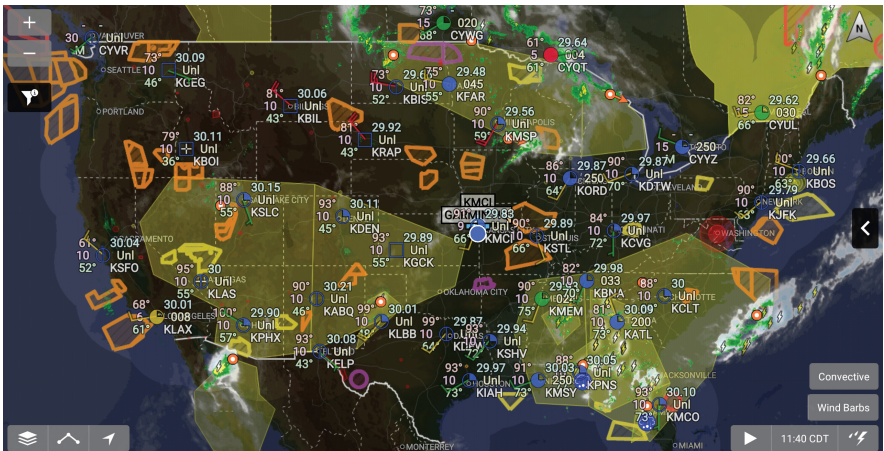

Map - Night Mode

AUTO ZOOM

Auto Zoom begins at the departure airport by showing SafeTaxi (subscription and download required) or the smallest range that clearly shows the departure point, and gradually zooms out to the smallest range clearly showing the active waypoint. When arriving at the destination Auto Zoom gradually zooms in to show SafeTaxi (subscription and download required) or the smallest range that clearly shows the destination. Auto Zoom only works when the map is centered on aircraft and can be enabled/disabled in the General Map Settings Menu.

NAV BAR

The Nav Bar provides user selectable navigation and weather data displayed at the top of the map pane. Touch any field in the Nav Bar to enable/disable any of the available navigation parameters. Touch and slide the Nav Bar left or right to bring the scroll progress bar and selected parameters into view.

NAV BAR FIELD OPTIONS:

- Air/Ground State
- Altitude
- Baro Vertical Rate
- Bearing
- Biometrics
- Corrected Pressure Alt
- Course
- Cross Track Error
- Distance (Dest)
- Distance (Next)
- ETA (Dest)
- ETA (Next)
- ETE (Dest)
- ETE (Next)
- ETE (Dest)
- ETE (Next)
- GPS Altitude
- GPS Altitude AGL
- Ground Speed
- Height Above Terrain
- Horizontal Accuracy
- Indicated Airspeed
- Latitude
- Longitude
- Magnetic Heading
- Next Waypoint
- OAT (static)
- Pitch
- Radio Height
- Roll
- Time (Zulu)
- Track
- True Airspeed
- True Heading
- Vert Accuracy
- Vertical Speed
- WX-Ceiling
- WX-Visibility
- WX-Wind
- Wind Direction
- Wind Speed

FLIGHT PLAN REVIEW FROM MAP SCREEN

If the Map is displaying an active flight plan, touch the main header at the top of the screen to review the active flight plan's performance details, add and remove waypoints, and change the flight plan routing. The main header turns gray to show the Map is now reviewing the flight plan. The review primarily shows the active flight plan's airports, waypoints, departures, and arrivals. The review also shows performance statistics for each waypoint, including bearing, distance, ETE and ETA, and fuel statistics. Additionally, the flight plan review shows a Trip Summary with performance information specific to the current aircraft.

While the aircraft is stationary, the main header shows Flight Plan (Planned), and the flight plan details are calculated based on the current aircraft's performance. While the aircraft is in flight, the main header shows Flight Plan (Actual), and uses the current aircraft's actual ground speed in these calculations. The active flight plan can be edited in both Planned and Actual modes.

Reviewing Active Flight Plan From Map Page:

- 1) Touch **Home** >
- 2) While the Map is displaying a flight plan, touch the Main Header bar.
- 3) Touch to exit flight plan review and return to normal Map screen.

Editing Active Flight Plan From Map Page:

- 1) Touch **Home** >
- 2) While the Map is displaying a flight plan, touch the Main Header bar.
- 3) Touch **Routing** to select a suggested ATC route.
 - Or:** Touch to save or recall the flight plan from Stored Flight Plans.
 - Or:** Touch in the Manual Entry section to use the on-screen keyboard to type in flight plan waypoints.
- 4) Touch a flight plan waypoint to insert another waypoint before or after it.
- 5) Touch **Add Waypoint** to add another waypoint at the end of the flight plan.

Return to Map Page →

Manual Flight Plan Entry →

Flight Plan Segment →

Change Routing → **ROUTING**

Save/Recall Flight Plans →

Reverse Flight Plan →

Column Headings → **Bearin...**, **DIS**, **ETE To**, **Fuel Re...**

	Bearin...	DIS	ETE To	Fuel Re...
KHUT Hutchinson Rgnl	-	-	-	-
LBL Liberal	252°M	160NM	01:01	72.9GAL
DHT Dalhart	248°M	95NM	01:38	63.0GAL
FTI Fort Union	252°M	129NM	02:30	48.9GAL
SAF Summary				

Trip Summary → **Planned**

Expand Trip Summary →




Aircraft N599MR	Performance Config 74%	Cruise Airspeed 176kt	Altitude 12,000FT	Highest Point 1338FT
Initial Fuel 92Gal	Fuel Burn 16.3Gal/hr	Departure Time 11/02 14:30 CDT	Create Trip	

Flight Plan Review


MAP ZOOM

When a more detailed Chart is available, Garmin Pilot automatically switches to the more detailed chart as the zoom increases. For example, if VFR WAC is the current Base Chart, when the zooming in, the base chart detail will automatically change to VFR Sectional scale and detail. Continuing to zoom in over an area that has a TAC chart, Garmin Pilot will continue to zoom in to TAC scale, or the highest level of detail available for that area. When zooming out, the map scale will return to the selected level. For example, when zooming out on a VFR Sectional Base Map, Garmin Pilot will not change to a VFR WAC scale.

Chart Zooming:

- 1) From any page, touch **Home** > .
 - 2) Pinch fingers together (zoom out), or pull fingers apart or double-touch (zoom in).
- Or:** Use the Zoom In/Out Buttons  or .

Map Pane
Showing TAC
Detail & Scale

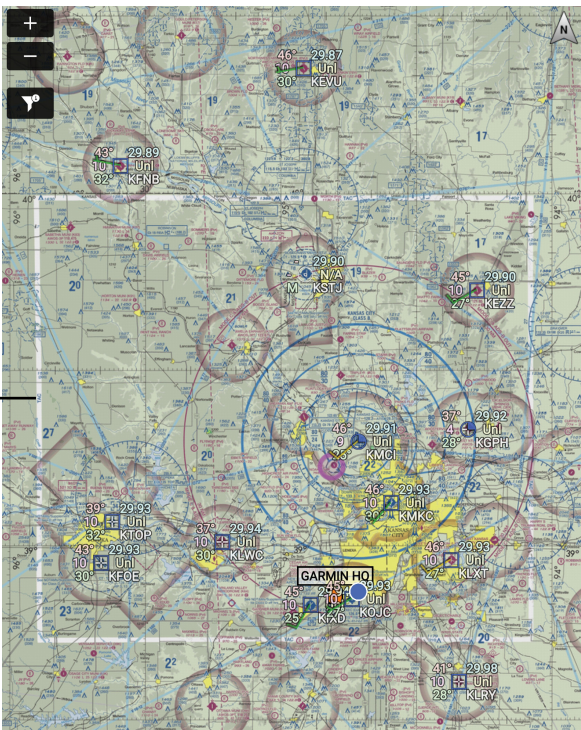


Map - Charts - VFR - TAC Outline

RADIAL MENU

Touch and hold any area on the map to access the Radial Menu. The Radial Menu displays context-sensitive buttons for information found within the inner radius of the menu. The context sensitive buttons provide details for airports, airspace, nav aids, and weather products. No matter where the Radial Menu appears, it will always provide the option to navigate direct to the location or create a user waypoint. To reposition the Radial Menu, simply touch-drag it to a new location. Tap outside of the Radial Menu to close. The appropriate Navigation Data must be downloaded in order to access all the features provided via the Radial Menu. Information displayed in the Radial Menu is determined by what is set in the Map/Chart Settings. For example if airspace is turned off in the Map Settings, airspace information will not be presented in Radial Menu searches. Traffic in the Radial Menu is displayed in Garmin Pilot when paired with an approved, configured device.

Accessing Radial Menu:

- 1) From any page, touch **Home** > .
- 2) Touch on the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch anywhere outside of the Radial Menu to exit.

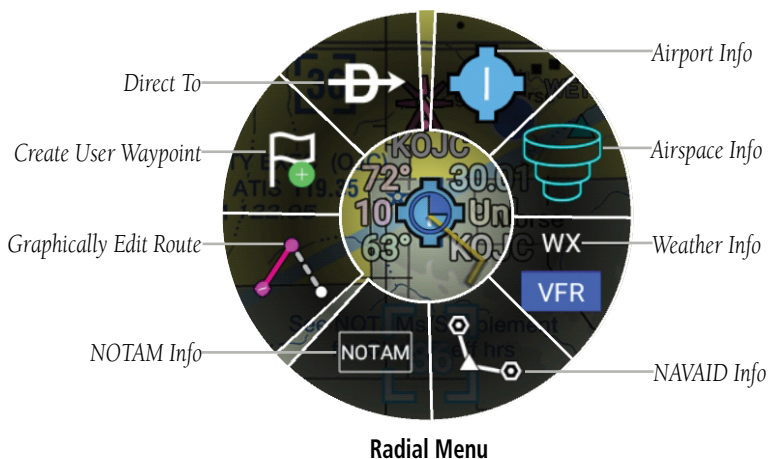


Repositioning Radial Menu:


- 1) From any page, touch **Home** > .
- 2) Touch and hold on the Map Pane until the Radial Menu appears.
- 3) Touch and drag the Radial Menu to reposition over a new area.

Radial Menu Symbol	Description	Radial Menu Symbol	Description
	Navigate Direct To		Public Soft Surface, Serviced Airport
	Create User Waypoint		Private Soft Surface, Serviced Airport
	Graphically Edit Route		Heliport
	Airways		Solid Surface Airport, No Services
	Weather Observation Condition		VOR/DME
	Obstacle Information		VORTAC
	Airspace		VOR
	Towered, Serviced Airport		NDB/DME
	Towered, Private Airport		NDB
	Marker/NDB		Logbook Tracks
	Traffic		Temporary Flight Restriction (TFR)
	PIREP		AIRMET
	SIGMET		Winds Aloft
	Seaplane Base		Fuel Price
	NOTAM		

Radial Menu Symbols



Viewing NAVAID, Obstacle, or Weather Information From Radial Menu:

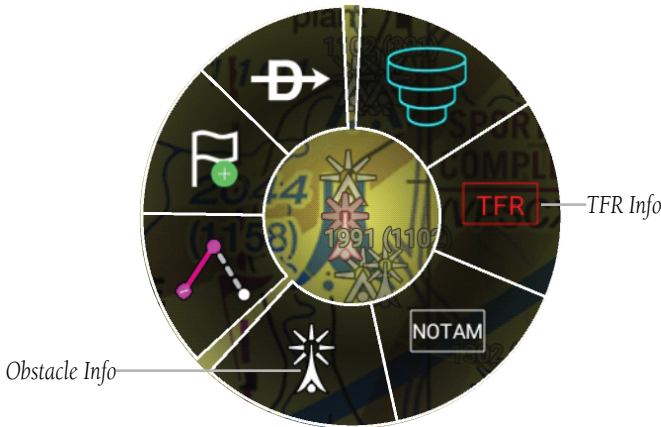
- 1) From any page, touch **Home** > .
- 2) Touch the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch the desired menu icon.
- 4) Touch outside of the dialog box to close.
- 5) Touch **Done** or outside of the Radial Menu to exit.




Radial Menu - Obstacle & TFR

Viewing Airspace Information From Radial Menu:

- 1) From any page, touch **Home** > .
- 2) Touch the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch  to view the 'Airspaces' dialogue box.
- 4) Touch the desired Airspace from the list to highlight, view.
- 5) Touch Back on the device or anywhere outside of the dialogue box to close.

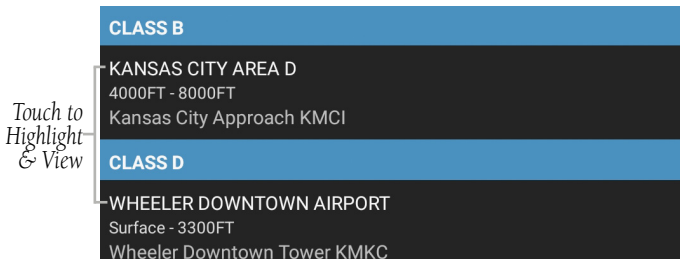

Radial Menu - Airspaces Dialogue Box

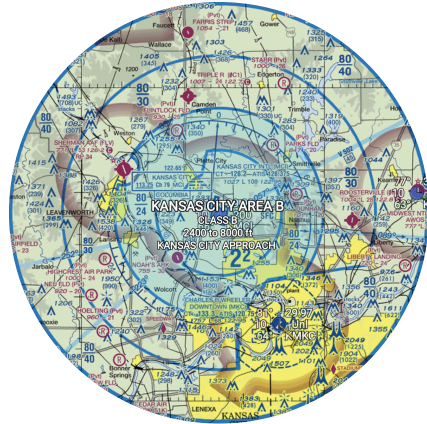




Radial Menu - Graphical Airspace - Class B Shelves

Airspace and Obstacle NOTAMs are now available as a graphical overlay on the Map and a symbol in the Radial Menu. Airspace NOTAMs may be depicted as a circle or shape, and are labeled with the NOTAM title along with associated altitude. In addition, airspace NOTAMs that will become active within the next 24 hours are displayed in amber (yellow), with a brighter contrast attributed to restricted items.



NOTE: In an effort to declutter the Map, not all Graphical Airspace NOTAMs will be visible.

Adjusting NOTAM Filters:


- 1) From any page, touch **Home** >  >  > .
- 2) Toggle the 'Filter NOTAMs Base on Active FPL' switch to enable/disable.
- 3) Touch the '+' or '-' button to adjust the time frame for 'Upcoming NOTAM Visibility'.
- 4) Toggle the 'Hide Terminal NOTAMs', 'Hide Obstacle NOTAMs', 'Hide NAVAID NOTAMs', 'Hide UAS NOTAMs', and 'Hide 5G NOTAMs' switch to enable/disable.



NOTE: When the 'Filter NOTAMs Based on Active FPL' is enabled, the display will show effective NOTAMs on the Map and within the Widget during the Estimated Time Enroute (ETE) of the Active Flight Plan, plus a 3 hour margin.




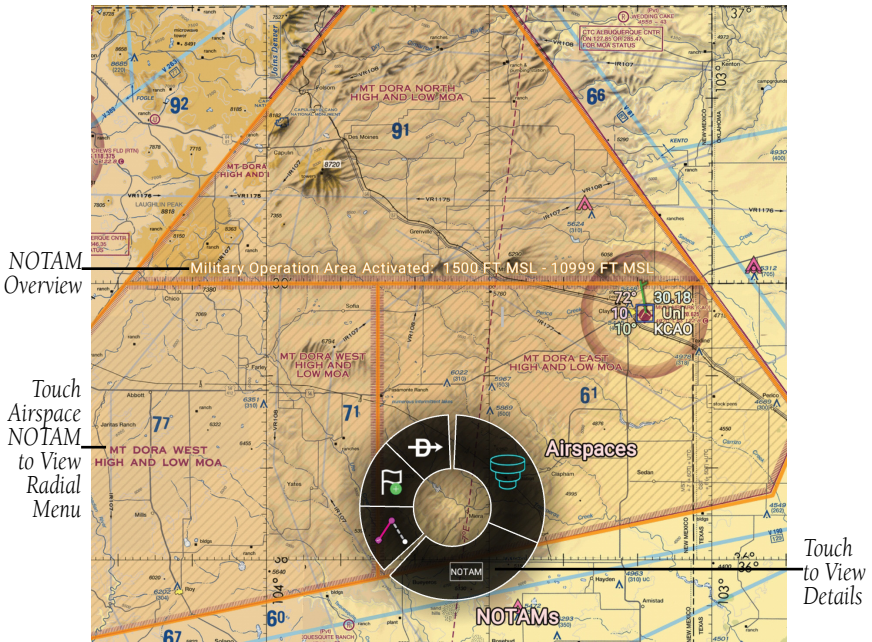
NOTE: 'Upcoming NOTAM Visibility' is not applied when 'Filter NOTAMs Based on Active FPL' is enabled.

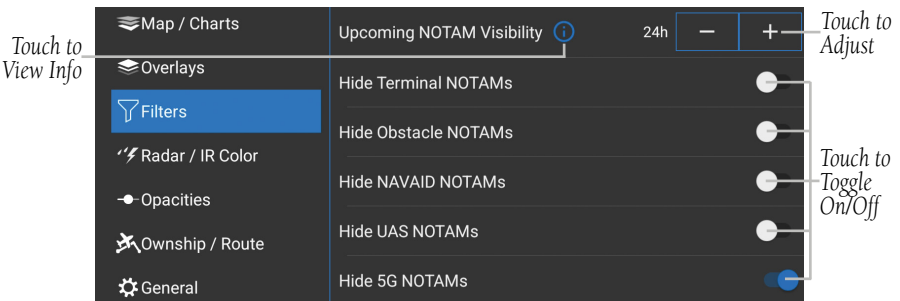


Map - Overlays - NOTAM Filters

Viewing Airspace NOTAMs From Radial Menu:

- 1) From any page, touch **Home** > .
- 2) Touch and hold near the desired Airspace in the Map Pane until the Radial Menu appears > **NOTAM** to view the 'NOTAMs' dialogue box.
- 3) Touch the desired NOTAM from the list to highlight and view details.
- 4) Touch Back on the device or anywhere outside of the dialogue box to close.



Radial Menu - Airspace NOTAMs - Overview

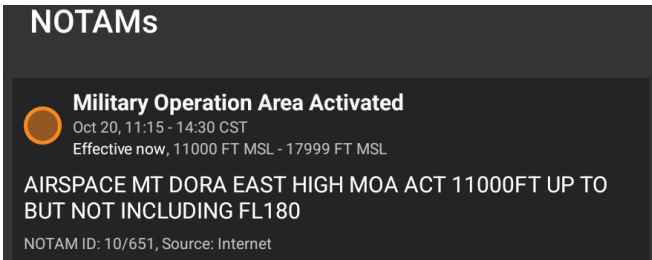

Radial Menu - Airspace NOTAMs Dialogue Box - MOA



NOTE: The User must always read the complete NOTAM and text, not just the title, effective / end time, date, and altitude(s). While a NOTAM may be effective, the User must verify if the airspace / area is active or inactive.



NOTE: "Hidden" NOTAMs can be accessed via Split-Screen by touching Home > Split-Screen > Widgets > NOTAMs.

Active Airspace NOTAMs are color-coded based upon the following classification:


Restricted / Danger - Red



NOTE: Red Radial Graphical Airspace NOTAMs are always 'hidden' when their radius is greater than 60nm. Non-Radial shapes will always be displayed.

• Prohibited	• Restricted	• Danger
• Temporary Restricted	• Avoid Overflying	• Reserved

Graphical NOTAMs - Restricted / Danger Areas - Red

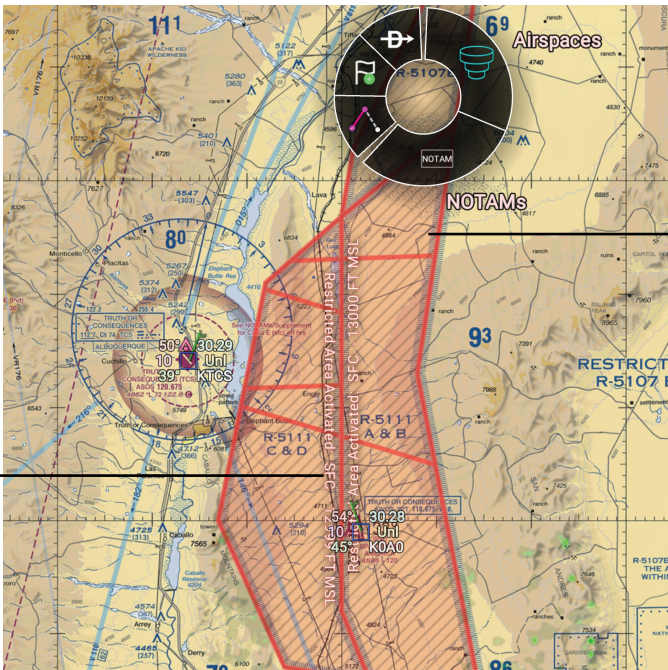

Touch Airspace NOTAM to View Radial Menu

NOTAM Overview

Radial Menu - Graphical Airspace NOTAMs - Restricted Area

NOTAMs

Restricted Area Activated
 Oct 20, 08:45 - 19:30 CST
 Effective now, Surface - Unlimited

AIRSPACE R5107E ACT SFC-UNL


NOTAM ID: 10/588, Source: Internet

Radial Menu - Airspace NOTAMs Dialogue Box - Restricted

Upcoming - Yellow



NOTE: 'Upcoming NOTAM Visibility' is not applied when 'Filter NOTAMs Based on Active FPL' is enabled.

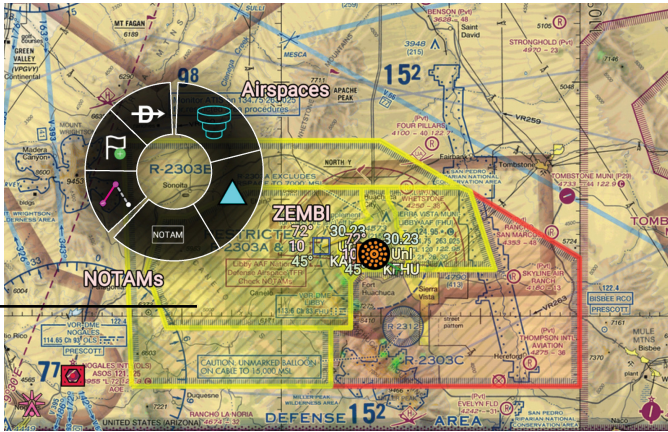

Touch
Airspace
NOTAM
to View
Radial
Menu

Radial Menu - Graphical Airspace NOTAMs - Upcoming

NOTAMs

- Restricted Area Upcoming**
 Oct 20, 19:01 - Oct 21, 08:59 CST
 Effective in 5h, 8000 FT MSL - 30000 FT MSL
AIRSPACE R2303B ACT 8000FT-FL300
 NOTAM ID: 10/581, Source: Internet
- Restricted Area Upcoming**
 Oct 20, 19:01 - Oct 21, 08:59 CST
 Effective in 5h, Surface - 15000 FT MSL
AIRSPACE R2303A ACT SFC-15000FT
 NOTAM ID: 10/580, Source: Internet


Radial Menu - Airspace NOTAMs Dialogue Box - Upcoming

Alerts / Warnings - Orange



NOTE: Orange Graphical Airspace NOTAMs are 'hidden' when their radius is greater than 40nm. Non-Radial shapes will always be displayed.

- Warning Area
- Military Operations Area (MOA)
- Scheduled Exercises (Military)

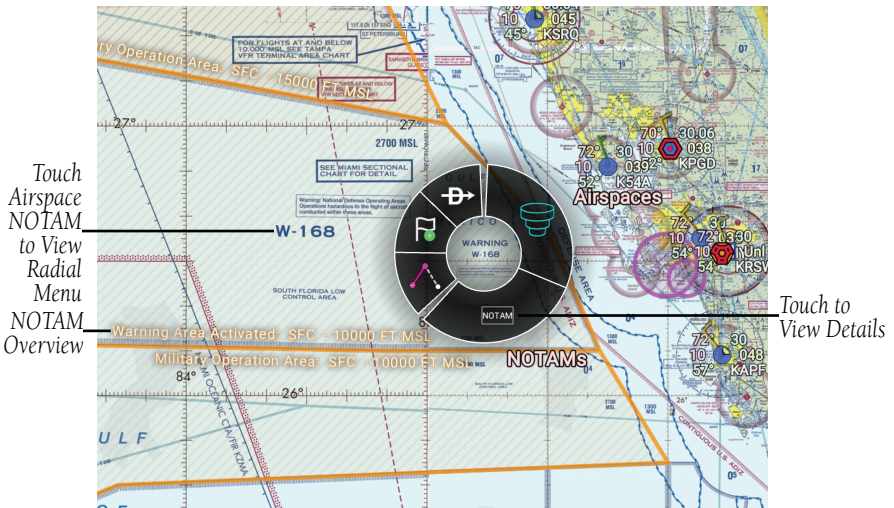

Radial Menu - Graphical Airspace NOTAMs - Warning

NOTAMs

Warning Area Activated
 Oct 20, 10:00 - 14:00 CST
 Effective now, Surface - 10000 FT MSL

AIRSPACE W168 ACT SFC-10000FT

NOTAM ID: 10/697, Source: Internet

Radial Menu - Airspace NOTAMs Dialogue Box - Warning

Flight Data Center (FDC) - Gray



NOTE: FDC Graphical Airspace NOTAMs, in a 'Radial' shape, are 'hidden' when their radius is greater than 100nm. 'Complex' FDC shapes are 'hidden' when their radius is greater than 150nm. Non-Radial shapes will always be displayed.

Touch Airspace NOTAM to View Radial Menu

Touch to View Details

NOTAM Overview



Radial Menu - Graphical Airspace NOTAMs - FDC

NOTAMs

FDC

Effective until Dec 31 17:59 CST

Effective now, Surface - Unlimited

CT..AIRSPACE NEW BRITAIN, CT..LASER LGT RESEARCH WI AN AREA DEFINED AS 414129N0724556W (HFD300010.3) SFC-13000FT AT AN ANGLE OF 90DEG FM THE SFC PROJECTING UP TO 13000FT, AVOID HAZARD. THIS BEAM IS INJURIOUS TO PILOTS/PAX EYES. BRADLEY /BDL/ TRACON TEL 860-386-3530 IS THE FAA CDN FACILITY.

NOTAM ID: 1/5067, Source: Internet

Radial Menu - Airspace NOTAMs Dialogue Box - FDC

Other - Purple




NOTE: FDC Graphical Airspace NOTAMs, in a 'Radial' shape, are 'hidden' when their radius is greater than 100nm. 'Complex' FDC shapes are 'hidden' when their radius is greater than 150nm. Non-Radial shapes will always be displayed



NOTE: Purple Graphical Airspace NOTAMs are 'hidden' when their radius is greater than 40nm. Non-Radial shapes will always be displayed.

• Parachute Jumping	• Alert	• Unmanned Aircraft Systems (UAS)
• Tethered Balloons	• Gathering of Aircraft	• Glider Flying
• Aerobatics	• Banner Towing	

Graphical NOTAMs - Other - Purple

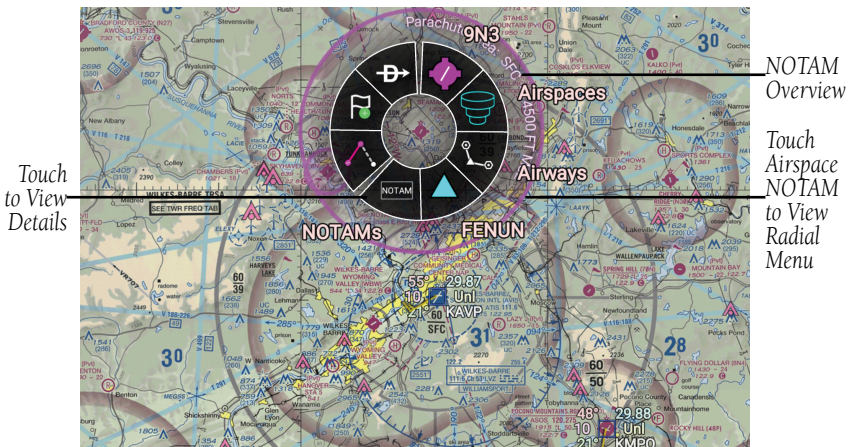

Radial Menu - Graphical Airspace NOTAMs - Other

NOTAMs

Parachute Area

Effective until Dec 31 11:30 CST

Effective now, Surface - 14500 FT MSL



AIRSPACE PJE WI AN AREA DEFINED AS 10NM RADIUS OF 9N3 SFC-14500FT


NOTAM ID: 07/011, Source: Internet

Radial Menu - Airspace NOTAMs Dialogue Box - Other


Graphical Obstacle NOTAMs are displayed on the Map in pink to differentiate them from permanent obstacles. Graphical Obstacle NOTAMs are displayed whenever the NOTAM or obstacle layer are enabled.

Viewing Graphical Obstacle NOTAMs From Radial Menu:

- 1) From any page, touch **Home** > .
- 2) Touch and hold on the desired obstacle, e.g. Tower  in the Map Pane until the Radial Menu appears > **NOTAM** to view the 'NOTAMs' dialogue box.
- 3) Touch the desired NOTAM from the list to highlight and view details.
- 4) Touch Back on the device or anywhere outside of the dialogue box to close.

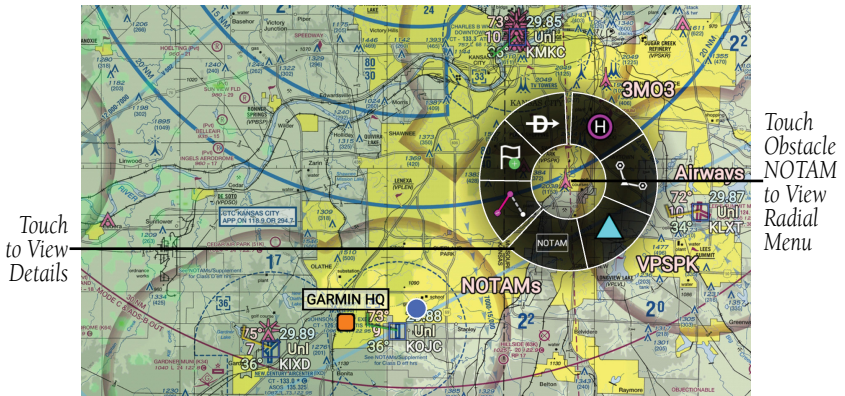

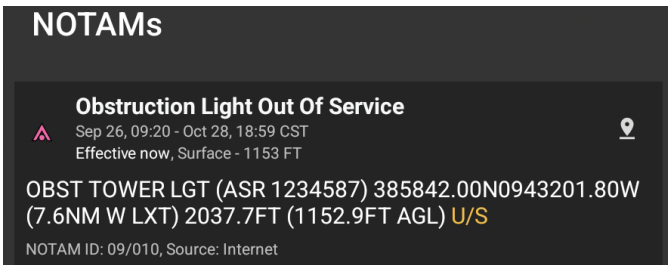


Radial Menu - Graphical Obstacle NOTAMs - Unlit Tower




Graphical Obstruction NOTAMs Dialogue Box - Obstruction Light Out


Viewing Airport Information From Radial Menu:

- 1) From any page, touch **Home** > .
- 2) Touch and hold near the desired Airport in the Map Pane until the Radial Menu appears > .
- 3) The Airport Info window displays multiple tabs for the User to select. As desired, touch **Info**, **Freq**, **Rwy**, **Proc**, or **Fuel** to view more information.
- 4) Touch  to view airport on Google Maps. Touch outside the dialogue box to exit or touch the 'Back' button to return to the Airport Info window.



NOTE: Google Map functionality requires an active Wi-Fi or cellular connection.

- 5) To exit the Airport Info window and return to the Map page, touch outside the dialogue box or touch the 'Back' button.
- 6) Touch  to leave the Map page and view the Airport Information page. Touch the 'Back' button to return to the Map page.

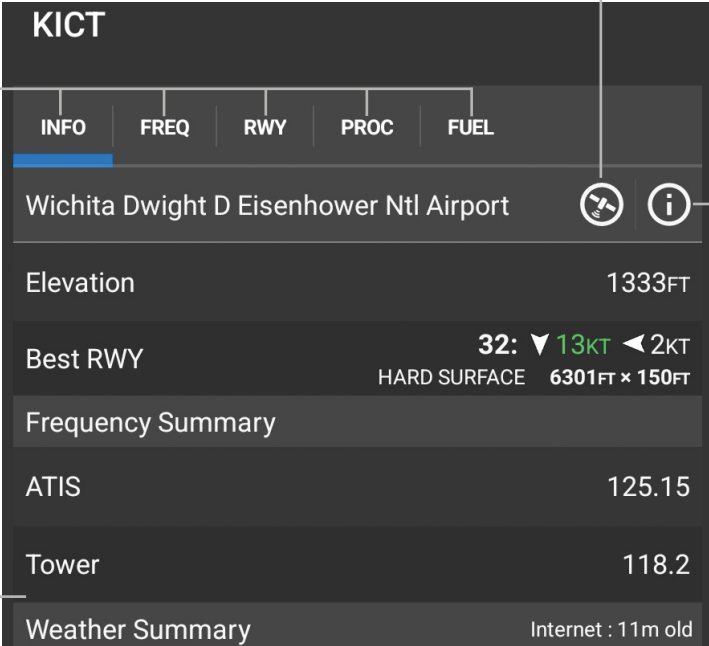

Touch to View on Google Maps

Touch to View Info

Touch to Open Airport Info Page

Scroll to View Info


KICT	
INFO	FREQ
RWY	PROC
FUEL	
Wichita Dwight D Eisenhower Ntl Airport	
Elevation	1333FT
Best RWY	32: ▼ 13KT ◀ 2KT
	HARD SURFACE 6301FT × 150FT
Frequency Summary	
ATIS	125.15
Tower	118.2
Weather Summary	Internet : 11m old

Radial Menu - Airport Info Tabs - Info

Navigating Direct-to Using Radial Menu:



NOTE: A GPS location must be active to use Direct To functionality.


- 1) From any page, touch **Home** > .
- 2) Touch and hold on the desired area in the Map Pane until the Radial Menu appears.
- 3) Touch **Direct-to**.




- 4) Within the Direct-to... dialog window, select **Map-Touch** to create a temporary waypoint at the selected point, or choose one of the nearby Navigation Database features from the list.

Or: Choose a waypoint from one of the other tabs (e.g., Search, Flight Plan, Nearest, or User).

5) Touch **Activate** to begin navigation.

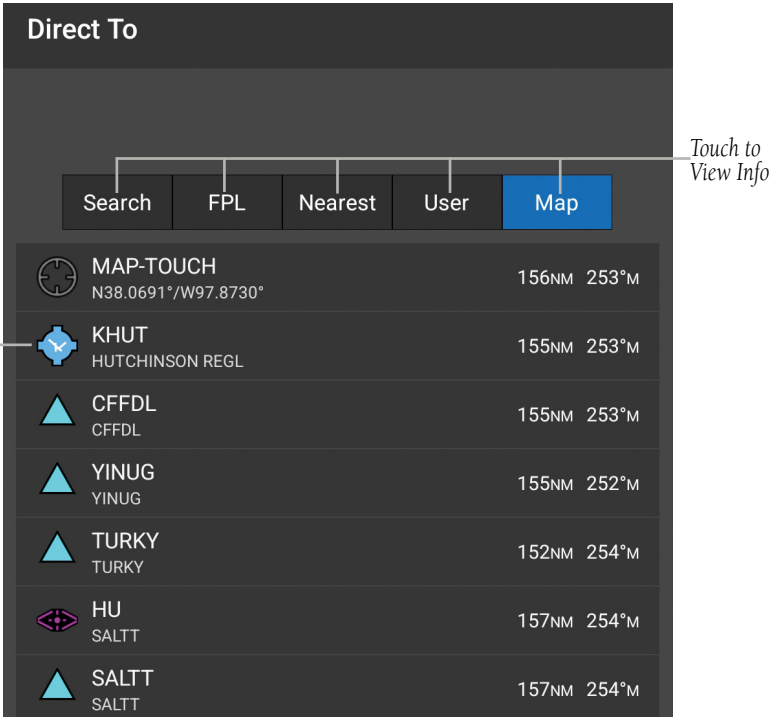

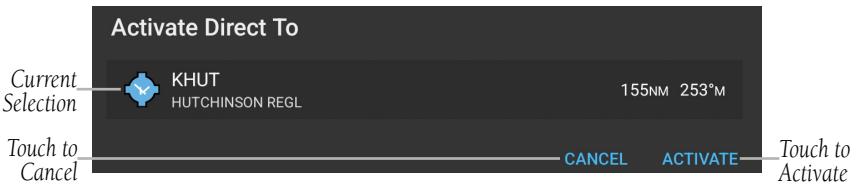


Map - Radial Menu - Direct To Menu



Map - Radial Menu - Direct To Airport - Activate


Graphically Edit Route:

- 1) From any page, touch **Home** > .
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.
- 3) Touch  to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.

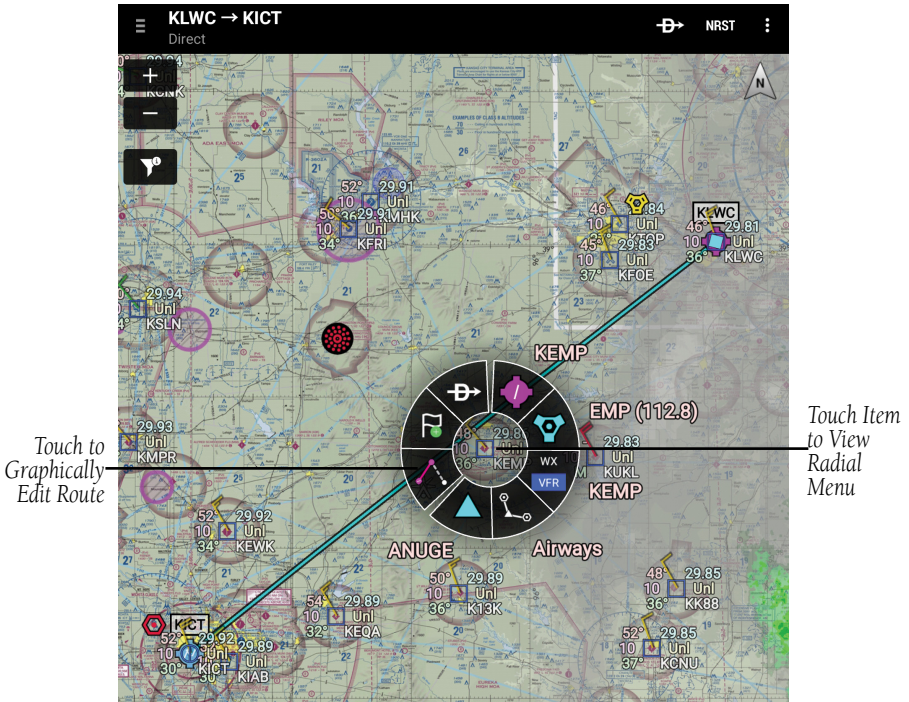

Map - Radial Menu - Graphically Edit Route - Add VORTAC


- 4) Long press a flight plan leg and drag, the flight plan leg to the desired location. Select a waypoint from the list of nearby navigation database waypoints, add Latitude/Longitude, or create a User Waypoint.

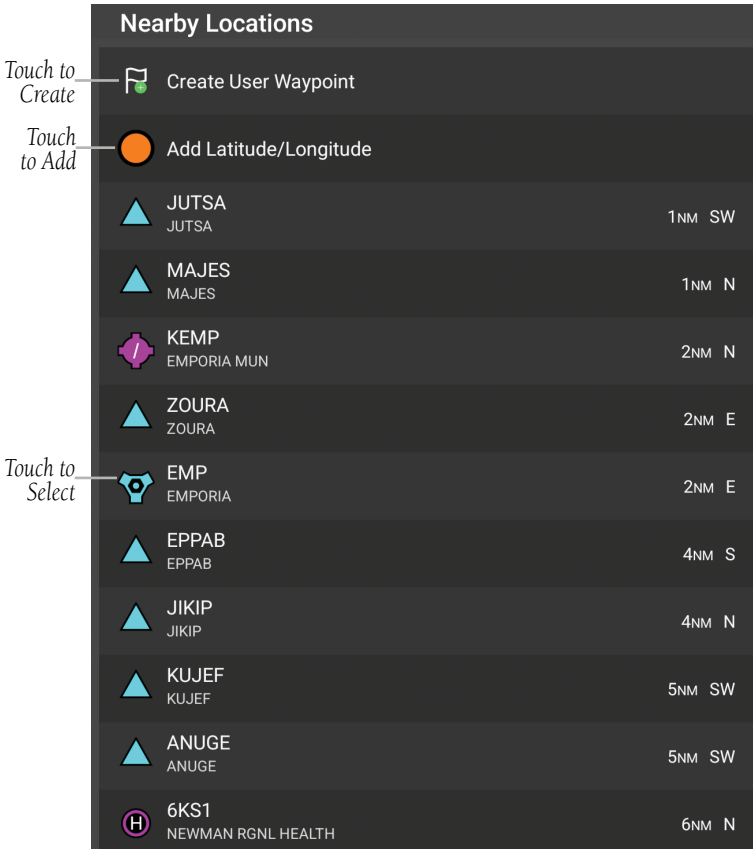

Map - Radial Menu - Graphically Edit Route - Menu


- Or:** Touch to start a new route.
- 5) Repeat step four for each flight plan leg to edit.
- 6) Touch to undo the most recent action.


- 7) Touch **Save** to adjust flight plan, or **Cancel** to exit Graphical Flight Plan Editing Mode without saving.

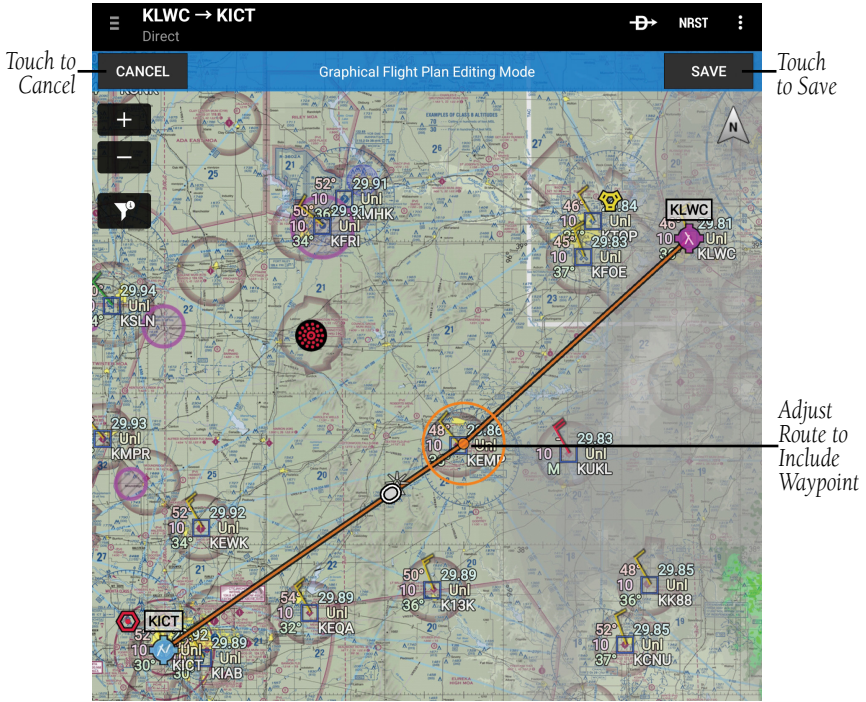

Map - Radial Menu - Graphically Edit Route - Editing Mode

Graphically Edit Standard Instrument Procedure (SID):


- 1) From any page, touch .
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.

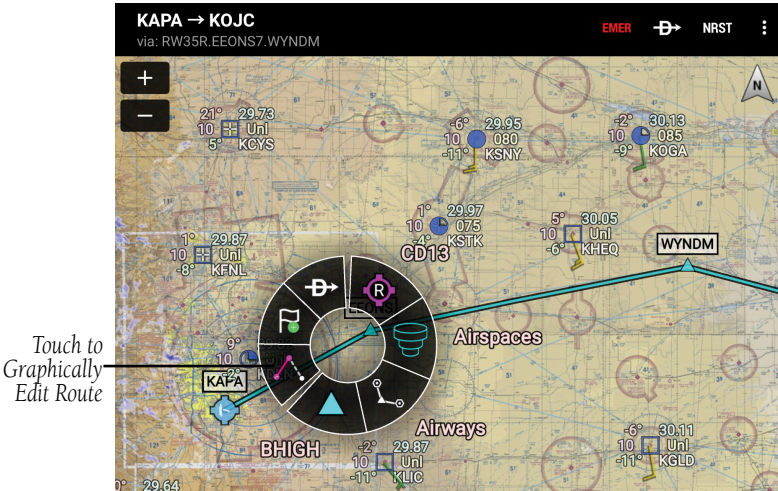

Touch to Graphically Edit Route

Radial Menu - Graphically Edit Route - SID

- 3) Touch  to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.

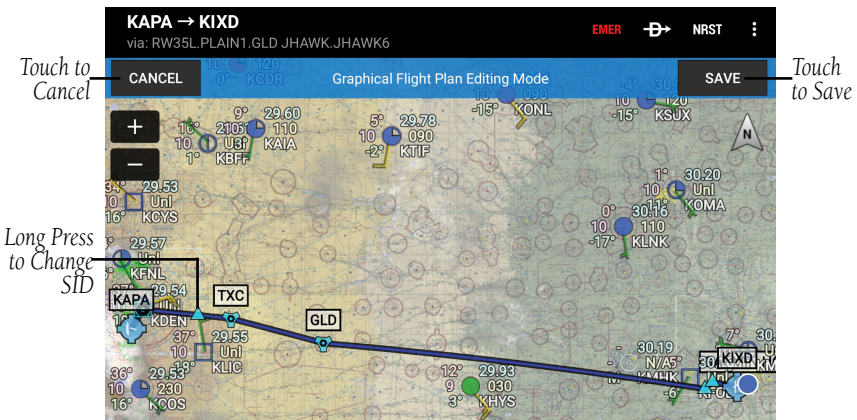


Touch to Cancel

Touch to Save

Long Press to Change SID

Graphically Edit Flight Plan - Map

- 4) Long press on a SID flight plan leg or waypoint. The **Change SID** dialog box appears.
- 5) Touch **Delete SID** to delete or select an alternate SID from the list and then select the desired transition from the submenu. If the selected flight plan leg is the first leg of a SID, the dialog box has the option to delete the departure point. If the departure point is deleted, the departure point and all waypoints associated with the SID are removed from the flight plan. The first waypoint after the SID becomes the departure point.

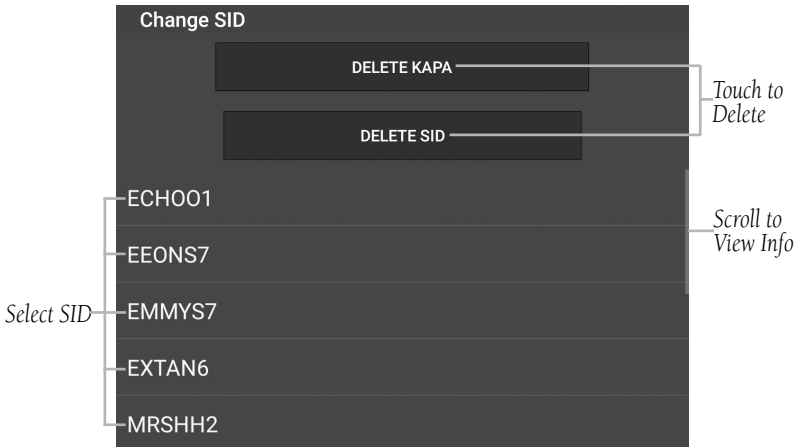


Graphically Edit Route - Change Standard Instrument Departure (SID)

- 6) Select a Departure Runway.




Graphically Edit Route - Change SID - Select Runway

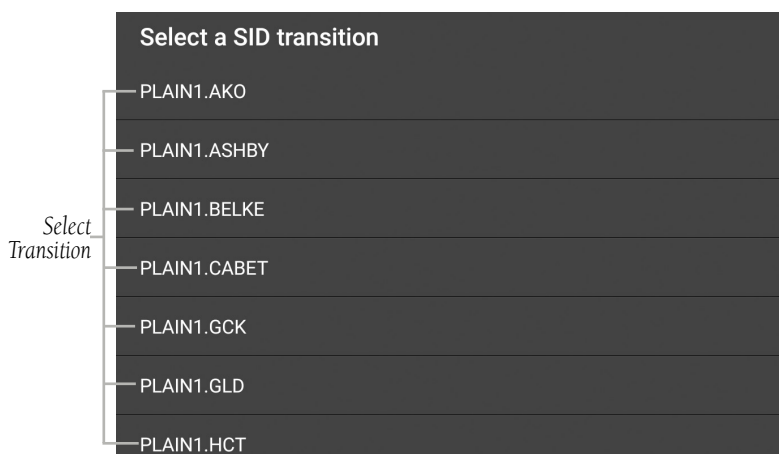

- 7) Select a SID Transition.




Graphically Edit Route - Change SID - Select Transition


- 8) Touch  to undo the most recent action.
- 9) Touch **Save** to accept changes or **Cancel** to exit without saving.

Graphically Edit Standard Arrival Route (STAR):


- 1) From any page, touch .
- 2) In the Map Pane, touch and hold any flight plan waypoint or flight plan leg until the Radial Menu appears.
- 3) Touch  to graphically edit the flight plan. The Radial Menu disappears and the **Graphical Flight Plan Edit Mode** blue banner appears just below the Control Bar.
- 4) Long press on a STAR flight plan leg or waypoint. The **Change STAR** dialog box appears.
- 5) Touch **Delete STAR** to delete or select an alternate STAR from the list and then select the desired transition from the submenu. If the selected flight plan leg is the first leg of a STAR, the dialog box has the option to delete the arrival point. If the arrival point is deleted, the arrival point and all waypoints associated with the STAR are removed from the flight plan.

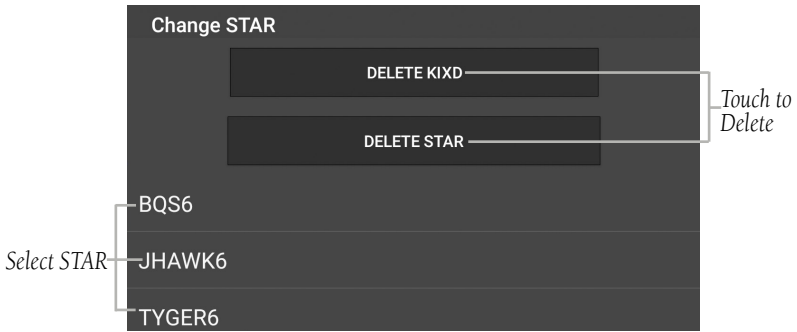

Graphically Edit Route - Change Standard Arrival Route (STAR)

- 6) Touch  to undo the most recent action.
- 7) Touch **Save** to accept changes or **Cancel** to exit without saving.


SID &
STAR
Included
in Route

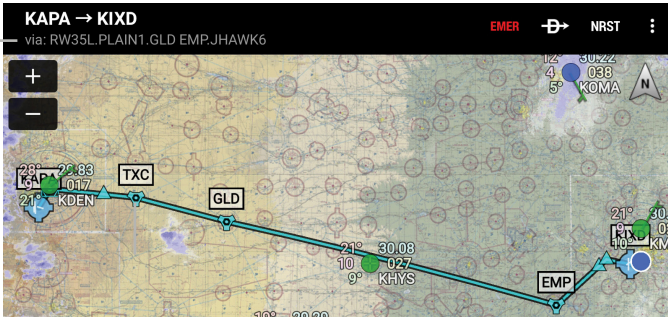

Graphically Edit Route - SID & STAR Included

DISTANCE MEASURING TOOL

The Distance Measuring Tool provides a quick and easy way to measure the distance between two points on the map. Simply drop two fingers onto the map display at the same time and hold both fingers on the display, a black line with arrow points on either end will appear. While holding both fingers on the map place one arrow point on a point and the other arrow point on another point and then remove both fingers from the map. The line and arrows show distance and to/from bearing information. Touch and drag the arrows to adjust the start and end position of the tool. Touch anywhere else on the display to remove the Distance Tool.

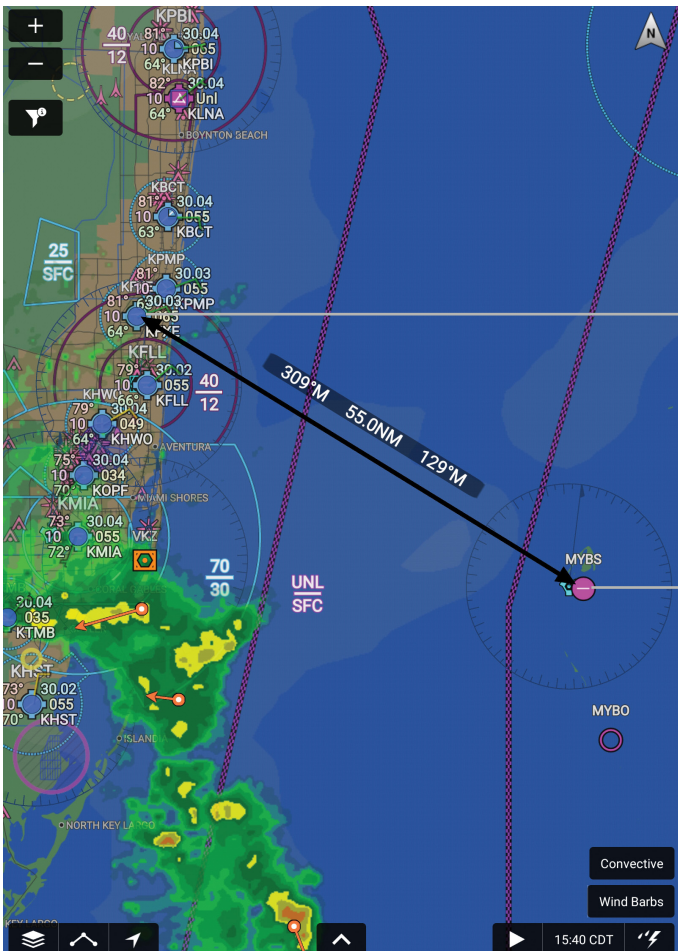


Distance Measuring Tool

SPLIT-SCREEN

The split-screen option allows the Map Page to be divided between the Map Pane and one of ten options including Widgets, Panel, Charts, SafeTaxi, Traffic, VIRB, Terrain, Checklists, SynVis, and Flight Profile. The split-screen feature is available in either portrait or landscape screen orientation. When in split-screen the Map Pane and the split pane function independently essentially providing two independent viewing areas. The Map Pane is always visible and will either be displayed on the top or left side of the display depending on the device orientation.

SPLIT-SCREEN (CHART, TRAFFIC, SAFETAXI)

Charts, SafeTaxi, and Traffic when viewed in split-screen have the same function, navigation, and capabilities as the full screen versions of these products.

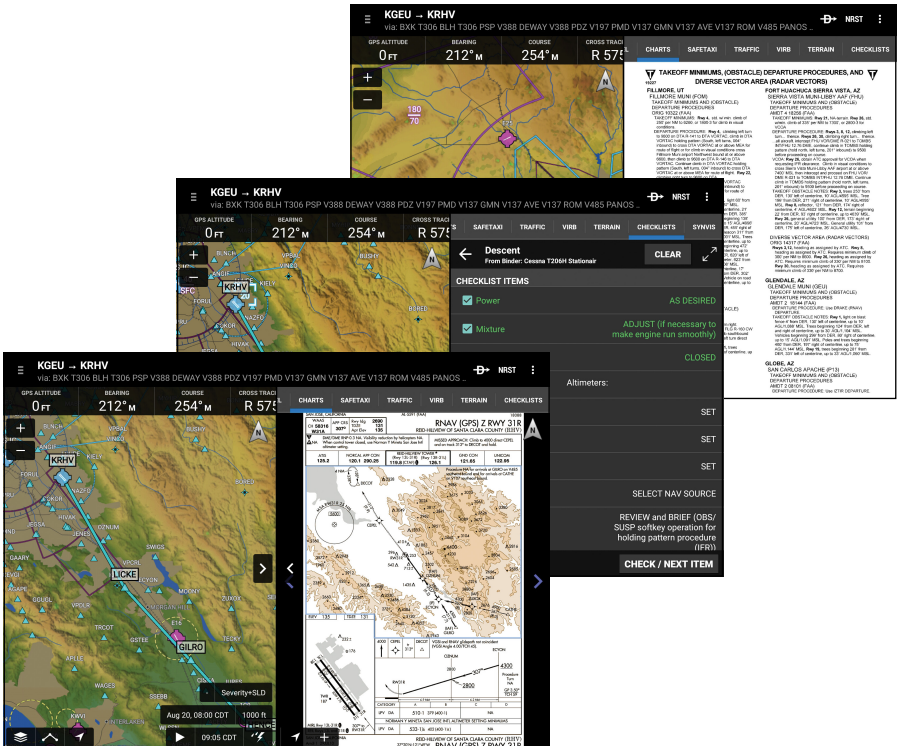


Split-Screen - Charts & Checklist


SPLIT-SCREEN (PANEL)

The Panel is only available in split-screen and may be configured to show navigation parameters and virtual instrument gauges in one of four selectable views. Panel configuration selection button/indicators are located at the bottom right of the panel.

Viewing the Panel:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Panel**.

Configuring Navigation Information in the Panel:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Panel**.
- 3) Select one of the three panel options with Navigation Data Fields.
- 4) Touch any one of the fields and select one of the options from the menu.

Navigation Data	Description
Air/Ground State	Identifies when the aircraft is either on the ground, or airborne..
Baro Vertical Rate	Uses barometric altitude information from the aircraft's altimeter to compute vertical guidance for the pilot. The specified vertical path is typically computed between two waypoints or an angle from a single way point.
Bearing	The compass direction from the present position to a destination waypoint.
Biometrics	The display of body measurements and calculations related to human characteristics.
Corrected Pressure Alt	The altitude of the aircraft above the standard datum plane.
Course	The magnetic direction from the last waypoint to the active waypoint.
Cross Track Error	The distance and direction, left or right, the aircraft is from the desired course in nautical miles.
Density Altitude	Pressure altitude corrected for non-standard temperature.
Distance (Dest)	The distance to the destination waypoint in the Active Flight Plan
Distance (Next)	The distance to the next waypoint in the Active Flight Plan.

Navigation Data	Description
ETA (Dest)	The estimated time at which the aircraft should reach the destination waypoint, based upon current speed and track.
ETA (Next)	The estimated time at which the aircraft should reach the next waypoint, based upon current speed and track.
ETE (Dest)	The estimated time it takes to reach the destination waypoint from the present position, based upon current ground speed.
ETE (Next)	The estimated time it takes to reach the next waypoint from the present position, based upon current ground speed.
GPS Altitude	The current GPS altitude or geometric height above Mean Sea Level (MSL) in feet.
GPS Altitude AGL	The current GPS altitude or geometric height Above Ground Level (AGL) in feet.
Ground Speed	The velocity the aircraft is traveling relative to the ground.
Height Above Terrain	The vertical distance of the aircraft above the terrain.
Horiz Accuracy	Displays the accuracy of horizontal guidance.
Indicated Airspeed	The direct instrument reading obtained from the ASI, uncorrected for variations in atmospheric density, installation error, or instrument error.
Latitude	Current latitude.

Navigation Data	Description
Longitude	Current longitude.
Magnetic Heading	Direction relative to magnetic North.
Next Waypoint	Next waypoint on the route of flight
OAT (Static)	The ambient temperature of the air around the aircraft.
Pitch	Current pitch. (GDL 39 3D only)
Radio Height	The height of the aircraft above the terrain immediately below the aircraft.
Roll	Current roll. (GDL 39 3D only)
Time (Zulu)	Current time
Track	The direction of aircraft movement relative to the ground.
True Airspeed	The speed of the aircraft relative to the air mass through which it is flying.
True Heading	Direction relative to true North, or the geographic North pole.
Vert Accuracy	Displays the accuracy of vertical guidance.
Vertical Speed	The rate of climb or descent (GPS-derived).
Wx-Altimeter	The altimeter setting at the nearest METAR reporting station.
Wx-Ceiling	The ceiling at the nearest METAR reporting station
Wx-Visibility	The visibility at the nearest METAR reporting station
Wx-Wind	The wind speed and direction at the nearest weather reporting station.
Wind Direction	The direction the wind is coming from.
Wind Speed	The vector difference between the airspeed and the ground speed.

Navigation Data Field Options

GPS ALTITUDE	BEARING	COURSE
10000 FT	250° M	250° M
CROSS TRACK ERROR	DISTANCE (DEST)	DISTANCE (NEXT)
R 60 FT	549 NM	8.8 NM
ETA (DEST)	ETA (NEXT)	ETE (DEST)
12:44 CDT	08:25 CDT	4:23
ETE (NEXT)	GROUND SPEED	LATITUDE
4:12	125 KT	N33.4784°
LONGITUDE	NEXT WAYPOINT	TIME (ZULU)
W112.6524°	BXK	15:20 z

Navdata (Portrait)

GPS-derived Airspeed

Touch to Set Max Ground Speed

Touch to Swap HSI & Attitude Indicator

Geometric Altitude (MSL)

GPS-derived VSI

Panel Select Button/Indicators


Classic Panel (Landscape)




Classic Panel (Portrait)




HSI/Attitude Indicator - Navdata (Landscape)

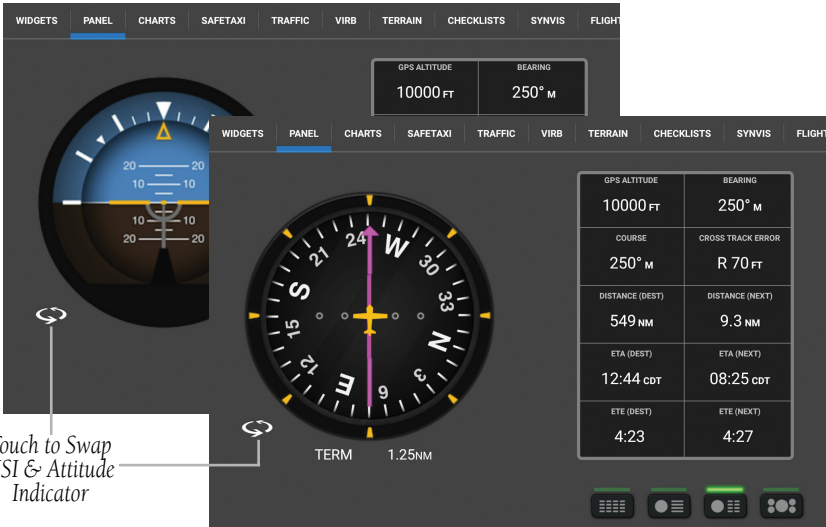

HSI/Attitude Indicator - Navdata (Portrait)

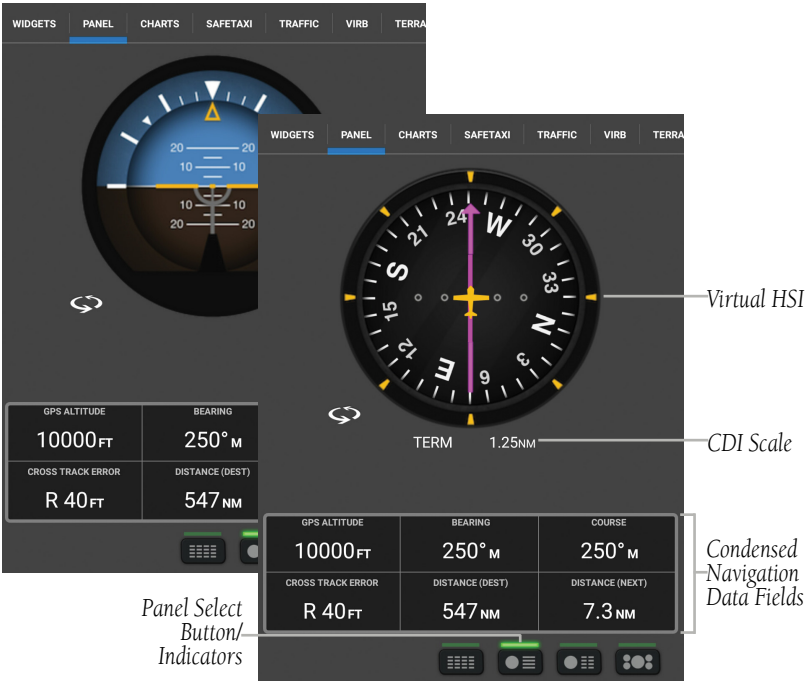

HSI/Attitude Indicator - Condensed Navdata (Landscape)

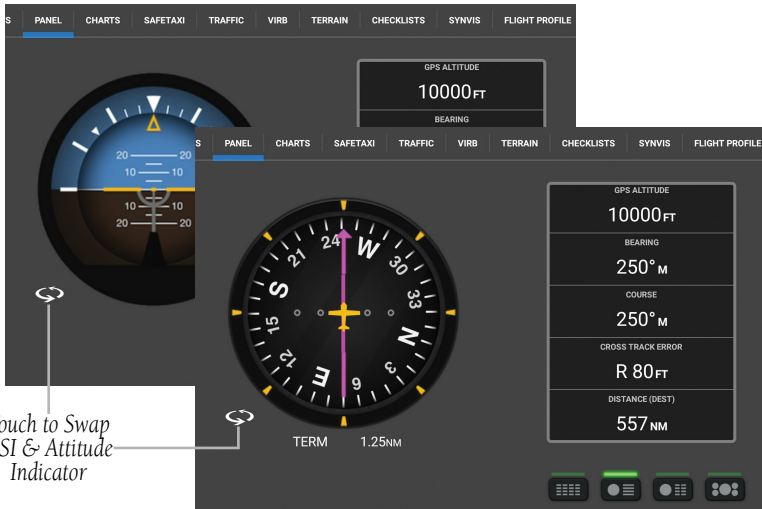


HSI/Attitude Indicator - Condensed Navdata (Portrait)

PANEL (OPTIONAL)



NOTE: The Garmin Pilot attitude functionality is only to be used as an aid and should not be used as a primary attitude indicator.

When connected to a compatible device, Garmin Pilot will display a back-up Attitude Indicator on the Panel. 'Pitch' and 'Roll' become available options for the Nav Bar on the Map Pane, and Navigation Data on the Panel.

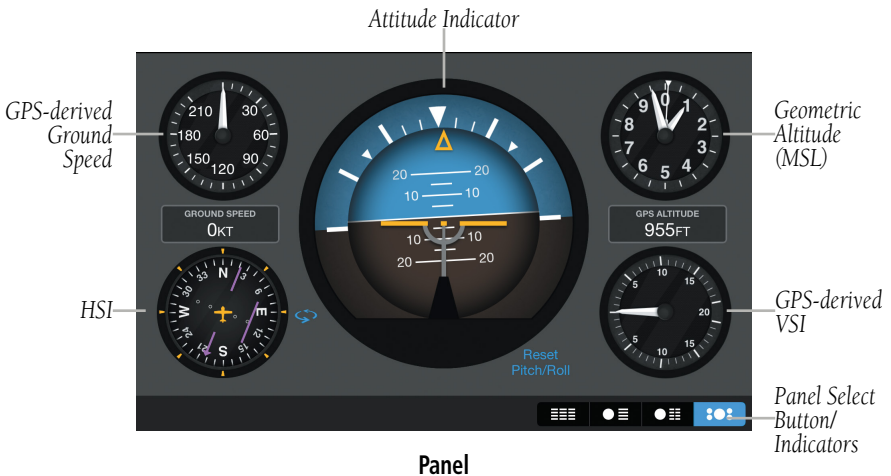

Swapping the Attitude Indicator and HSI position:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Panel**.
- 3) Touch  to swap the position of the Attitude Indicator and the HSI.

BEFORE SWAP



Touch to
Swap Attitude
Indicator
& HSI

AFTER SWAP





Attitude Indicator/HSI Swap

The leveling adjustments for pitch and tilt angles are performed automatically when the unit is powered on. However, if the unit moves, it may be necessary to command the GDL 39 3D to perform the leveling process.



Leveling the GDL 39 3D:


From the Connex page or with the Panel displayed, touch **Menu** > **Reset Pitch/Roll GDL 39 3D**.

SPLIT-SCREEN (SYNTHETIC VISION)

Synthetic Vision can be displayed in split-screen mode for enhanced situational awareness. Split-screen mode can be viewed from either  or  on the Home Menu.


Viewing Split-Screen Synthetic Vision From Map Page:

- 1) From any page, touch **Home** > .
 - 2) Touch **Menu** > **Split-Screen**.
- Or:**
- 1) Touch  to view the split-screen selector.
 - 2) Touch the **SynVis** tab.

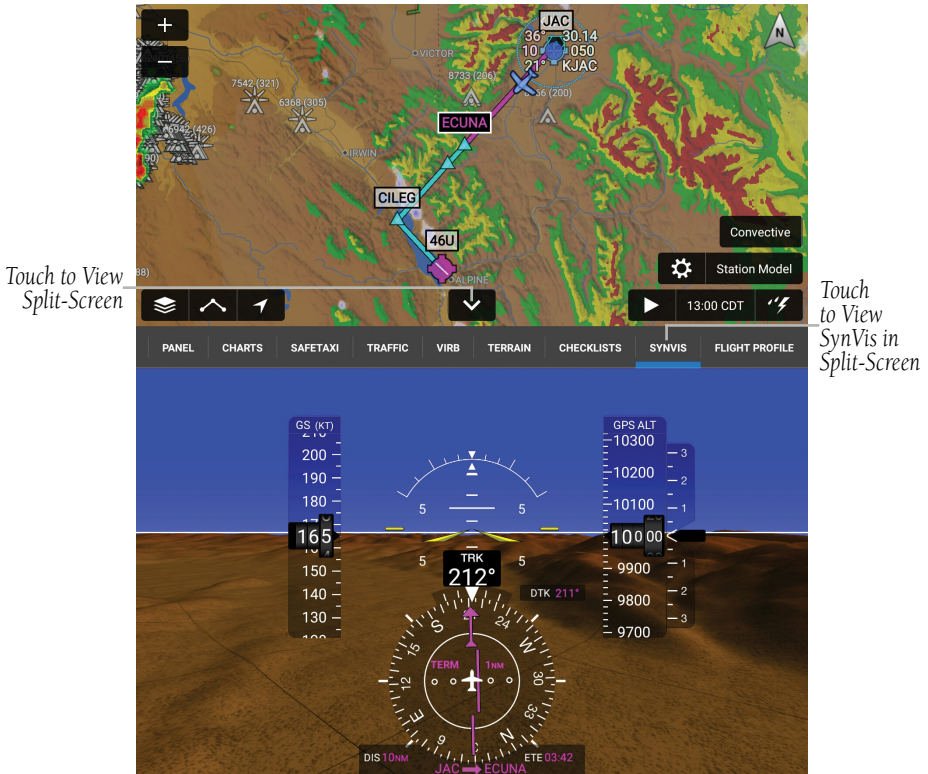


Split-Screen Synthetic Vision

Viewing Split-Screen Features From SynVis Page:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen**.



Or:

- 1) Touch  to view the split-screen selector.
- 2) Select the desired item to be displayed in the split-screen view.

SPLIT-SCREEN (FLIGHT PROFILE)




NOTE: When not flying, Profile View will always show FPL mode. When flying without an active flight plan, Profile View will always show Track mode.

The aircraft's flight profile can be displayed in split-screen mode for enhanced situational awareness, viewing your flight plan, winds aloft, airspace, TFRs, cloud layers, ceilings, PIREPs, Traffic, highest point along the route of flight, and much more. Split-screen mode can be viewed from either  or  on the Home Menu.

Viewing Split-Screen Flight Profile From Map Page:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Flight Profile**.


Or:


Touch  > **Flight Profile**.

Viewing Split-Screen Flight Profile From SynVis Page:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Flight Profile**.

Or:


Touch  > **Flight Profile**.

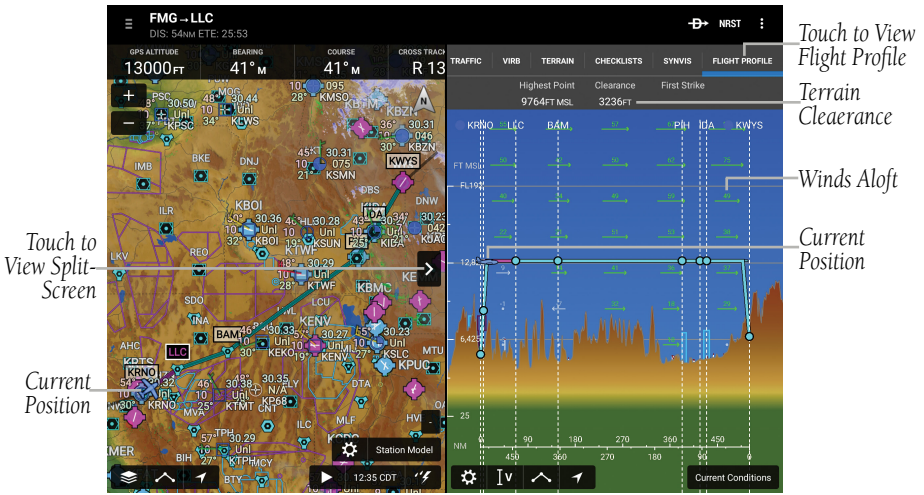

Split-Screen Flight Profile

Adjusting Flight Profile General Settings.

- 1) Touch to display the Settings window.
- 2) Touch the **General** tab.
- 3) Scroll to view options and settings for **View Mode**, **Track Mode Vector Length**, and **Corridor Width**.
- 4) Touch or Slide to adjust settings as desired.

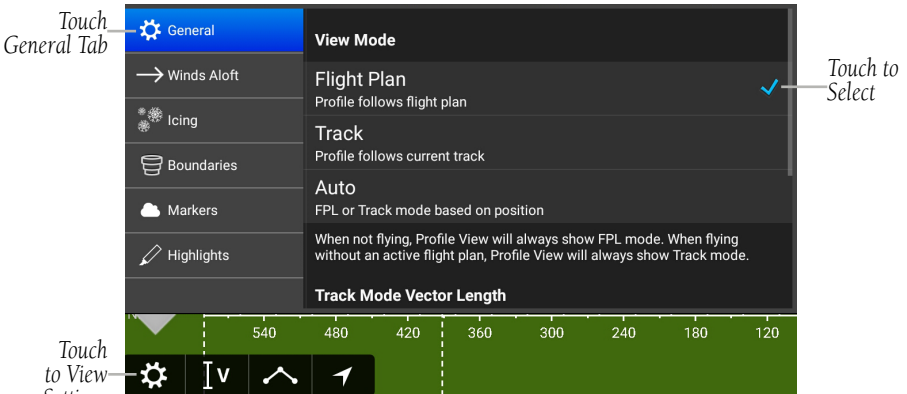

Split-Screen Flight Profile - General Settings

Adjusting Flight Profile Winds Aloft Settings.


- 1) Touch to display the Settings window.
- 2) Touch the **Winds Aloft** tab.
- 3) Scroll to view options for **Display Style & Source**.
- 4) Touch to adjust settings as desired.



Split-Screen Flight Profile - Winds Aloft Settings



Adjusting Flight Profile Icing Settings.

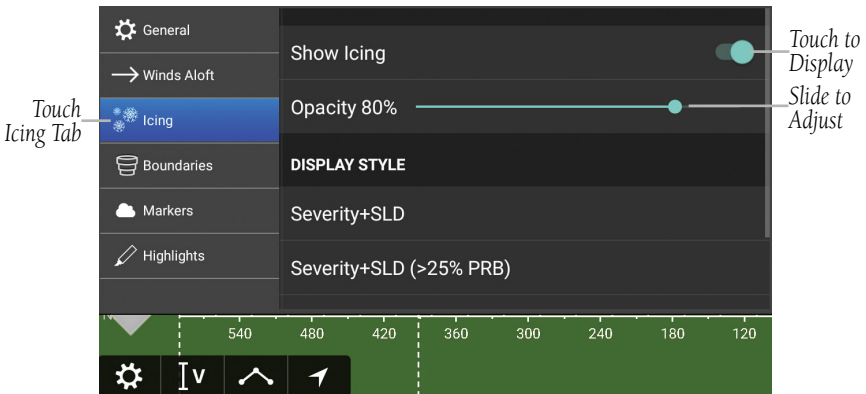
- 1) Touch to display the Settings window.
- 2) Touch the **Icing** tab.
- 3) Slide to change **Opacity**.
- 4) Scroll to view options for **Display Style**.
- 5) Touch to adjust settings as desired.





Split-Screen Flight Profile - Icing Settings


Adjusting Flight Profile Boundaries Settings.

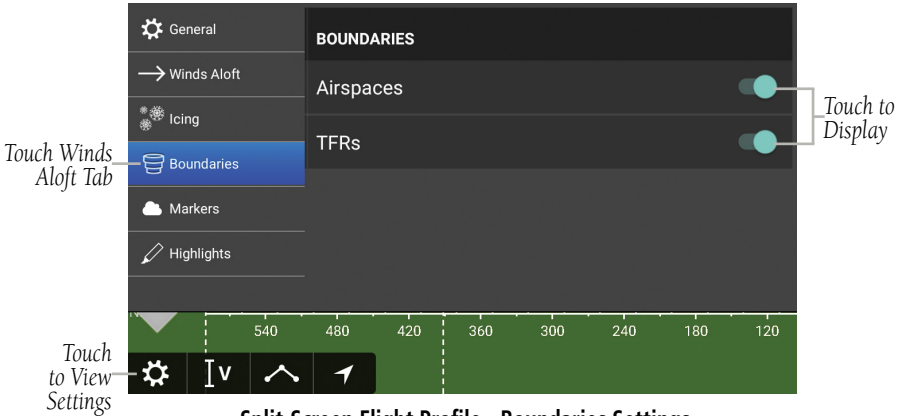- 1) Touch  to display the Settings window.
- 2) Touch the **Boundaries** tab.
- 3) Touch  to adjust settings as desired.






Adjusting Flight Profile Markers Settings.

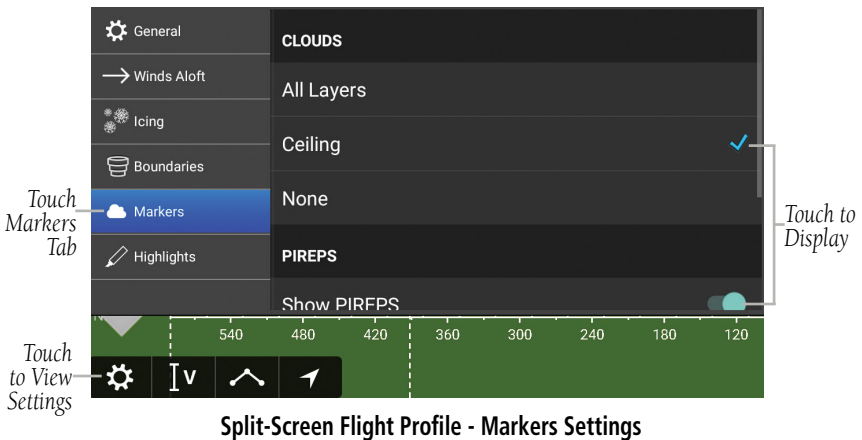- 1) Touch  to display the Settings window.
- 2) Touch the **Markers** tab.
- 3) Scroll to view options for **Clouds**, **PIREPs**, and **Other**.
- 4) Touch  or Slide to adjust settings as desired.



Adjusting Flight Profile Highlights Settings.

- 1) Touch  to display the Settings window.
- 2) Touch the **Highlights** tab.
- 3) Touch  or Slide to adjust settings as desired.

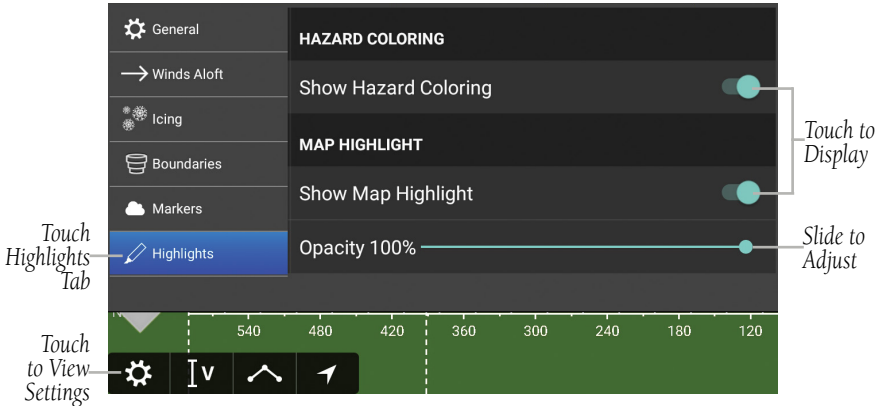

Split-Screen Flight Profile - Highlights Settings

WEATHER DATA

Weather data is presented in Widgets (as text), and map overlays. To receive up-to-date weather information, the Android device must have access to a data connection (Wi-Fi or cellular), or a compatible external device. However, once downloaded, some weather products will remain available for up to 90 minutes after connection to the Internet is lost.

WEATHER SOURCES

Weather data is available from three sources, Garmin Weather Data Services (Internet), FIS-B weather when connected to a compatible FIS-B device via a Connex link, or SiriusXM weather connected to a compatible SiriusXM device via a Connex link. Garmin Weather Data Services (Internet) requires a data connection through Wi-Fi or cellular network. SiriusXM and FIS-B weather, require additional hardware. SiriusXM weather also requires a subscription to SiriusXM Weather.

DATA LINK WEATHER (FIS-B)




WARNING: Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.




WARNING: Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained with in data link weather products may not accurately depict current weather conditions.

FIS-B is a subscription-free weather service that is broadcast by Ground Based Transceivers (GBTs) over the 978 MHz UAT frequency band as part of the FAA's Next Generation Air Transportation System (NextGen). To receive FIS-B weather information, the compatible FIS-B device must be within range and line-of-sight of an operating GBT. Reception may be affected by factors including altitude or terrain. FIS-B weather products include METARs, TAFs, NEXRAD (Regional and CONUS), AIRMETS, SIGMETs, PIREPs, Winds and Temperatures Aloft, and NOTAMs.

Viewing FIS-B Weather product Status:

- 1) From any page, touch **Home** > .
- 2) Touch the associated FIS-B device tab.

Viewing Ground Station Status:

- 1) From any page, touch **Home** > .
- 2) Touch the associated FIS-B device tab.

SIRIUSXM[®] WEATHER

SiriusXM weather information is shared with Garmin Pilot for installations with a Flight Stream 510, Flight Stream 210, Flight Stream 110, GDL 69/GDL 69A GDL 52/52R, and GDL 51/51R SiriusXM datalink.

WIDGETS

Widgets are viewable in the lower portion of the Map Page in Split-Screen. Controls located at the upper left and right corners of each Widget open a menu to select the Widget Type and to choose an airport to which the Widget is applicable. The NavTrack located at the bottom of the display is used to dynamically change the Widget location to view information related to points on or near the active route. Dragging the slider at the bottom of the widgets pane moves a light blue diamond along the route of flight. As the symbol approaches airports along the active route Colored push-pins correspond to matching colored dots to the left of the airport identifier in the upper right corner of the Widget to indicate the location from which the information contained in the Widget originates.




There are multiple pilot utility information products available for selection from the Widget Type flick-list. The weather products available to be displayed as widgets are:

• METAR	• TAF	• MOS
• PIREPs	• Winds Aloft	• NOTAMs
• Forecast Discussion	• AIRMETS/SIGMETS	• Fuel Prices
• Airspaces	• Airports	• Logbook Tracks

Split Screen - Widget Type

Sliding a finger left or right over the widgets will bring more widgets or the **Add Widget** tool into view. The source, product age and relative location will be displayed at the bottom of each widget.

Adding Widget:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Split-Screen** > **Widgets**.
- 3) Touch the plus button to add a widget.
- 4) Select a widget from the **Select Widget Type** menu.

Changing Widget Type:

- 1) Touch the widget type as displayed in the upper left corner of the widget.
- 2) Select the desired widget type from the **Select Widget Type** menu.

Removing Widget:

- 1) Touch the widget type as displayed in the upper left corner of the widget.
- 2) Scroll to the bottom of the flick list.
- 3) Select **Delete Widget** from the bottom of the menu.

KAPA → KPHX
Via: RW17L, ROCK15, DVC, LJAYY, DSERT2

Touch to Change Widget Location

Widget Location

Weather Product Source, Age & Relative Location

Touch to Change Widget Type

Touch to Select Widget Type

Touch to Delete Widget

Slide NavTrack to Change Data

METAR	TAF	MOS
Centennial Wind 330°@7KT Gust - Vrbl 300°-360° Temp 57°F Cell 20,000Ft (ISA+19°F) Vis 10SM Alt 29,99M Dwpvt 19°F Wx - Clouds 8000Ft 1 Few 20000Ft 2 Broken Density Altitude 7,112Ft KAPA 251753Z 30007KT 300V360 10SM FEW080 BKN200 14/M07 A2999 RMK AO2 SLP146 T01391067 10144 21006 56004 Internet 31min old On Route	Select Widget Type Fuel Prices 3:00 CDT VFR Airsaces riable/Light er than 6SM 8,000FT AGL Airports 0,000FT AGL Logbook Tracks VFR 360°@7KT er than 6SM 8,000FT AGL Delete Widget In Route	Centennial Valid: Tue 13:00 CDT Tue 13:00 CDT to Tue 1 Wind Visibility Bro Precipitation Temperature Dew Point Wind Tue 14:00 CDT to Tue 1 Visibility 1 hr 23min old

Split Screen - Widgets - Changing Widget Type

WIDGET NAVTRACK

At the bottom of the widget pane is the NavTrack. Touch-dragging the slider moves a light blue diamond along the route of flight. Colored push-pins appear on the map to indicate locations near the blue diamond that provide information corresponding to selected widgets. In some cases, there may be more than one location near the blue diamond that provides information corresponding to a widget. To view weather information for nearby locations, it may be necessary to touch the inverted white triangle next to the widget location in the widget header bar. This will open a menu of nearby widget information sources.



Change the Location Associated with a Widget:

- 1) Drag the NavTrack at the bottom of the widget pane until the blue diamond corresponds with a colored push-pin on the map display that is near a desired location.
- 2) If the push-pin does not correspond to the desired location, touch the location indicator at the top right corner of the widget to search for nearby locations.
- 3) Select the desired location from the **Nearby** menu.

WEATHER MAP OVERLAYS

Viewing weather map overlays:

- 1) From any page, touch **Home** > > > **Overlays**.
- 2) Touch the desired overlay.

Touch to View Currently Displayed

Touch to Display

Touch to Display

Touch to Expand

Touch to Display

Currently Displayed

Touch to Display Storm Cell Movement

Map Overlays

WEATHER PRODUCT AGE AND SOURCE

When a weather product is active on a map or in a Weather Widget, the age of the data is displayed. The age of the product is based on the time difference between when the data was assembled on the ground and the current GPS time. Garmin Pilot combines the CONUS and Regional Radar into one map overlay, the time shown is for the Regional Radar product only.

Type of Weather Report

Slide Nav Track to Change Data

Weather Product Source, Age & Relative Location

Weather Product Age and Source

WEATHER PRODUCTS

RADAR

Weather radar data is collected from radar sites across the United States, Canada, and select overseas locations. It is combined into a mosaic for easier display and analysis.

The radar data displayed is not real-time. The lapsed time between collection, processing, and dissemination of radar images can be significant and may not reflect the current radar synopsis. Due to the inherent delays and the relative age of the data, it should be used for long-range planning purposes only. Never use radar data to penetrate hazardous weather. Rather, use it in an early-warning capacity for pre-departure evaluation.

Composite data is composed of the maximum reflectivity from the individual radar sweeps at different tilt angles of the radar beam with respect to the ground. The display of the information is color-coded to indicate the weather severity level. Colors are used to identify the different echo intensities (reflectivity) measured in dBZ (decibels or Z). "Reflectivity" (designated by the letter Z) is the amount of transmitted power returned to the radar receiver. The dBZ values increase as returned signal strength increases. Precipitation intensity is displayed using colors corresponding to the dBZ values.

Base Reflectivity (the lowest level radar scan) best represents the precipitation falling from the clouds, while composite reflectivity combines the radar from all altitudes into one view.

RADAR ABNORMALITIES


There are possible abnormalities regarding displayed NEXRAD images. Some, but not all, of those include:

- Ground clutter
- Strokes and spurious radar data
- Sun strokes, when the radar antenna points directly at the sun
- Military aircraft deploy metallic dust (chaff) which can cause alterations in radar scans
- Interference from buildings or mountains, which may cause shadows
- Poor reception from Ground Based Transceivers (GBTs) can cause portions of the received radar imagery to not be displayed

RADAR LIMITATIONS



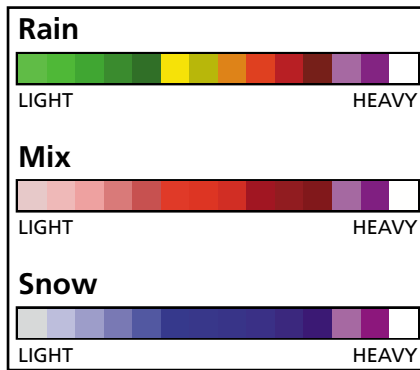

Certain limitations exist regarding radar displays. Some, but not all, are listed for the user's awareness:

- Surface precipitation type is estimated with shades of blue for snow and shades of pink for indeterminate types. The actual precipitation type aloft could vary.
- Radar base reflectivity is sampled at the minimum antenna elevation angle. An individual radar site cannot depict high altitude storms at close ranges, and has no information about storms directly over the site.
- Radar coverage in Canada is only available in the southern 1/4 of the country.



Radar Intensity


Viewing Radar Information:


- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays**.
- 3) Touch **Radar** from the Layer Select menu.
- 4) If necessary, touch , and touch **Base** (Base Reflectivity) or **Comp** (Composite Reflectivity).
- 5) Touch  to animate the radar loop. Each frame of the radar loop is time stamped. The time stamp is just right of the play button.

STORM CELL MOVEMENT

The radar includes the projected path of a storm cell. A circle and line extends from the storm cell to display the predicted path in 15, 30, 45, and 60 minutes. If hail or tornadic activity is present, the corresponding icon is displayed.

Viewing Storm Cell Movement:

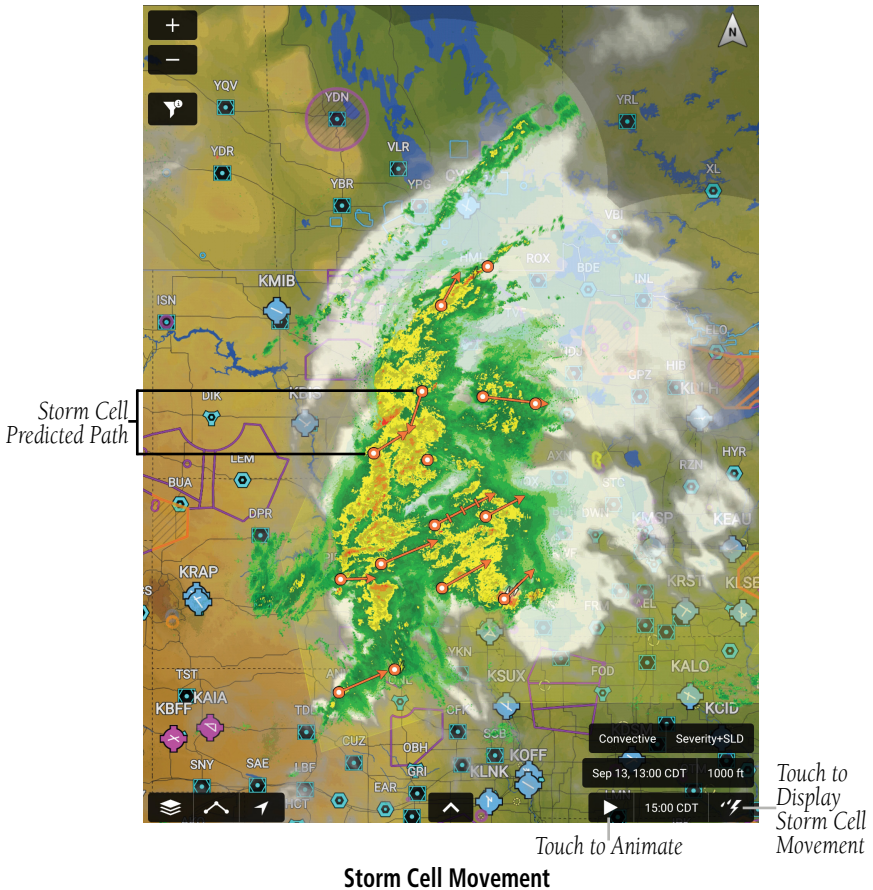


- 1) With radar animated (see procedure above), touch .
- 2) Touch the time stamp to step through the animation.




INFRARED SATELLITE (IR SAT)




IR Sat displays infrared composite satellite images of cloud cover taken by geostationary weather satellites.

Viewing Infrared Satellite Information (IR):

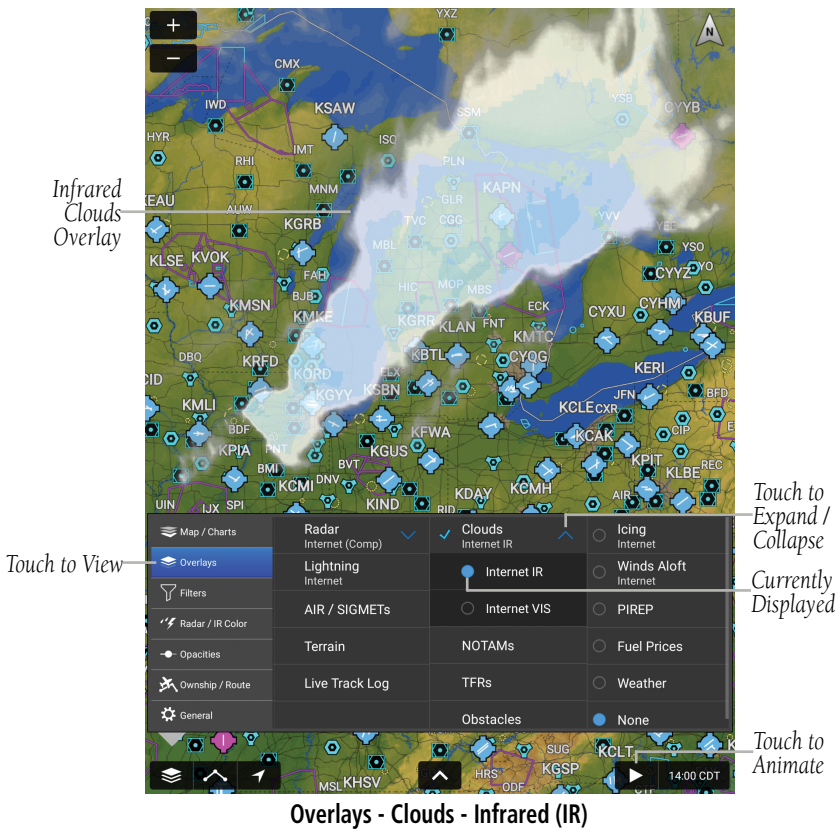- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** and select **Clouds** > **IR** from the Layer Select menu.
- 3) Touch  to animate the satellite loop. Each frame of the satellite loop is time stamped. The time stamp is just right of the play button.






Viewing Visible Satellite Information (VIS):

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** and select **Clouds** > **VIS** from the Layer Select menu.
- 3) Touch  to animate the satellite loop. Each frame of the satellite loop is time stamped. The time stamp is just right of the play button.

RADAR AND INFRARED SATELLITE COLOR PALETTES


The radar and infrared color palettes and the color of the intensity returns can be configured on the **Map** page.

Viewing radar and infrared satellite color palettes:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Radar/IR Color**.
- 3) Touch  on the top left of the 'Radar Colors' or 'IR Satellite Colors' box to view the color palettes options.
- 4) Touch **Garmin**, **NOAA**, **Alt**, or **Classic** for the desired 'Radar Colors'.

Or:

Touch **Classic**, **Alt 1**, **Alt 2**, or **Alt 3** for the desired 'IR Satellite Colors'.

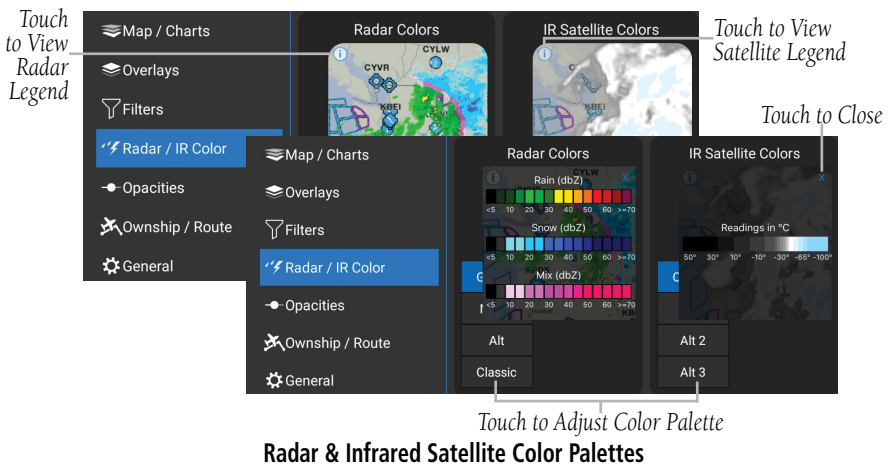



Radar & Infrared Satellite Color Palettes

ICING FORECAST

Icing forecast is a graphical depiction of icing conditions in the United States and Canada. The icing forecast conditions are displayed by Severity+Supercooled Large Drops (SLD) or Probability.

Viewing Icing Forecast data:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **Icing**.
- 3) Select between **Severity+SLD** or **Probability**.
- 4) Use the sliders to adjust the time and altitude.

Touch to Select Icing Type

Touch to View Icing Legend

Slide to Change Altitude

Touch to Change Altitude

Icing Legend



Overlays - Icing Types & Legend




METAR OVERLAY

The METAR Overlay provides weather icons that graphically display one of 14 parameters typically reported in a METAR. Each icon can be tapped to display the current METAR data in both raw and translated formats. Color coded icons provide a quick visual representation of the current weather conditions. Blue icons indicate VFR conditions, Green icons indicate MVFR conditions, Yellow icons indicate IFR conditions and Red icons indicate LIFR conditions. The color coding applies to Station ID, Flight Conditions, Cloud Ceiling, Visibility, and Cloud Cover.



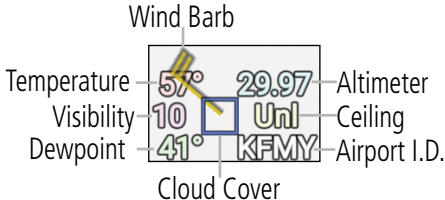

























Wind barbs and wind speed icons are slightly different where color represents wind speed. Colored icons are also used to show dew point spread.

Viewing and Configuring METAR Overlay:




















- 1) From any page, touch **Home** > .
- 2) Touch  and select **Overlays** > **Weather** from the Layer Select menu.
- 3) Touch the Overlay Control button in the lower left corner.
- 4) Select the desired option from the list.
- 5) Touch any of the displayed Weather Icons to view the Raw and translated METAR information.

Layer	Icons	Description
Station Model		
Altimeter		Altimeter setting (in. Hg)
Ceiling		Reported ceiling in hundreds of feet or 'Unl' if there is not a cloud layer that constitutes a ceiling.

Weather Icons

Layer	Icons	Description			
Cloud Cover	 OVC	Overcast			
	 BKN	Broken			
	 SCT	Scattered			
	 FEW	Few			
	 CLR	Clear			
	 OBS	Fog			
Dewpoint	 21°	Dewpoint °C			
Dewpoint Spread	 11°  5°  2°	Dewpoint spread in °C. Blue indicates spread of 9° C or greater. Yellow indicates spread of 5° or 8° C. Red indicates spread of 0° to 4° C.			
Flight Conditions		VFR Ceiling	MVFR Ceiling	IFR Ceiling	LIFR Ceiling
	VFR Visibility				
	MVFR Visibility				
	IFR Visibility				
	LIFR Visibility				
		Missing weather information. A split dot with brown indicates partial and/or missing data.			
Observation Age	 22	Observation Age in minutes			

Weather Icons

Layer	Icons	Description	
Station ID		VFR conditions (Blue)	
		MVFR conditions (Green)	
		IFR conditions (Yellow)	
		LIFR conditions (Red)	
		No Weather or Partial Data (Grey)	
Temperature		Temperature °C	
Visibility		Reported Visibility in Statute Miles.	
Wind Barbs		Short Flag = 5 knots	Green = 5-9 knots
		Long Flag = 10 knots	Yellow = 10-19 knots
		Solid Triangle = 50 knots	Red = 20+ knots
		Light & Variable	
		Calm	
Wind Gust		Reported wind gusts (kts).	
		Light & Variable	
Wind Speed		Reported steady wind speed (kts).	
		Green indicates wind speeds less than 10 knots.	
		Yellow indicates wind speeds less than 20 knots. Red indicates wind speeds 20 knots and greater.	
Wx Conditions	 	Dynamic black shaded box that displays two letter weather condition codes and qualifiers.	

Weather Icons


STATIC WEATHER IMAGERY


Garmin Pilot provides access to National Weather Service, as well as some international, static aviation weather maps. These weather products are static maps displaying PIREPs, AIRMETs, SIGMETs, winds aloft, radar, IR satellite, METARs, TAFs, surface analysis, icing, turbulence forecasts, and thunderstorm forecasts.

Garmin Pilot also includes some international weather imagery. Radar imagery is available for some parts of Mexico. Icing, Turbulence Forecast, and Thunderstorm Forecast imagery is available for some parts of Europe. METAR, TAF, and Surface Analysis information is available for Canada.

All available weather images are displayed on the main WX Imagery page and can be sorted by selecting from the 'View by Hazard', 'View by Region', or 'View by Product Type' options.

Viewing Static Weather Products:

- 1) From any page, touch **Home** > .
- 2) Touch the desired hazard type, region, or product type from the list.
- 3) Touch the weather map to enlarge. When enlarged touch the star to save to Favorites.

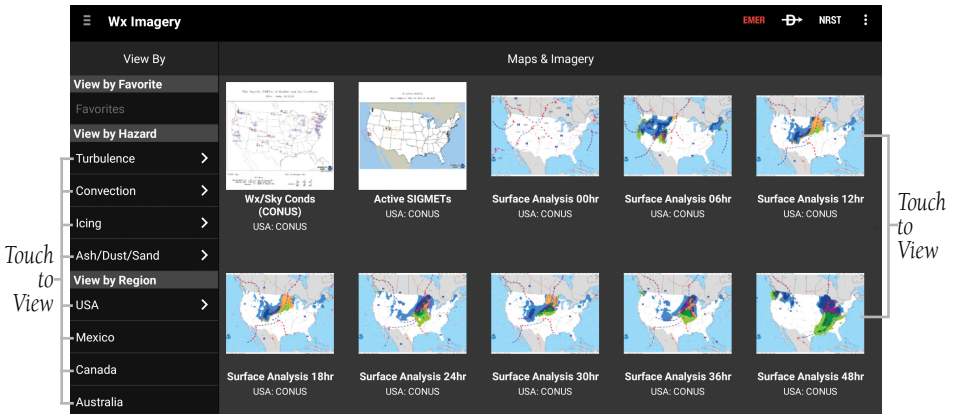

Wx Imagery - Static Weather Imagery

AIRMETS

An AIRMET (AIRmen's METeorological Information) can be especially helpful for pilots of light aircraft that have limited flight capability or instrumentation. An AIRMET must affect or be forecasted to affect an area of at least 3,000 square miles at any one time. AIRMETS are routinely issued for six-hour periods and are amended as necessary due to changing weather conditions. AIRMETS are displayed as green (IFR/mountain obscuration), orange (turbulence), or blue (icing) shaded areas on the map display.


SIGMETS

A SIGMET (SIGNificant METeorological Information) advises of weather that is potentially hazardous to all aircraft. In the contiguous United States, the following items are covered: severe icing, severe or extreme turbulence, volcanic ash (red), dust storms, and sandstorms that lower visibility to less than three statute miles.

A Convective SIGMET is issued for thunderstorms, isolated severe thunderstorms, embedded thunderstorms, hail at the surface, and tornadoes. A SIGMET is widespread and must affect or be forecast to affect an area of at least 3,000 square miles.

Viewing AIRMETS and SIGMETS:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **AIR / SIGMETS** from the Layer Select menu.
- 3) Touch the desired type of AIRMET/SIGMET on the Map page to display the Radial Menu > **AIR / SIG** to view details.

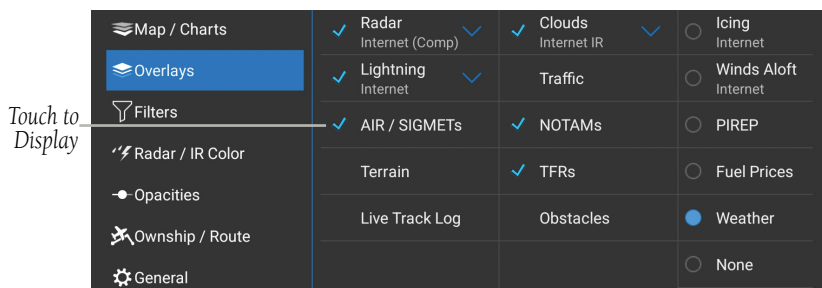

Map - Overlays - Displaying AIRMETS & SIGMETS





TEMPORARY FLIGHT RESTRICTIONS (TFRS)




NOTE: Do not rely solely upon data link services to provide Temporary Flight Restriction TFR information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.

Temporary Flight Restrictions or TFRs temporarily restrict all aircraft from entering the selected airspace unless a waiver has been issued. TFRs are routinely issued for occurrences such as sporting events, dignitary visits, military depots and forest fires. TFRs are represented as an area outlined in dark blue (special events), green (forest fires), or Red (dignitary visits).

Viewing Temporary Flight Restrictions (TFR):

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **TFR** from the Layer Select menu.
- 3) Touch the desired TFR on the Map page to display the Radial Menu > **TFR** to view details.
- 4) Touch  to expand, and  to collapse, as desired.

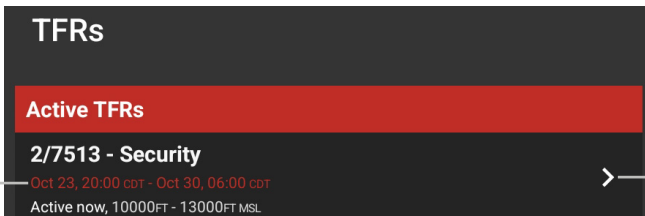



Maps - Radial Menu - Graphical TFR


ENHANCED STADIUM TFR ADVISORIES

Stadium TFRs advisories have been enhanced to display the event, hosting venue, and start time along with color coding to represent the active state of the TFR.

- Blue TFRs - event occurs one to seven days in the future.
- Yellow TFRs - event occurs within the next 24 hours.
- Red TFRs - active TFR, one hour before scheduled start time.

Viewing only active Temporary Flight Restrictions (TFRs) or within 24 hours:

- 1) From any page, touch **Home** > .
- 2) Touch  > **General**.
- 3) Touch the **Display Stadium TFRs** button **Off**.

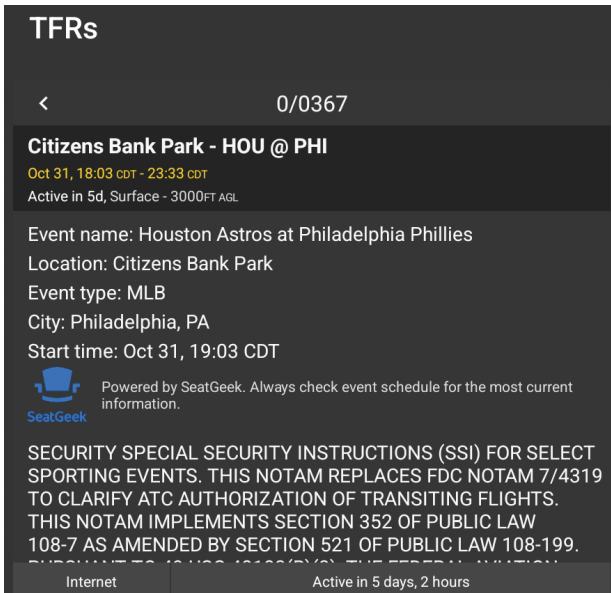


TFRs

< 0/0367

Citizens Bank Park - HOU @ PHI
Oct 31, 18:03 CDT - 23:33 CDT
Active in 5d, Surface - 3000FT AGL

Event name: Houston Astros at Philadelphia Phillies
Location: Citizens Bank Park
Event type: MLB
City: Philadelphia, PA
Start time: Oct 31, 19:03 CDT

 Powered by SeatGeek. Always check event schedule for the most current information.

SECURITY SPECIAL SECURITY INSTRUCTIONS (SSI) FOR SELECT SPORTING EVENTS. THIS NOTAM REPLACES FDC NOTAM 7/4319 TO CLARIFY ATC AUTHORIZATION OF TRANSITING FLIGHTS. THIS NOTAM IMPLEMENTS SECTION 352 OF PUBLIC LAW 108-7 AS AMENDED BY SECTION 521 OF PUBLIC LAW 108-199.

Internet Active in 5 days, 2 hours

Enhanced Stadium TFR Details

PIREPS


Pilot Weather Reports (PIREPs) provide timely weather information for a particular route of flight. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain unforecast adverse weather conditions, such as icing conditions, cloud cover, and turbulence.

PIREPs are represented on the Garmin Pilot map by a small colored icon with a number. The color and style of the icon signify the type and severity of the reported weather conditions. The number shows the altitude of the reported conditions in flight level notation (e.g., hundreds of feet).

While the Map's PIREP layer is active, two secondary controls appear in the lower right corner of the screen. Touching either of these controls shows a slider that can filter out and declutter PIREP icons based on report age and report altitude.

Viewing PIREPs:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **PIREP**.
- 3) Touch a PIREP icon for details.

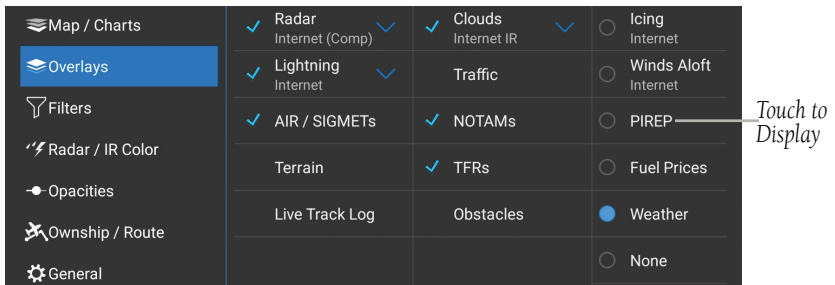




Map - Overlays - Displaying PIREPs

Filtering PIREPs By Age:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **PIREP**.
- 3) Touch the PIREP age indicator to display the age slider.
- 4) Touch and drag the slider handle to set the PIREP age display range.

Filtering PIREPs By Altitude:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **PIREP**.
- 3) Touch the PIREP altitude indicator to display the altitude slider.
- 4) Touch and drag the slider handles to set the PIREP altitude display range.

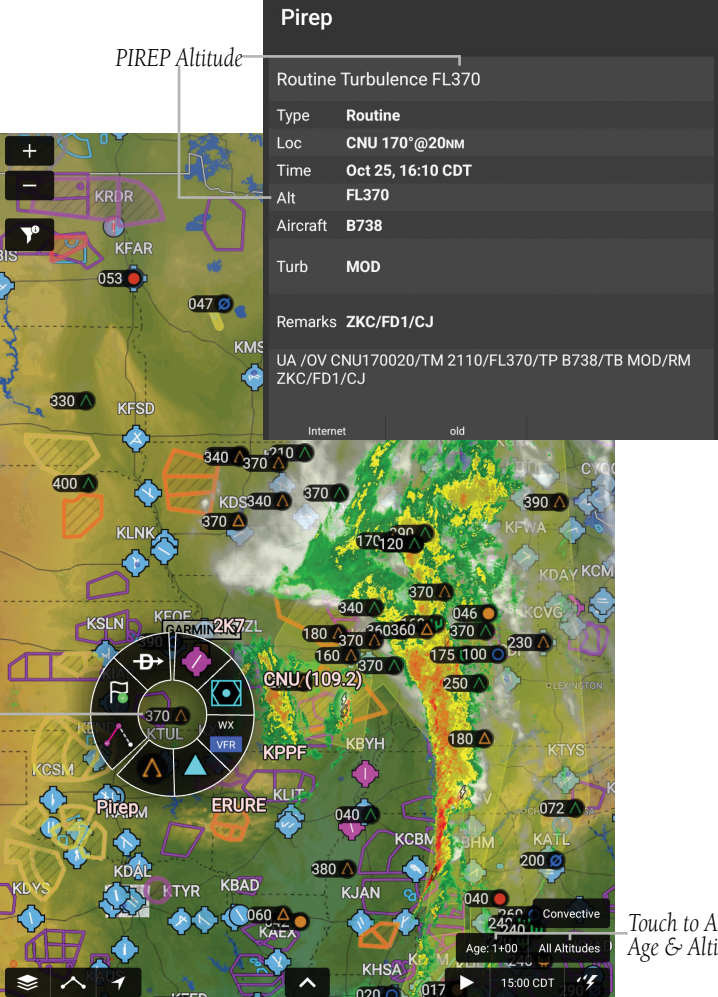

Pirep

Routine Turbulence FL370

Type **Routine**

Loc **CNU 170°@20NM**

Time **Oct 25, 16:10 CDT**

Alt **FL370**

Aircraft **B738**

Turb **MOD**

Remarks **ZKC/FD1/CJ**

UA /OV CNU170020/TM 2110/FL370/TP B738/TB MOD/RM ZKC/FD1/CJ

Internet old

PIREP Altitude























Touch to View PIREP

Touch to Adjust Age & Altitude

Age: 1400 All Altitudes

15:00 CDT

Map - Radial Menu - PIREP Layer & Report




Icing PIREPs	Sky Condition PIREPs	Turbulence PIREPs
 Negligible Icing	 Unknown Sky Condition	 Turbulence Negligible or Smooth
 Trace Icing	 Sky Clear	 Light Turbulence
 Trace to Light Icing	 Few Clouds	 Light to Moderate Turbulence
 Light Icing	 Scattered Clouds	 Moderate Turbulence
 Light to Moderate Icing	 Broken Clouds	 Moderate to Severe Turbulence
 Moderate Icing	 Overcast	 Severe Turbulence
 Moderate to Severe Icing	 IMC	 Extreme Turbulence
 Severe Icing		


PIREP Icons

LIGHTNING

Lightning data shows the approximate location of cloud-to-ground lightning strikes. A strike icon represents a strike that has occurred within a two-kilometer region. The exact location of the lightning strike is not displayed.

Viewing Lightning Information:

- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **Lightning**.
- 3) Touch  to animate the Lightning loop. Each frame of the Lightning loop is time stamped. The time stamp is just right of the play button. Lightning information is available in one minute increments for the previous 45 minutes.

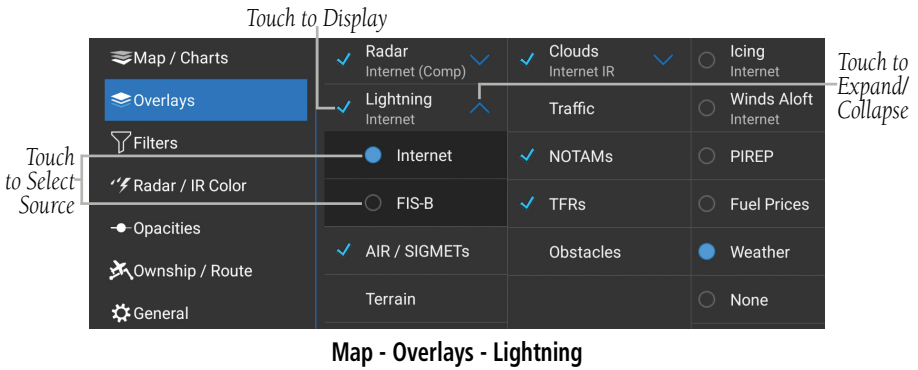

WINDS ALOFT



Winds Aloft data shows the forecasted wind speed and direction at the surface and at selected altitudes. Altitudes can be displayed in 3,000-foot increments up to 42,000 feet MSL. Winds Aloft are displayed using wind barsbs. The wind barsbs indicate wind speed and direction.


The wind speed is depicted using flags at the end of the wind barb. A short wind flag is 5 knots, a long wind flag is 10 knots, and a filled triangle is 50 knots. Wind barsbs are also color coded to indicate wind speed. Wind direction is depicted by the flagged end of the barb. The flagged end indicates the direction from which the wind is coming.

Icons	Description
	White indicates wind speeds of 20 kts or less.
	Light blue indicates wind speeds of 21-30 kts.
	Light yellow indicates wind speeds of 31-40 kts.
	Yellow indicates wind speeds of 41-50 kts.
	Orange indicates wind speeds of 51-80 kts.
	Red indicates wind speeds of 81 kts or greater.

Winds Aloft Barsbs

Viewing Winds Aloft Information:

- 1) From any page, touch **Home** > .
 - 2) Touch  > **Overlays** > **Winds Aloft**.
 - 3) Touch the **Temps** button above the Time Stamp > **Barbs**.
 - 4) Drag the horizontal slider to the right to view forecast winds aloft.
 - 5) Drag the slider up to the desired altitude. Altitudes are displayed in 3,000-foot increments up to 42,000 feet MSL.
- Or:** Touch any wind barb to view a winds aloft table. Touch the time to view current/forecasted winds aloft.

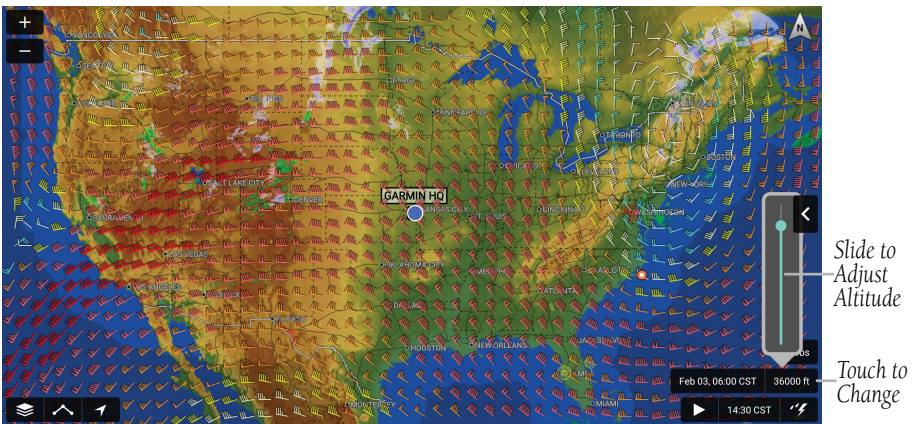

Winds Aloft - CONUS

TEMPS ALOFT


Temps Aloft data shows the forecasted temperature in degrees Celsius (°C) at the surface and at selected altitudes. Altitudes can be displayed in 3,000-foot increments up to 42,000 feet MSL. Temps Aloft are displayed using a color coded icon along with a numerical value.

Icons	Description
-2	Blue indicates temps below freezing in degrees Celsius (-2°C).
0	White indicates the temperature is at freezing (0°C).
2	Orange indicates temps above freezing in degrees Celsius (2°C).

Temps Aloft Icons

Viewing Temps Aloft Information:

- 1) From any page, touch **Home** >
 - 2) Touch > **Overlays** > **Winds Aloft**.
 - 3) Touch the **Barbs** button above the Time Stamp > **Temps**.
 - 4) Drag the horizontal slider to the right to view forecast Temps aloft.
 - 5) Drag the slider up to the desired altitude. Altitudes are displayed in 3,000-foot increments up to 42,000 feet MSL.
- Or:** Touch any temps aloft icon to view a winds aloft table. Touch the time to view current/forecasted temps aloft.

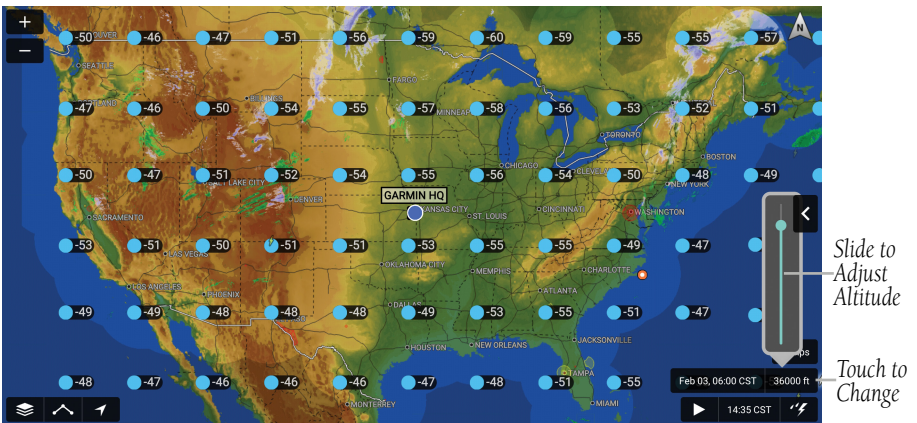


Temps Aloft - CONUS

METARS AND TAFS


METAR (METeorological Aerodrome Report) is an international code used for reporting weather observations. METARs are updated hourly or as needed. METARs typically contain information about the temperature, dew point, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure. They can also contain information on precipitation amounts, lightning, and other critical data.


TAF (Terminal Area Forecast) is the standard format for 24-hour weather forecasts. TAFs may contain some of the same code as METAR data. It typically forecasts significant weather changes, temporary changes, probable changes, and expected changes in weather conditions. METAR and TAF data are displayed as raw and/or decoded text.

Viewing METAR and TAF Information:

- 1) From any page, touch **Home** > .
- 2) Touch **Weather** > **METAR**.
- 3) Touch the **METAR** or **TAF** tab, as desired.

Or:

- 1) From any page, touch **Home** > .
- 2) Touch the desired airport until the Radial Menu appears > **WX**.
- 3) Touch the **METAR** or **TAF** tab, as desired.

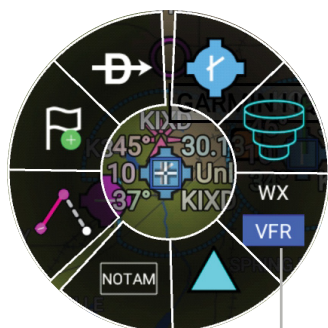

Touch to View Airport Weather


Touch to View Info

METAR	TAF	MOS	WINDS ALOFT
New Century Aircenter			VFR
Wind	Calm	Gust	-
Ceil	Unlimited	Temp	45°F (ISA-10°F)
Vis	10SM	Dwpt	37°F
Alt	30.13IN	Density Alt	261FT
Wx	-		
Clouds-			
KIXD 261353Z 0000KT 10SM CLR 07/03 A3013 RMK AO2 SLP206 T00670028 \$			


Map - Radial Menu - WX & Info

MODEL OUTPUT STATISTICS (MOS)

MOS (Model Output Statistics) provides forecast information similar to a TAF (Terminal Area Forecast), that is updated hourly and is valid for 72 hours. The MOS forecast is available for over 2,000 airports in the United States.

- 1) From any page, touch **Home** >  >  > **Widgets**.
- 2) Touch **MOS** from the 'Select Widget Type' Menu.

Or:

- 1) From any page, touch **Home** > .
- 2) Touch **Weather** > **MOS** tab.


METAR	TAF	MOS	WINDS ALOFT
Lawrence Mun			
Valid: Tue 16:00 CDT to Fri 07:00 CDT			
Tue 16:00 CDT to 21:00 CDT			VFR
Wind	150°@11KT		
Visibility	Greater than 6SM		
Clouds	Above 12,000FT		
Precipitation	None		
Temperature	87° - 94°F (ISA+30 - ISA+37)		
Dew Point	75° - 77°F		
Tue 21:00 CDT to 00:00 CDT			VFR
Wind	160°@5KT		
Visibility	Greater than 6SM		
Clouds	Scattered Above 12,000FT		
Precipitation	None		
Temperature	82° - 84°F (ISA+25 - ISA+27)		
Dew Point	75° - 76°C		
Internet	1 hr, 3min old	On Airport	

MOS (Model Output Statistics) Widget - Map Page

AREA FORECAST DISCUSSION


AFD (Area Forecast Discussion) is a plain English narrative developed by meteorologists from the National Weather Service. It is designed to provide additional details that go into the preparation of the Terminal Aerodrome Forecast (TAF). The AFD contains both short and long term analysis, with an emphasis on aviation weather.

Viewing ADF Information:

- 1) From any page, touch **Home** > .
- 2) Touch **Weather**.
- 3) Touch the **Forecast Discussion** Tab.

Or:

- 1) From any page, touch **Home** >  >  > **Widgets**.
- 2) If necessary, touch **Add Widget**.
- 3) Touch **Forecast Discussion** from the 'Select Widget Type' Menu.

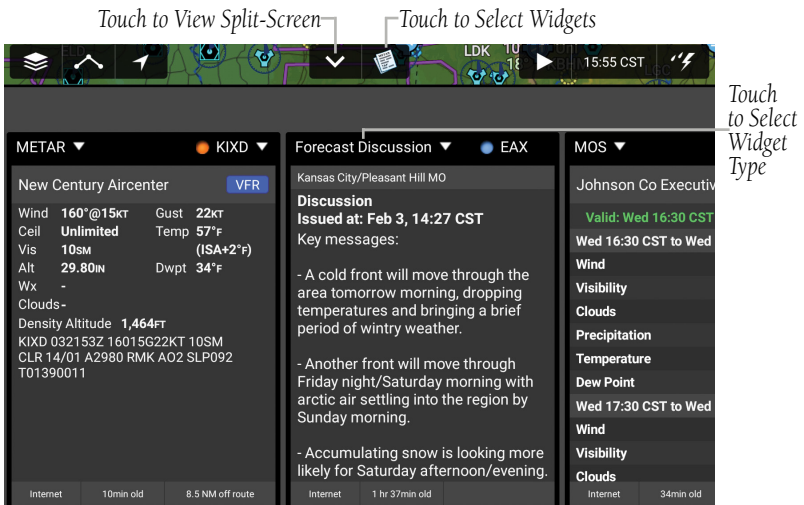


Split-Screen - Widgets - Forecast Discussion



NOTICE TO AIRMEN (NOTAM)


A Notice to Airmen (NOTAM) is a notice containing information essential to personnel concerned with flight operations but not known far enough in advance to be publicized by other means. It states the abnormal status of a component of the National Airspace System (NAS) – not the normal status. Various NOTAMs can be viewed in a decoded summary, including those related to airspace, obstacles, and NAVAIDS.

Viewing NOTAM Information:






- 1) From any page, touch **Home** > .
- 2) Touch **NOTAMs**.

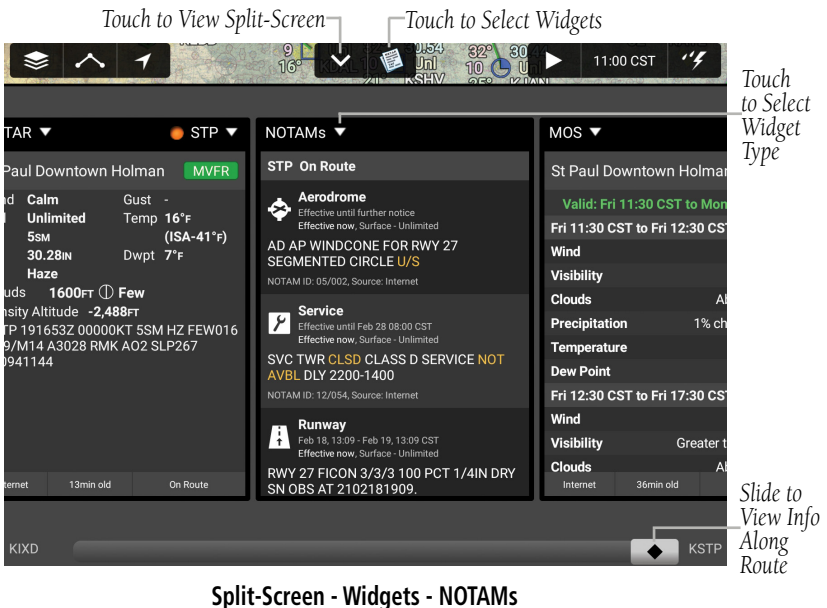Or:

- 1) From any page, touch **Home** >  >  > **Widgets**.
- 2) If necessary, touch **Add Widget**.
- 3) Touch NOTAMs from the 'Select Widget Type' Menu.



Airspace NOTAMs use the following color classification:


Color	Details
	Upcoming NOTAM - Valid within the next 24 hours.
	Restricted/Danger - Prohibited, Restricted, and Danger areas.
	Alerts/Warnings - Warning, Military Operational Area (MOA), and Scheduled Exercises (Military).
	Flight Data Center (FDC) and Restricted Area Deactivated
	Other - Parachute Jumping, Alert, UAS Operation, Tethered Balloon/Kits, Gathering of Aircraft.

Airspace NOTAM Color Classifications

DATA LINK TRAFFIC (OPTIONAL)

The GDL 39 / GDL 39 3D is a Bluetooth[®] enabled receive-only data link radio with on-board GPS, 978 MHz (Universal Access Transceiver frequency band), and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and TIS-B traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot through Bluetooth.

ADS-B (Automatic Dependent Surveillance-Broadcast) is a surveillance technology deployed across the United States as the cornerstone of the FAA's Next Generation Air Transportation System (NextGen). ADS-B enables improved surveillance services, both air-to-air and air-to-ground, especially in areas where radar is ineffective due to terrain or where it is impractical or cost prohibitive. Initial applications of air-to-air ADS-B are for "advisory" use only, enhancing a pilot's visual acquisition of other nearby ADS-B equipped aircraft either when airborne or on the airport surface.

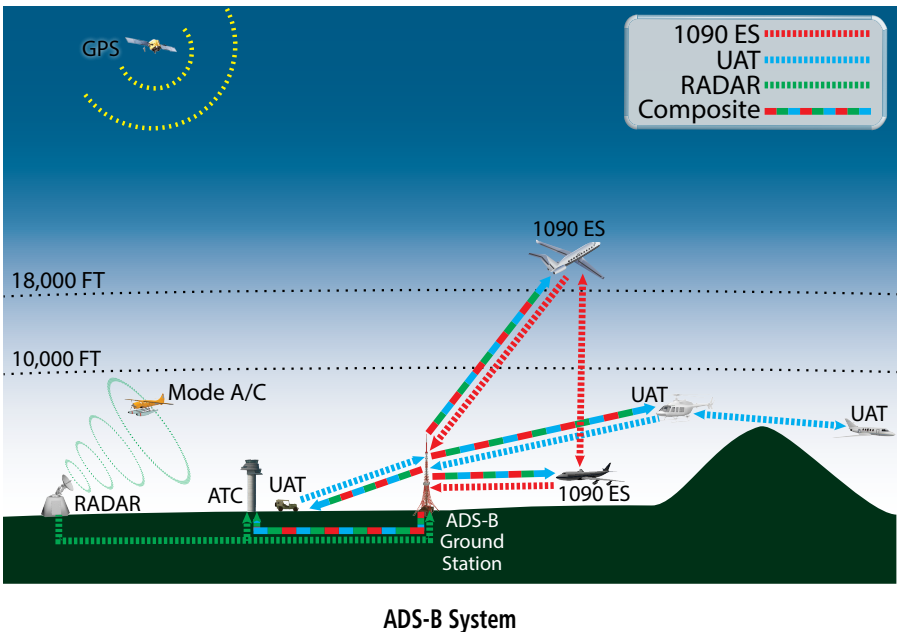

For the purpose of distinguishing between levels of ADS-B service, there are three classifications of aircraft or system capability; ADS-B In, ADS-B Out, and ADS-B participating. ADS-B In refers to the capability to receive ADS-B information. ADS-B Out refers to the capability to transmit ADS-B information. ADS-B participating refers to the capability to both send and receive ADS-B information. Aircraft lacking either ADS-In, ADS-B Out, or both ADS-B capabilities may also be referred to as ADS-B non-participating aircraft.

Currently, rule-compliant ADS-B Out capability in the United States requires a TSO'ed SBAS-enabled GPS, such as a Garmin GPS 400W or similar, and one of two possible data links: 1090 ES transponder or a 978 MHz UAT. Either data link system is capable of transmitting the aircraft's position, velocity, identification, and other information every second to compatible aircraft and ground stations called Ground Based Transceivers (GBTs).

Because 1090 ES transponders and UATs operate on different frequencies, aircraft not similarly equipped cannot transmit/receive data link information directly to/from each other. Instead, operation within range of a GBT is required to receive data link information on both frequencies. The GDL 39 / GDL 39 3D is unique in its ADS-B In capability since it can receive data link information from both 1090 ES transponders and UATs.

Thus, the GDL 39 / GDL 39 3D receives traffic information directly from any ADS-B Out aircraft within range as well as the rebroadcast of ADS-B information from any nearby GBT. This rebroadcast is called Automatic Dependent Surveillance-Rebroadcast (ADS-R) and is automatically triggered by the detection of an ADS-B participating aircraft within the service volume of the GBT. As a 978 MHz (UAT frequency) receiver, the GDL 39 / GDL 39 3D can receive both the Traffic Information Service-Broadcast (TIS-B) and Flight Information Service-Broadcast (FIS-B) provided in conjunction with ADS-R services when in range of a GBT.

FIS-B service is provided continuously, but ADS-R including TIS-B will only be broadcast by a GBT when an ADS-B participating aircraft is within the GBT's defined service volume. In this case, a GBT will only rebroadcast TIS-B information relative to the ADS-B participating aircraft. **Only traffic that is within 15 nm lateral and 3,500' vertical of the ADS-B participating aircraft is provided in the broadcast.** Non-participating traffic aircraft located farther than 15 nm laterally and 3,500' vertically from the participating aircraft is excluded from the information transmitted by the GBT.

TIS-B traffic information includes non-participating aircraft detected by ATC surveillance radar. As TIS-B data is derived from ATC surveillance radar data, TIS-B traffic position updates typically occur every three to thirteen seconds. **Therefore, TIS-B traffic may be displayed with degraded positional accuracy. Aircraft without operating transponders are invisible to TIS-B. Aircraft operating outside of the ATC radar coverage area are also not displayed.**

Since the GDL 39 / GDL 39 3D is a receive-only device, even when used onboard an aircraft equipped with a qualifying GPS and 1090 ES transponder, a GBT may not identify it as an ADS-B participating aircraft. The squitter of some 1090 ES transponders, including the Garmin GTX 23ES, must be configured to communicate the aircraft has 978 MHz receive capability in order to be identified as an ADS-B participating aircraft.







WARNING: *Do not rely solely upon the display of traffic information for collision avoidance maneuvering. The traffic display does not provide collision avoidance resolution advisories and does not under any circumstances or conditions relieve the pilot's responsibility to see and avoid other aircraft*



WARNING: *Do not rely solely upon the display of traffic information to accurately depict all of the traffic within range of the aircraft. Due to lack of equipment, poor signal reception, and/or inaccurate information from aircraft or ground stations, traffic may be present that is not represented on the display.*

SYSTEM STATUS









The traffic system status is announced in the upper left corner of the Map Page, as well as the lower left corner of the dedicated Traffic Page.

System Status	Traffic Icon
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You are receiving TIS-B traffic information for traffic within 15 nm and 3,500' of a rule compliant participating aircraft.	
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You will typically receive TIS-B coverage within a minimum of 3 NM (+/- 1,000 ft) of your current position. Other ADS-B participants not compliant with the latest ADS-B software specifications often trigger full TIS-B uplink services. Performance may vary between ground stations.	
Receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. With degraded TIS-B. You may see traffic targets, but the coverage is incomplete and cannot be relied upon.	
Not receiving Air-To-Air targets from aircraft transmitting ADS-B out on either UAT or 1090 data link. You are not receiving TIS-B traffic information.	

Traffic Modes

TRAFFIC DESCRIPTION

ADS-B traffic operation is similar to other traffic systems, but ADS-B adds additional symbology. The symbols used to display ADS-B traffic are shown in the table below. The traffic identifier and altitude are displayed below the traffic symbol. A small up or down arrow next to the traffic symbol indicates the traffic is climbing or descending at a rate of at least 500 feet per minute. The vector line that extends beyond the point of the traffic arrow is just further indication of the intruder aircraft track.

Symbol	Description
	Non-threat, non-directional airborne traffic
	Directional airborne Traffic with track vector. Points in the direction of the aircraft track.
	Non-directional airborne Proximity Advisory (PA). Proximity Advisories are issued for any traffic within 6 nautical miles and +/- 1,200'.
	Directional airborne Proximity Advisory (PA) with track vector. Points in the direction of the aircraft track. Proximity Advisories are issued for any traffic within 6 nautical miles and +/- 1,200'.
	Non-directional airborne Traffic Advisory (TA)
	Non-directional off-scale airborne Traffic Advisory (TA). Displayed at outer range ring at proper bearing.
	Directional airborne Traffic Advisory (TA) with track vector. Points in the direction of the aircraft track.
	Directional off-scale airborne Traffic Advisory (TA). Points in the direction of the aircraft track.

ADS-B Traffic Symbology


TRAFFIC ADVISORIES (TA)

The GDL 39 / GDL 39 3D automatically adjusts its Traffic Advisory (TA) sensitivity level to reduce the likelihood of nuisance TA alerts during various phases of flight. TAs are issued for traffic when they are predicted to be within a specified volume of airspace around the aircraft in a specified amount of time. The protected volume and time interval varies based on the current geodetic altitude and groundspeed. Thus, the protected volume of airspace increases with altitude and ground speed. Refer to the following table for details.

Altitude (Geodetic)	Look Ahead Time (sec.)	Vertical Separation (ft.)	Horizontal Separation (nm.)
Below 5,000	30	+/-850	.35
5,000-10,000	40	+/-850	.55
10,000-20,000	45	+/-850	.80
20,000-42,000	48	+/-850	1.10
Above 42,000	48	+/-1,200	1.10

Traffic Advisories



Configuring GDL 39 / GDL 39 3D for a Pressurized or Non-Pressurized Aircraft:

- 1) From any page, touch **Home** > .
- 2) Touch the GDL 39 Tab.
- 3) Touch Pressurized Cabin to select/deselect.



NOTE: Relative altitude information will only be displayed if Pressurized Cabin is not selected.

Enabling/Disabling Traffic Data on Map Page:




- 1) From any page, touch **Home** > .
- 2) Touch  > **Overlays** > **Traffic**.

<ul style="list-style-type: none"> Map / Charts Overlays Filters Radar / IR Color Opacities Ownership / Route General 	<input checked="" type="checkbox"/> Radar Internet (Comp)	<input checked="" type="checkbox"/> Clouds Internet IR	<input type="checkbox"/> Icing Internet
	<input checked="" type="checkbox"/> Lightning Internet	<input checked="" type="checkbox"/> Traffic	<input type="checkbox"/> Winds Aloft Internet
	<input checked="" type="checkbox"/> AIR / SIGMETs	<input checked="" type="checkbox"/> NOTAMS	<input type="checkbox"/> PIREP
	Terrain	<input checked="" type="checkbox"/> TFRs	<input type="checkbox"/> Fuel Prices
	Live Track Log	Obstacles	<input checked="" type="checkbox"/> Weather
			<input type="checkbox"/> None

Touch to Display


Map - Overlays - Traffic

Viewing the Traffic Page:

- 1) From any page, touch **Home** > .
- 2) Touch   to change the range for the traffic rings.

Changing the altitude range:

- 1) On the Traffic Page, Touch **Altitude Filter**.
- 2) Touch one of the following options:
 - **Unrestricted:** All available traffic is displayed.
 - **Above:** Displays non-threat and proximity traffic from 9000 feet above the aircraft to 2700 feet below the aircraft. Typically used during climb phase of flight.
 - **Normal:** Displays non-threat and proximity traffic from 2700 feet above the aircraft to 2700 feet below the aircraft. Typically used during enroute phase of flight.
 - **Below:** Displays non-threat and proximity traffic from 2700 feet above the aircraft to 9000 feet below the aircraft. Typically used during descent phase of flight.

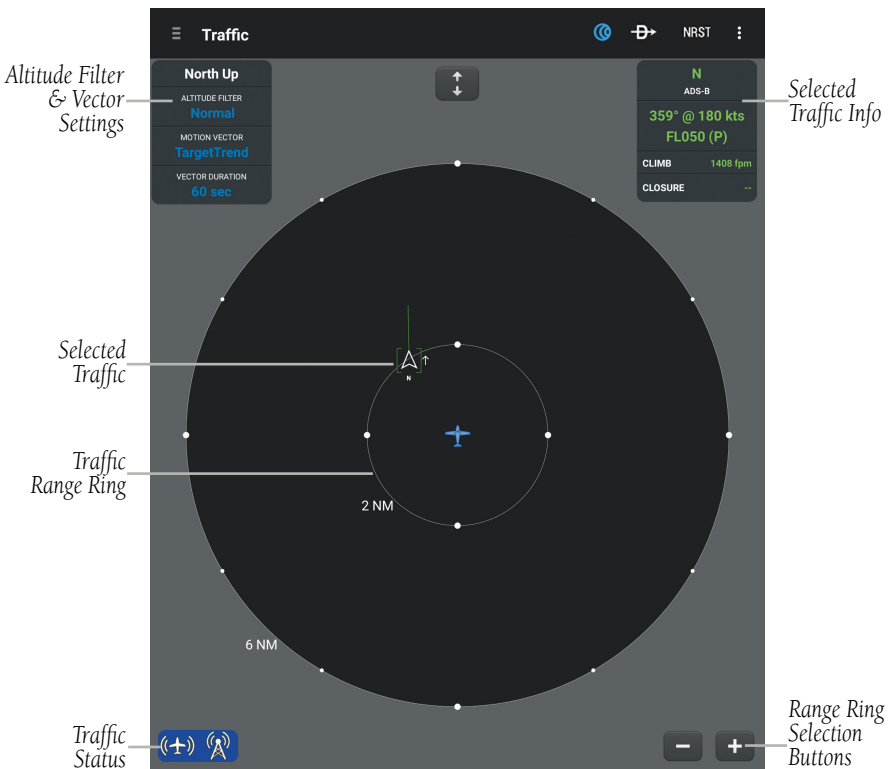

Traffic Page

FLIGHT ID DISPLAY AND MOTION VECTOR

The Flight IDs of other aircraft (when available) can be displayed on the Traffic Page. When a flight ID or call sign is received, it will appear below the corresponding traffic symbol when enabled. Traffic ground track is indicated on Garmin Pilot by the Motion Vector, a short line, extending in the direction of target movement or relative movement. The track vector has two settings, TargetTrend™ shown as a green vector, or Absolute shown as a white vector. Absolute vectors extend from the traffic symbol showing the traffic's ground track. TargetTrend traffic vectors are displayed relative to the aircraft's position and ground speed. For example if traffic is ahead and traveling in the same direction but at a slower ground speed, the motion vector would point opposite of its direction of flight, indicating the aircraft is overtaking the traffic. Thus, the TargetTrend motion vector is relative to the current position, where absolute motion vectors are based on the traffic's speed and direction. The end of the Motion Vector represents the predicted absolute or relative location of the traffic, based the traffic's reported track, ground speed and the Vector Duration setting (15, 30, 60, or 120 seconds).



Example ADS-B Traffic




NOTE: Traffic Altitude Filters and Motion Vector settings can only be changed on the dedicated Traffic Page. The Altitude Filter and Motion Vector settings from the Traffic Page will be used on the Map Page as well.

Changing Motion Vector:

- 1) From any page, touch **Home** > .
- 2) Touch the Motion Vector field in the upper left corner of the Traffic Page and select **TargetTrend** or **Absolute**.

Changing Vector Duration:

- 1) From any page, touch **Home** > .
- 2) Touch the Vector Duration field in the upper left corner of the Traffic Page and select **15**, **30**, **60** or **120** seconds.

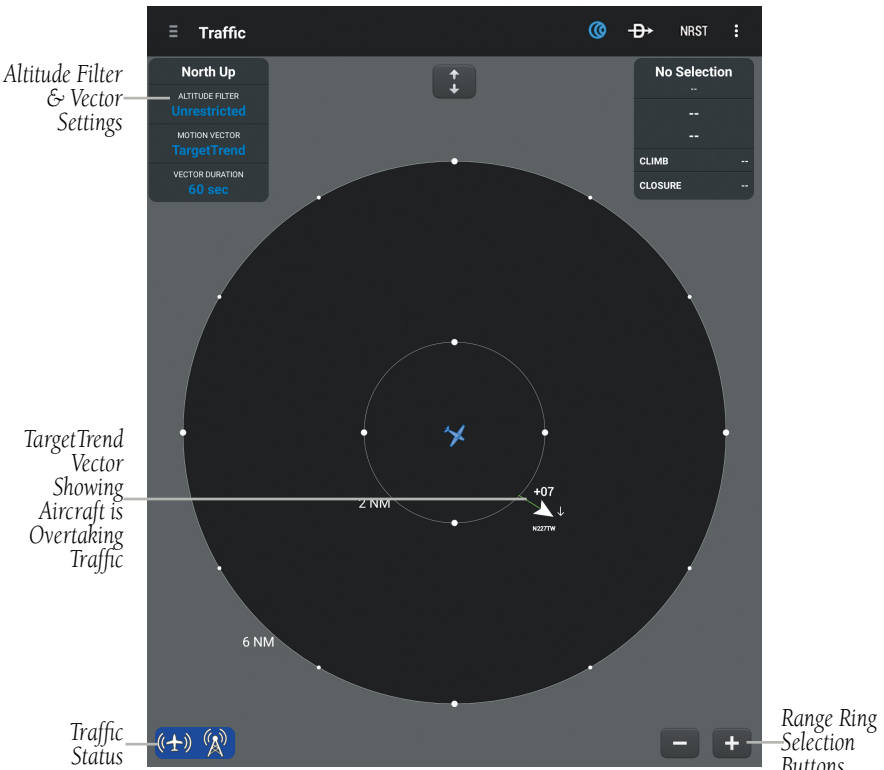

TargetTrend™ Vectors

TERRAIN




WARNING: Do not use Terrain information for primary terrain avoidance. Terrain information is intended only to enhance situational awareness.

The Terrain function displays altitudes of terrain and obstructions relative to the aircraft position and altitude with reference to a database that may contain inaccuracies. Terrain and obstructions are shown only if they are in the database. Terrain and obstacle information should be used as an aid to situational awareness. They should never be used to navigate or maneuver around terrain. Note that all obstructions may not be available in the terrain and obstacle database. No terrain and obstacle information is shown without a valid 3-D GPS position.

The device or external GPS receiver provides the horizontal position and altitude of the aircraft. Aircraft GPS altitude is derived from satellite position. GPS altitude is then converted to a mean sea level (MSL)-based altitude (GPS-MSL altitude) and is used to determine terrain and obstacle proximity. GPS-MSL altitude accuracy is affected by satellite geometry, but is not subject to variations in pressure and temperature that normally affect pressure altitude sensors. GPS-MSL altitude does not require local altimeter settings to determine MSL altitude. It is a widely-used MSL altitude source.


Terrain and obstacle databases are referenced to MSL. Using the GPS position and altitude, the Terrain feature portrays a 2D picture of the surrounding terrain and obstacles relative to the position and altitude of the aircraft. GPS position and GPSMSL altitude are used to calculate and predict the aircraft's flight path in relation to the surrounding terrain and obstacles. In this way, the pilot can view predicted dangerous terrain and obstacle conditions. Alert windows appear to inform the pilot of proximity to the terrain and obstacles.

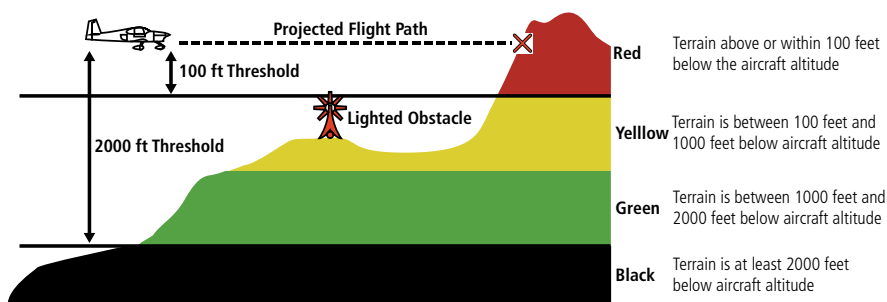


Terrain Page Altitude/Color Correlation

TERRAIN INFORMATION

Two views modes are available on the Terrain Page: the 360° view and the Arc view, which provides a 120° arc outline. The areas of the terrain shaded red are predicted to be within 100 feet below or above the aircraft. The areas in yellow are between 1,000 feet and 100 feet below the aircraft and the areas in green are between 1,000 and 2,000 feet below the aircraft. The black areas are more than 2,000 feet below the aircraft. A projected point of impact is marked with an "X" symbol. The Altitude Selector in the upper right corner can be configured to show, GPS derived AGL or GSL, or SFC ELEV (Surface Elevation) from the Terrain Database.

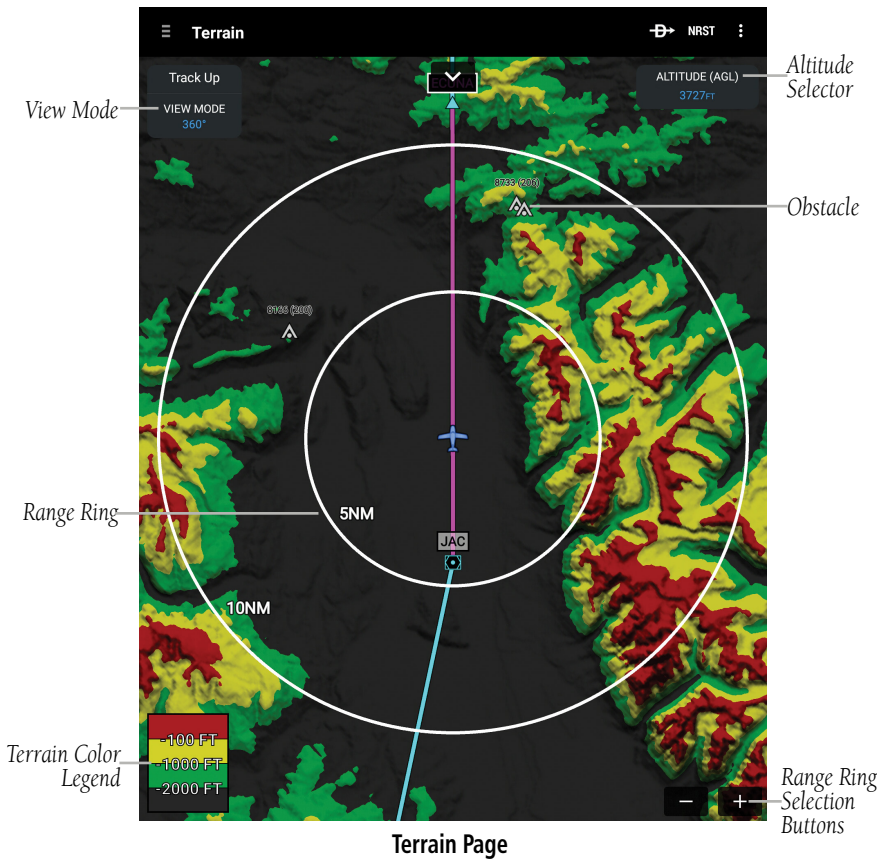

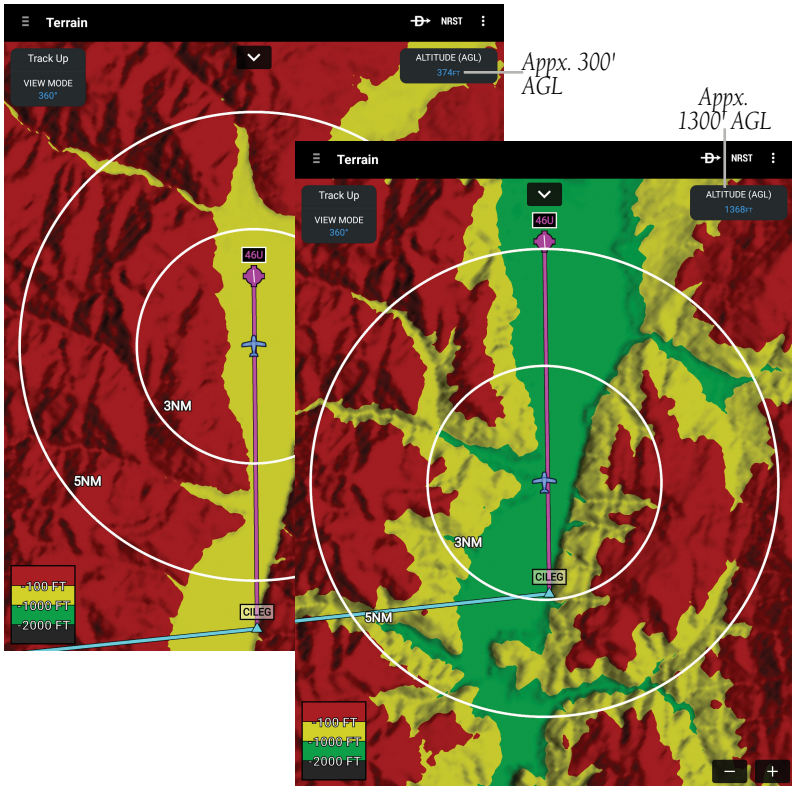


Terrain Page Colors - 360° View

TERRAIN COLOR TRANSITION

During the takeoff or landing transition only terrain that is 400ft above the current location is shown in red. This is to prevent from displaying a "sea of red" during takeoffs and landings.

During the takeoff transition, the terrain colors will "fade in" once the aircraft is airborne and flies through 400' AGL, the aircraft descends more than 25' after takeoff, or more than 60 seconds have passed since the aircraft was on the ground.

During the landing transition, the terrain colors will "fade out" when the aircraft is within 0.5nm of an airport, the distance is decreasing, and the height above the runway is less than 200'.

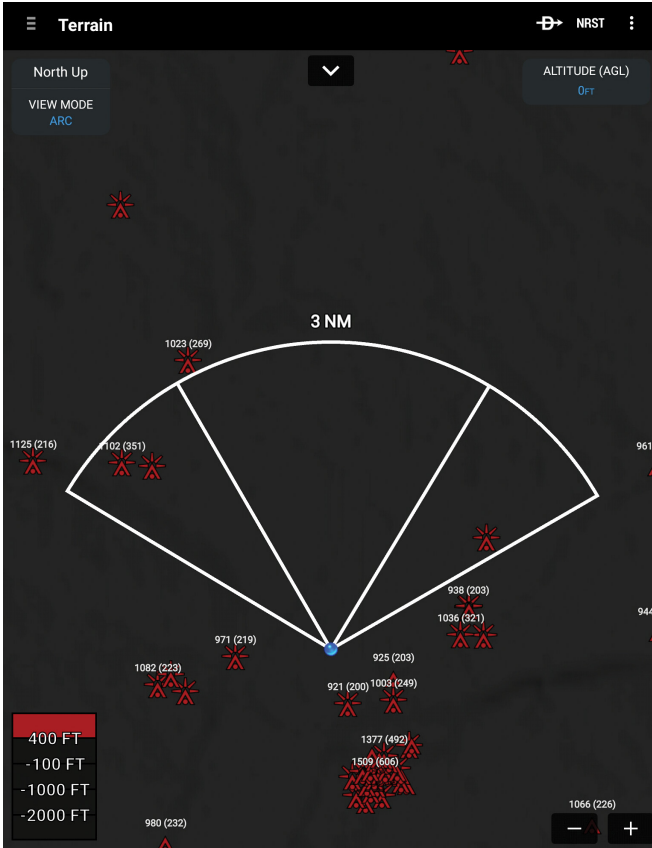











Terrain Color Transition - Arc View

OBSTACLE INFORMATION

Obstacles are shown on the Terrain Map View, at or below the map range of 12 nm. Obstacles are also shown on the Navigation Map from a range of 200 feet to 5 nm.

Standard aeronautical chart symbols are used for lighted or unlighted obstacles taller than 200 feet Above Ground Level (AGL). Refer to the Obstacle Icons legend below.

When selecting an obstacle with the Map Pointer, each obstacle displays the altitude at the top of the obstacle, or Mean Sea Level (MSL). Each obstacle also lists the actual height of the obstacle, or Above Ground Level (AGL).


Unlighted Obstacle		Lighted Obstacle		Potential Impact Points	Obstacle Location
< 1000' AGL	> 1000' AGL	< 1000' AGL	> 1000' AGL		
					WARNING: Red obstacle is above or within 100' below current aircraft altitude
					CAUTION: Yellow obstacle is between 100' and 1000' below current aircraft altitude

Terrain Obstacle Colors and Symbology

TERRAIN AND OBSTACLE ALERTS (OPTIONAL)

Terrain, Obstacle, and Descent Rate pop-up and voice alerts are issued when flight conditions meet parameters that are set within the software algorithms. Terrain alerts typically employ a CAUTION or a WARNING alert severity level, or both. When an alert is issued, visual annunciations are displayed and when enabled voice alerts are heard.

If the Terrain Page is not displayed, a pop-up alert appears. Touch **Dismiss** to acknowledge and clear the alert, or touch **Show Terrain** to view the Terrain Page.

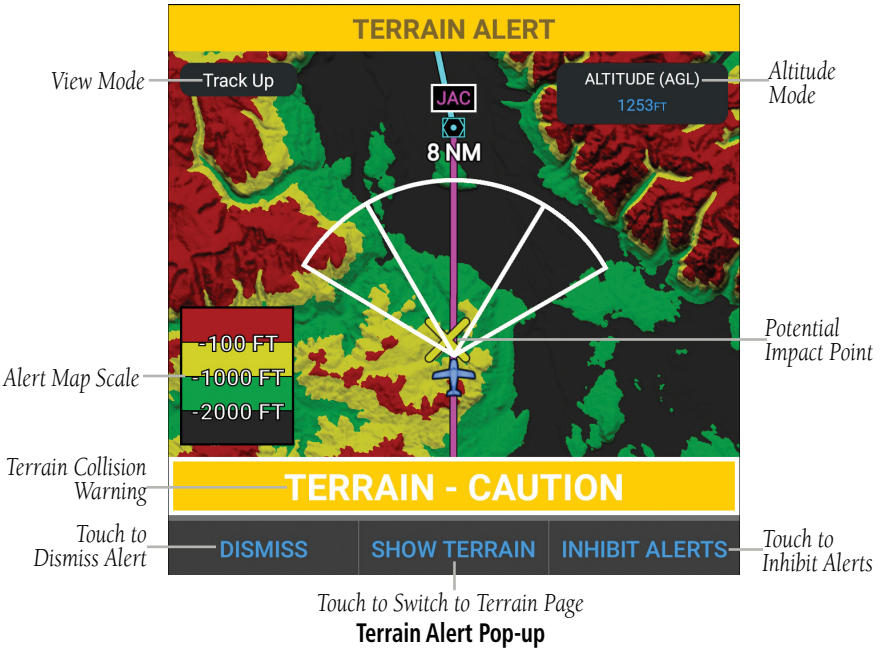



Alert Type	Voice Message
Terrain Caution	"Caution Terrain"
Obstacle Caution	"Caution Obstacle"
Terrain Ahead Caution	"Caution; Terrain Ahead"
Obstacle Ahead Caution	"Caution; Obstacle Ahead"
Terrain Warning	"Terrain, Terrain, Pull Up, Pull Up"; * "Pull Up"
Obstacle Warning	"Obstacle, Obstacle, Pull Up, Pull Up"; * "Pull Up"
Sink Rate Caution	"Caution; Sink Rate"
Sink Rate Warning	"Sink Rate, Pull up"; * "Pull Up"

* "Pull Up" is repeated every 5 seconds after the initial alert until alert conditions no longer exists


Terrain and Obstacle Voice Alerts

Viewing Terrain Page:



- 1) From any page touch **Home** > .
- 2) Touch  or  or pinch-zoom to change the range of the terrain rings.

Configuring Terrain Page:

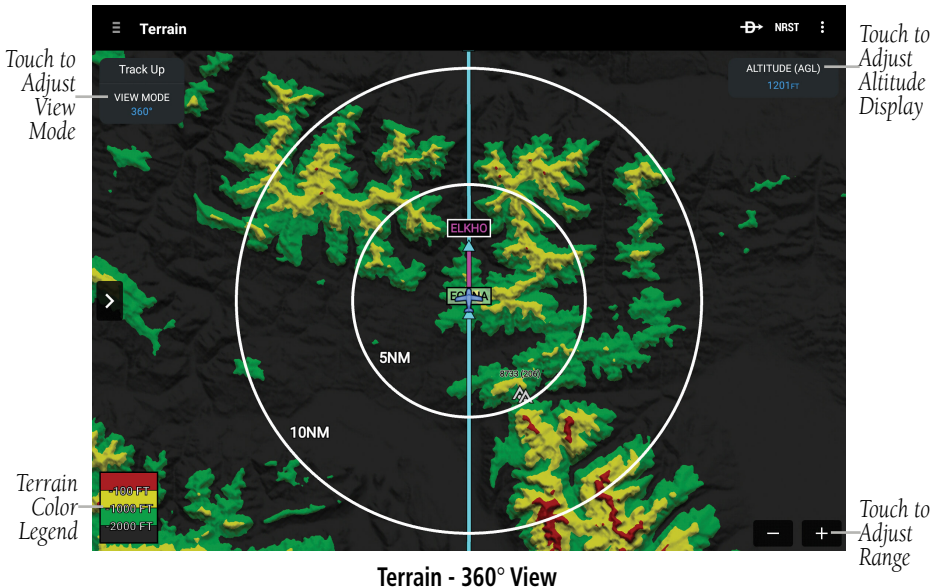
- 1) From any page touch **Home** > .
 - 2) Touch **VIEW MODE**.
 - 3) Touch **360°** to view a 360° representation of terrain.
- Or:** Touch **Arc** to view a forward looking 120° arc of terrain.
- 4) Touch **Altitude** > **AGL**, **GSL**, or **SFC ELEV** to format the Altitude display.



Enabling/Disabling Terrain Shading on Map Page:

- 1) From any page touch **Home** > .
- 2) Touch  > **Overlays** > **Terrain**.

Enabling/Disabling Obstacles on Map Page:

- 1) From any page touch **Home** > .
- 2) Touch  > **Overlays** > **Obstacles**.

CHARTS



NOTE: *Geo-referenced FliteCharts and Chart Overlays are available with the 'Premium' add-on subscription.*

FliteCharts resemble the paper version of AeroNav Services terminal procedures charts. The charts are displayed with high resolution and in color for applicable charts. Basic FliteCharts are included in the Garmin Pilot subscription, Geo-referenced FliteCharts are also available for an additional paid subscription. Once downloaded, charts can be viewed offline. The geo-referenced portion of the chart is outlined in blue. Refer to the Downloads section for more information on downloading charts. Available data includes:

Arrivals (STAR)

KIXD: JHAWK SIX

Departure Procedures (DP)

KIXD: CHIEF SEVEN

Approaches

KIXD: ILS OR LOC RWY 36

Airport Information Charts


KIXD: AIRPORT DIAGRAM

Garmin Pilot makes it easy to organize all of the terminal procedures for the route of flight by creating a Binder for the departure and destination airports. Additional binders can also be created and customized by adding individual charts for any airport. Refer to the Downloads Page to ensure the desired charts are onboard the device. Terminal Procedure charts can be viewed and downloaded from the Airport Info Page, under the Procedures tab as well.



NOTE: *A data connection (e.g., Wi-Fi or cellular) is required to download and update charts.*


Viewing Charts in a Binder:


- 1) From any page, touch **Home** > .
- 2) Touch the desired **Binder**.
- 3) Select the desired chart.



NOTE: *Any charts that are not geo-referenced will open in the default PDF document viewer.*




- 4) Touch the system back button to return to binder contents.
- 5) Touch the system back button again to return to the Chart Binders Page.

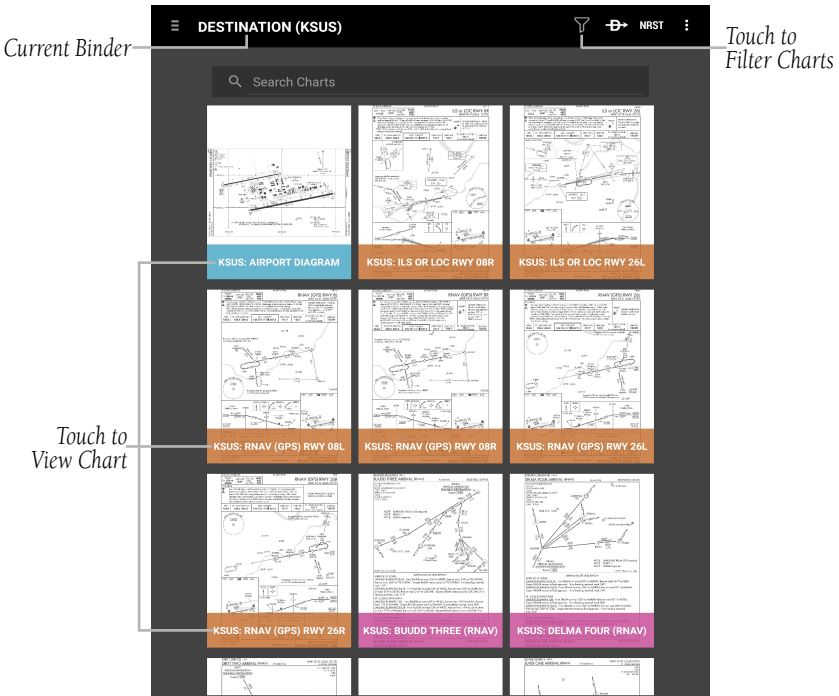While viewing a chart, use the  and  buttons to navigate to previous and next charts without returning to the binder view.




Automatically Generated Chart Binders

Annotating Charts:

- 1) From any page, touch **Home** > .
- 2) Touch any **Binder** > **Chart**.
- 3) Touch the Menu Button  > **Annotate Chart**.
- 4) Touch  to display the Tools Palette.
- 5) Touch the desired tool (Draw, Highlight, or Erase).
- 6) Touch the desired color and stroke weight.
- 7) Annotate Chart as desired.
- 8) Touch **Clear** to clear annotations.
- 9) Touch **Close** to save annotations and exit Annotate Chart mode.




NOTE: While annotating a chart, the chart can be zoomed or panned by pinching two fingers together or by pulling two fingers apart. Any other touch or tap will result in annotation.

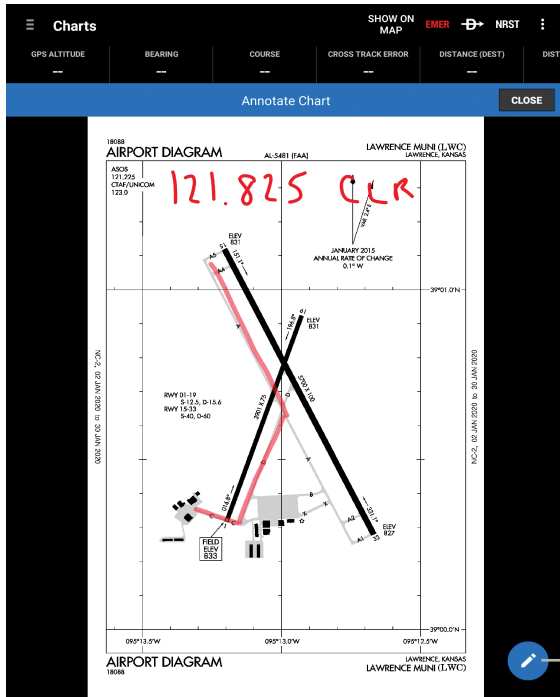

Touch to Close & Save

Touch to Display Tools Palette

Annotate Chart

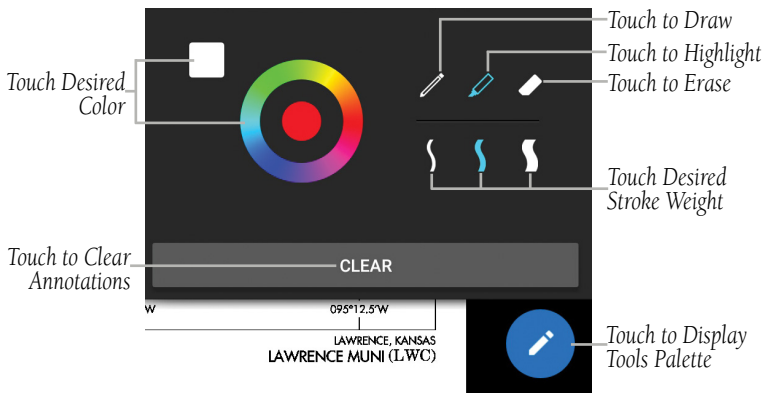

Touch Desired Color

Touch to Draw

Touch to Highlight

Touch to Erase



Touch Desired Stroke Weight

Touch to Clear Annotations







Touch to Display Tools Palette

Annotate Chart - Tools Palette





Creating a Custom Binder:

- 1) From any page, touch **Home** > .
- 2) Touch **New Binder**.
- 3) Using the keyboard enter a name.
- 4) Touch the new **Binder**.
- 5) Touch **Search Charts** and enter an airport identifier using the keyboard.
- 6) Touch the chart name to view the it or touch  to add the chart to the binder.



Or:

- 1) From any page, touch **Home** > .
- 2) Touch the Procedures Tab. All available charts and procedures are shown including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by  have already been downloaded to the device.
- 3) Touch  to create a Chart Binder or add to an existing binder.
- 4) Touch  and enter a Binder Name or select from the list of available binders.
- 5) Touch  for each additional chart to add to a binder.



Searching for Charts:

- 1) From any page, touch **Home** > .
- 2) Touch **Search Charts** and enter an airport identifier using the keyboard.
- 3) Touch  to create a Chart Binder or add to an existing binder.
- 4) Touch  and enter a Binder Name or select from the list of available binders.
- 5) Touch  for each additional chart to add to a binder.

Organizing Custom Binders:

- 1) From any page, touch Home > .
- 2) Touch the Menu Button  and touch Edit / Arrange
- 3) Drag the Custom Binder and release at the desired location.
- 4) Touch the blue Edit / Arrange bar when finished to exit.

Filtering Charts Displayed in Binder:

- 1) From any page, touch **Home** > .
- 2) Touch the desired **Binder**.
- 3) Touch  to filter charts displayed in the **Binder**.

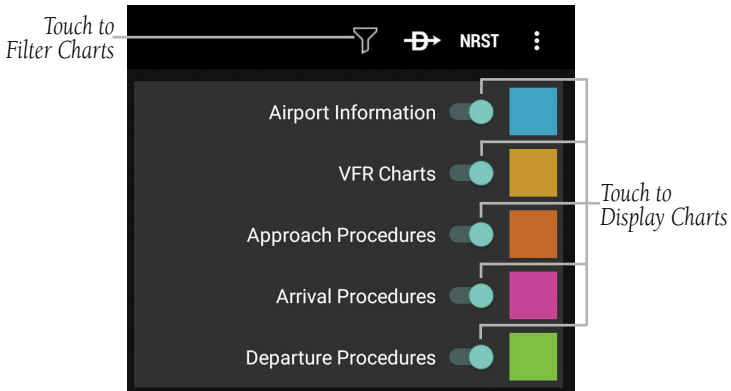






Chart Binder Filter



Deleting Custom Binders:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Edit / Arrange**.
- 3) Touch  for the associated binder to delete the binder.
- 4) Touch the blue Edit Mode bar when finished to exit.

Deleting Charts from a Custom Binders:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > **Edit / Arrange**.
- 3) Touch  for the associated chart to delete the chart.
- 4) Touch the blue Edit Mode bar when finished to exit.







Printing a Chart:

- 1) From any page, touch **Home** > .
- 2) Touch the desired **Binder**.
- 3) Touch the desired chart.
- 4) Touch the Menu Button  and touch Print.



NOTE: Chart printing requires an Android compatible print facility to be installed. This may involve installing a custom app for a Wi-Fi enabled printer or setting up Google Cloud Print.

Viewing and Organizing Procedures from the Airport Info Page:


- 1) From any page, touch **Home** > .
- 2) Touch the Procedures Tab. All available charts and procedures are shown including; (Airport Diagrams, Approach Procedures, Arrival Procedures, and Departures). Chart titles followed by , will need to be downloaded. Charts followed by  have already been downloaded to the device.
- 3) Touch the desired chart to view.
- 4) Touch  to create a Chart Binder or add to an existing binder.
- 5) Touch  and enter a Binder Name or select from the list of available binders.
- 6) Touch  for each additional chart to add to a binder.



NOTE: Terminal procedures (e.g. SIDs, STARs, instrument approach procedures, airport diagrams, Hot Spots, and Take-off Minimums) are available for selection from the Airport Information Page. Any charts that are not geo-referenced will open in the default PDF document viewer.

AUTOMATICALLY GENERATED BINDERS

Garmin Pilot will automatically create three binders for the active flight plan. When the app has an active flight plan, a binder will appear for the departure and destination airports. When the current Direct-to destination is an airport, a binder for that airport will appear. Garmin Pilot will download the charts and procedures for an automatically-generated binder the first time the binder is opened.

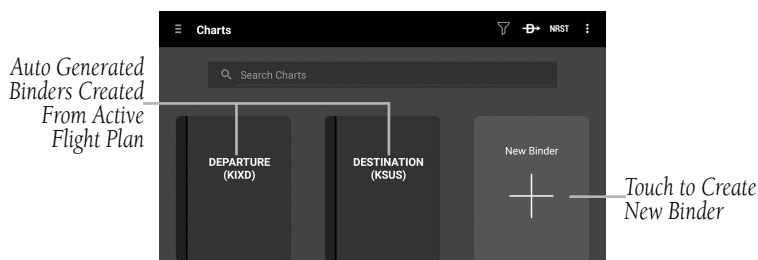

Automatically Generated Chart Binders


CHART OVERLAYS (PREMIUM SUBSCRIPTION)


Garmin Pilot integrates instrument approach procedure charts within the moving map. Garmin Pilot overlays approach charts at the proper position, orientation and scale on the moving map, making approach procedures available alongside moving map features such as flight paths, weather, nav aids, airspaces, obstacles, and terrain.

The Chart Overlay will automatically rotate to match the Map page, accommodating both North Up and Track Up map modes.

Chart Overlays are available for any Geo-Referenced instrument approach procedure chart, including most FliteCharts charts.

Displaying Approach Chart Overlays from Charts Page:


- 1) From any page, touch **Home** > .
- 2) Search for the desired approach chart (orange labels).
- Or:** Touch the Destination binder, or a custom binder, to locate the desired chart.
- 3) Touch **Show on Map**. Garmin Pilot switches to the Map page and displays the selected chart, overlaid over the moving map.

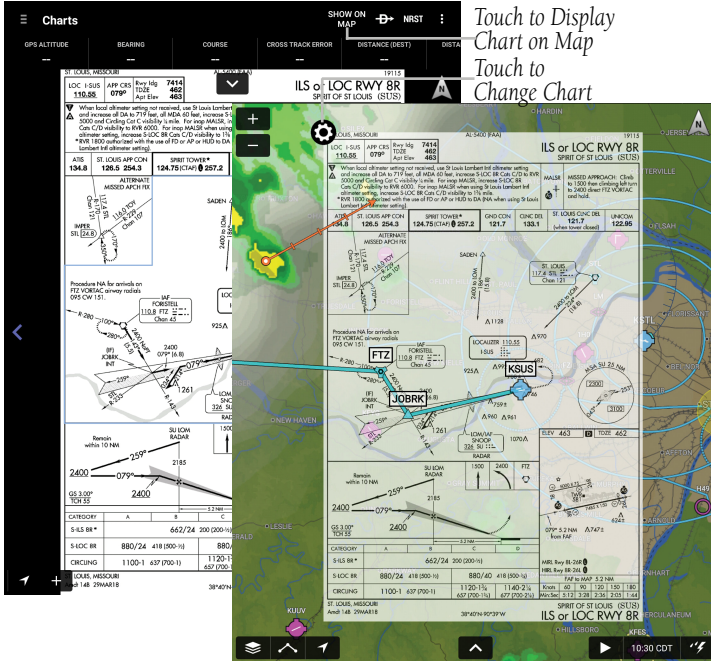



Selecting Chart Overlay

Displaying Approach Chart Overlay From Map Page:





NOTE: When selecting a Procedure, ensure the  is present, indicating the chart is current, downloaded successfully, and ready for use.








- 1) From any page, touch **Home** > .
- 2) Touch and hold the desired Airport in the Map Pane until the Radial Menu appears > .
- 3) Touch the **Proc** tab.
- 4) Touch the desired approach.

KOMA

INFO FREQ RWY **PROC** FUEL


Eppley Airfield  


INSTRUMENT APPROACHES

-  ILS OR LOC RWY 14L
IAP
-  ILS OR LOC RWY 14R
IAP
-  ILS OR LOC RWY 18
IAP
-  ILS OR LOC RWY 32L
IAP
-  ILS OR LOC RWY 32R
IAP
-  ILS OR LOC RWY 36
IAP
-  ILS RWY 14R (CAT II III)
IAP

Airport Info - Procedure Tab

Displaying Approach Chart Overlay From Airport Information Page:

- 1) From any page, touch **Home** > .
- 2) Touch the Airport Identifier Button to search for the desired airport.
- 3) Touch the **Procedures** tab.
- 4) Touch **Map** for the desired approach chart. Garmin Pilot switches to the Map page and displays the selected chart, overlaid over the moving map.

While using an active instrument approach procedure overlay, Garmin Pilot will display a settings icon  on the upper-left corner of the chart. These settings provide options to change to another chart for the current airport, change the opacity of the overlay (revealing more or less of the moving map below it) and removing the overlay entirely.

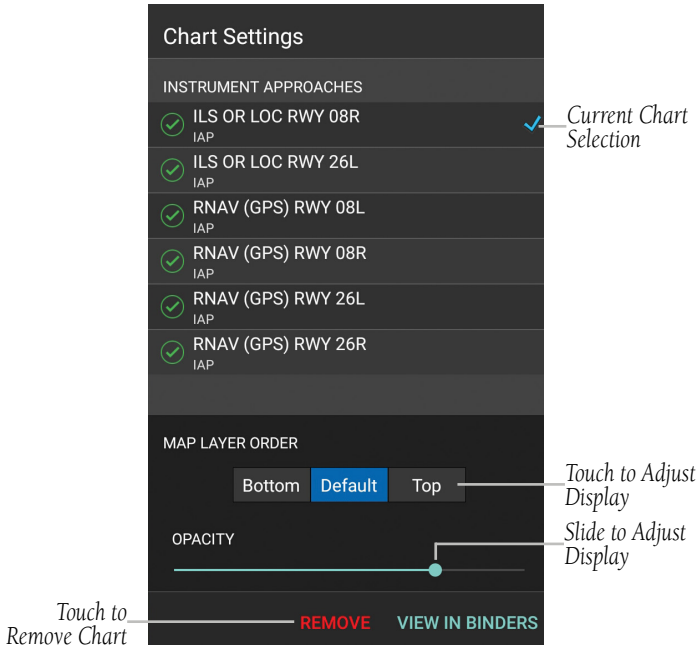




Chart Overlay Settings




SCRATCH PAD

The Scratch Pad, allows the pilot to quickly draw or write down information on the device screen. The Scratch Pad also provides five different tabs with different templates. The first two tabs are blank for general purpose notes. The other three tabs provide templates for ATIS, CRAFT, and PIREP forms.


Using the Scratch Pad:

- 1) From any page, touch **Home** > .
- 2) Touch one of the five tabs to select a template.
- 3) Touch  to view the Tool Palette.
- 4) Touch the desired tool (Pen, or Highlighter).
- 5) Touch the desired color and Line Width.

Clearing the Scratch Pad:

- 1) From any page, touch **Home** > .
 - 2) Touch one of the five tabs to select a template.
 - 3) Touch  to erase small areas.
- Or:** Touch  > Yes to clear the entire scratch pad.

Inverting colors on the Scratch Pad:


- 1) From any page, touch **Home** > .
- 2) Touch one of the five tabs to select a template.
- 3) Touch **Menu** > **Invert Colors**.



Blank Scratch Pad Tab



ATIS Scratch Pad Tab

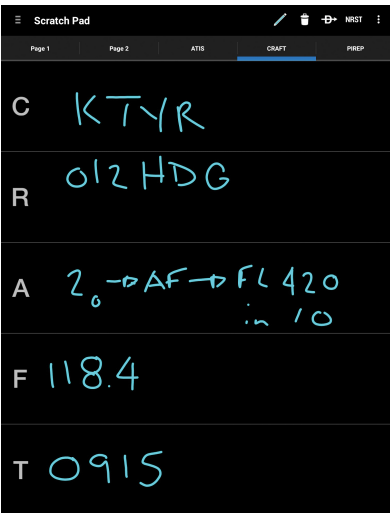


CRAFT Scratch Pad Tab




PIREP Scratch Pad Tab

CONNEX

Connex allows the wireless sharing of data between devices via Bluetooth™.

Touch **Home** >  to access the Connex Page or touch the Quick Access Connex Icon (if connected to a Connex device) to display the Connex Window. The Connex Page displays Connex status, features, and devices that integrate with Garmin Pilot.

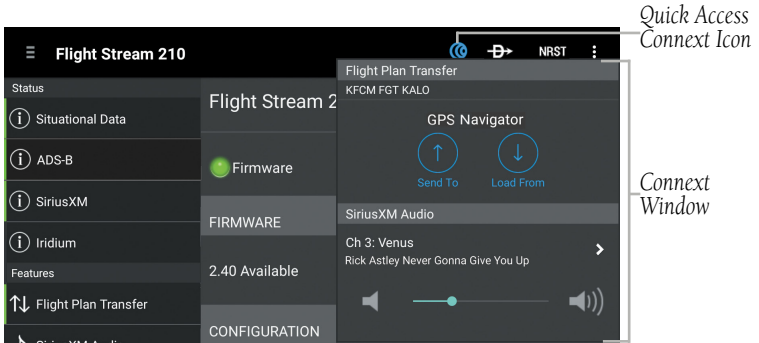

Connex Page & Connex Window

STATUS


SITUATIONAL DATA STATUS


When paired with a compatible navigator, Garmin Pilot has access to the same GPS information utilized by the navigator. In addition, the navigator shares attitude information to the Garmin Pilot's Synthetic vision and panel displays.

Viewing the compatible navigator situational data:



NOTE: Ensure the compatible navigator is paired to an Android device.

- 1) From Garmin Pilot, touch **Menu** > .
- 2) Touch the **Situational Data** Tab.

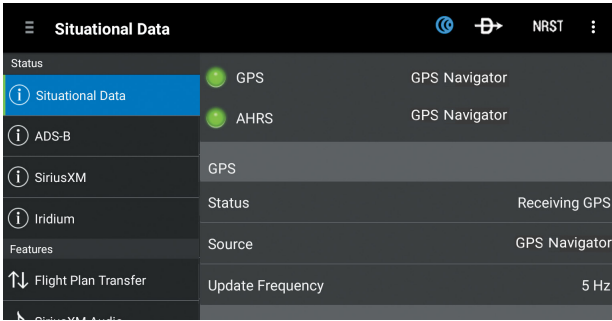

Situational Data Tab (Connect Page)

AHRS AND ALTITUDE INFORMATION

When connected to a compatible navigator, Garmin Pilot will display GPS derived back-up Attitude Indicator, Altimeter, VSI, HSI, and Ground Speed on the Panel. 'Pitch' and 'Roll' become available Nav Bar options on the Map Pane.



Panel (With Compatible Navigator Connected)

ADS-B STATUS


Traffic and weather information are available by pairing an Android device directly to a compatible ADS-B device. ADS-B data does not travel from the compatible navigator to Garmin Pilot.

Viewing ADS-B traffic and weather data:




NOTE: Ensure the compatible navigator and the compatible ADS-B device are paired to an Android device. The compatible navigator will not pass ADS-B data to the Garmin Pilot even if the ADS-B device is wired to it.

- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **ADS-B** Tab.

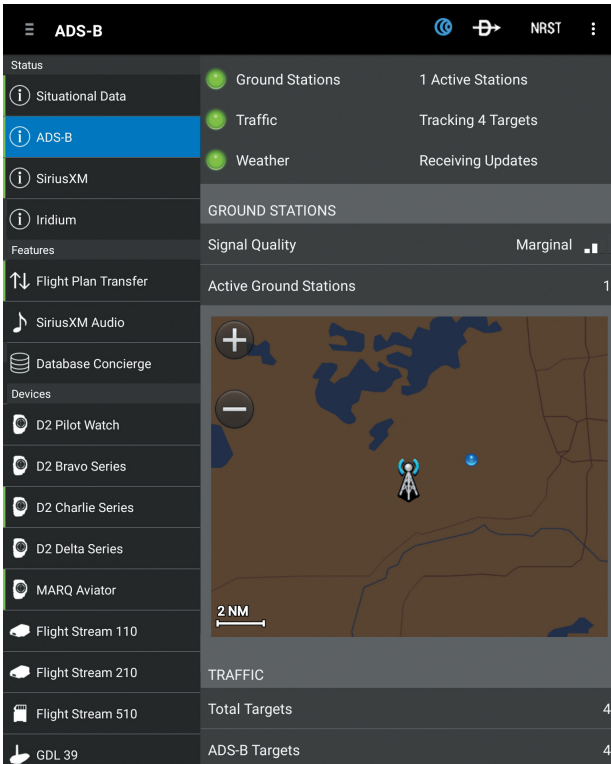




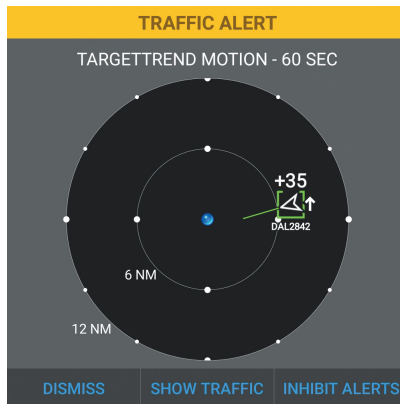
ADS-B Tab (Connex Page)

ADS-B TRAFFIC ALERTS

When Garmin Pilot is paired with a compatible ADS-B unit, the app automatically displays a pop-up window and plays an audible alert to notify users of nearby ADS-B traffic. Traffic alerts can be disabled and configured in **Home** > .

Configuring Traffic Alerts:

- 1) From any page, touch **Home** >  > **General**.
- 2) Touch  next to Traffic Alerts to disable the Traffic Alerter service. Touch  again to re-enable it.
- 3) Touch the Audio option to change the Traffic Alert voice that Garmin Pilot emits. Change to **Off** to receive no audio cue when a Traffic Alert appears.




ADS-B Traffic Alert Pop-up

When a Traffic Alert Pop-up appears, three options are provided to respond to the prompt. **Dismiss** will clear the pop-up and return to the previous Garmin Pilot screen. **Show Traffic** will clear the pop-up, and bring Garmin Pilot to the Traffic screen. **Inhibit Alerts** will clear the pop-up and prevent further Traffic Alert Pop-ups from appearing.

SIRIUSXM STATUS

SiriusXM weather information is shared with Garmin Pilot for installations with a compatible SiriusXM device. In addition, remote control of SiriusXM satellite radio from Garmin Pilot is available.

Refer to the Weather Data Section for information on accessing SiriusXM weather.

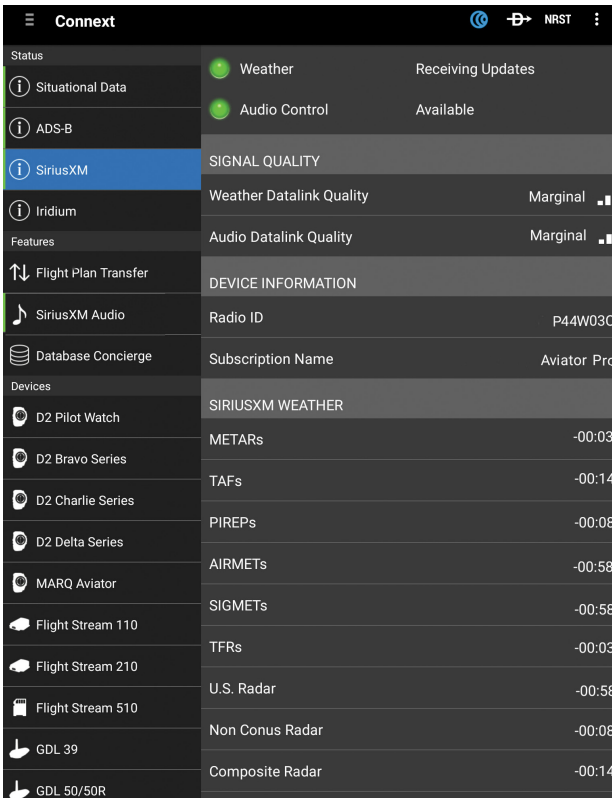

SiriusXM Tab (Connex Page)

FEATURES

FLIGHT PLAN TRANSFER


Bluetooth is used to transfer flight plan information between Garmin Pilot and a compatible navigator.

Sending a flight plan from Garmin Pilot to a Navigator:



NOTE: Ensure the Garmin Navigator is paired to an Android device.

- 1) From anywhere in Garmin Pilot, touch **Home** >
- 2) Touch the **Flight Plan Transfer** Tab.
- 3) Touch **Send**.

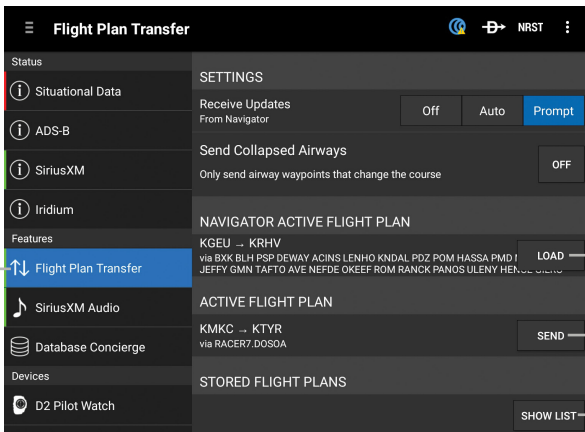


Flight Plan Transfer Tab

Touch to Load Flight Plan From Navigator

Touch to Send Flight Plan to Navigator

Touch to Show List of Stored Plans

Connex - Flight Plan Transfer Tab

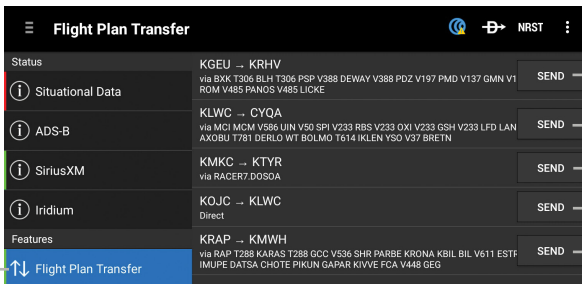




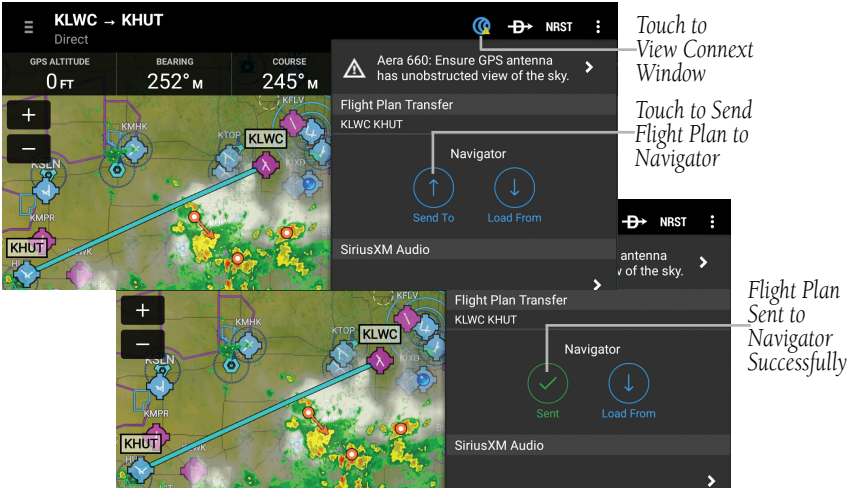
Flight Plan Transfer Tab

Touch to Send Stored Flight Plans to Navigator

Flight Plan Transfer - Stored Flight Plans

Or:

- 1) From anywhere in Garmin Pilot, touch  to display the Connex Window.
- 2) Touch **Send To** .
- 3) **Sent**  is displayed.




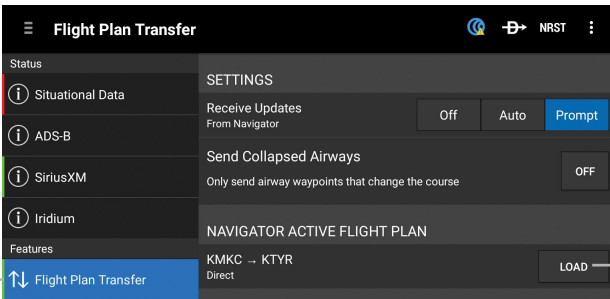
Connex Window - Sending Flight Plan to Navigator

Loading a flight plan from the Navigator to Garmin Pilot:






NOTE: Ensure the Garmin Navigator is paired to an Android device.


- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **Flight Plan Transfer** Tab.
- 3) Touch **Load**.



Connex - Flight Plan Transfer Tab


Or:


- 1) From anywhere in Garmin Pilot, touch  to display the Connex Window.
- 2) Touch **Load From** .
- 3) **Loaded**  is displayed.

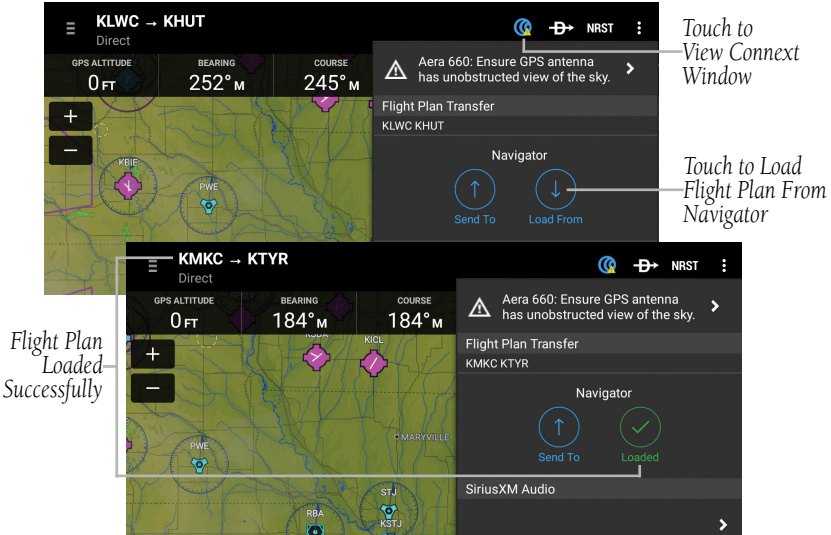

Flight Plan Loaded From Navigator

Receiving flight plan updates from a Navigator:


- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **Flight Plan Transfer** Tab.
- 3) Touch **Off**, **Auto**, or **Prompt**.

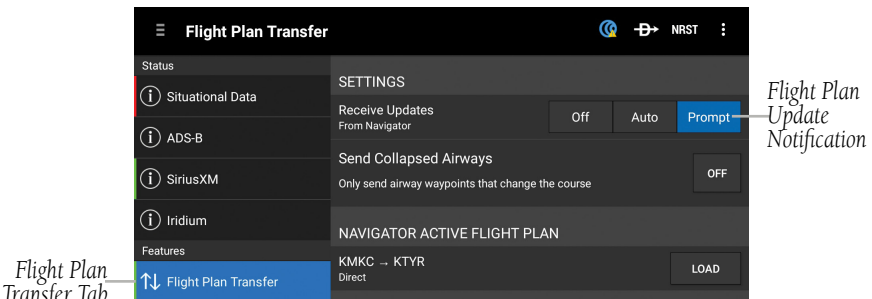

Connex - Flight Plan Transfer Tab - Update Prompt

Activating/Ignoring Flight Plan Updates From Navigator:

Touch **Ignore** or **Activate** when the Flight Plan Update Window appears.

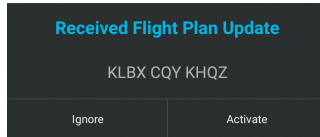

Flight Plan Update Window


SIRIUSXM AUDIO

SIRIUSXM AUDIO REMOTE CONTROL




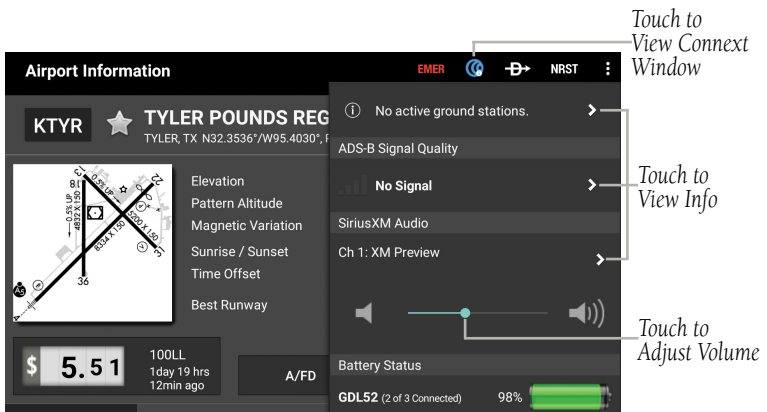
NOTE: Ensure a compatible SiriusXM device is paired to the Android device.

Adjusting SiriusXM Volume Using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **SiriusXM Audio** Tab.
- 3) Touch the volume slider to adjust volume.


Or:


- 1) From anywhere in Garmin Pilot, touch  to display the Connex Window.
- 2) Touch the volume slider to adjust the volume.



Connex Window - SiriusXM Audio Volume - Airport Info Page


Selecting SiriusXM Category Using Garmin Pilot:


- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **SiriusXM Audio** Tab.
- 3) Touch the **Categories** Button.
- 4) Touch the desired category from the list.

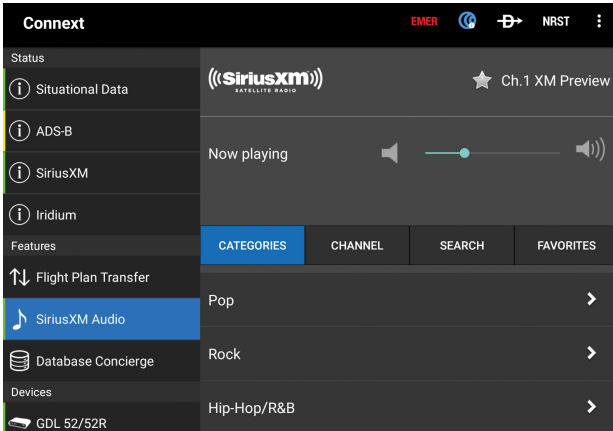

SiriusXM Audio Tab - Categories


Searching SiriusXM Satellite Radio Using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **SiriusXM Audio** Tab.
- 3) Touch the **Search** Button.
- 4) Enter the artist or song using the keypad.
- 5) Touch **Search** on the keypad.

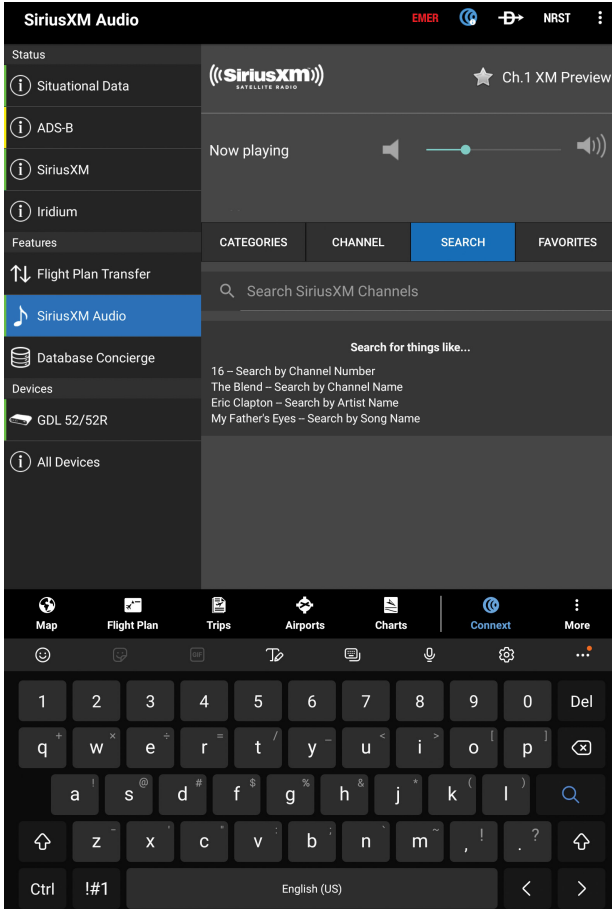


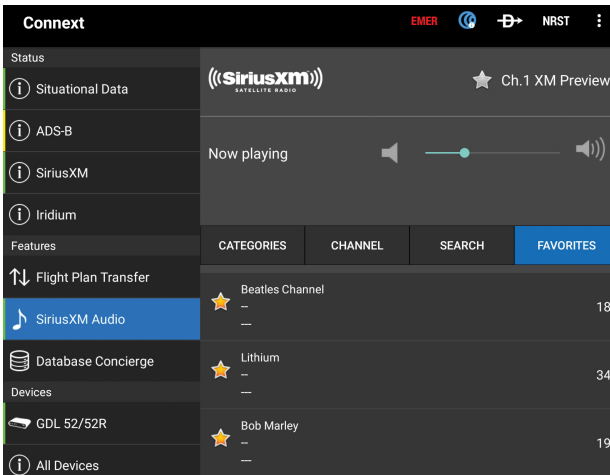
SiriusXM Audio Tab - Search

Adding a Channel to Favorites using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **SiriusXM Audio** Tab.
- 3) Touch the **Channels** Button.
- 4) Touch the blue star next to the channel to add to Favorites.

Viewing Favorites using Garmin Pilot:

- 1) From anywhere in Garmin Pilot, touch **Home** > .
- 2) Touch the **SiriusXM Audio** Tab.
- 3) Touch the **Favorites** Button.



SiriusXM Audio Tab - Favorites

DATABASE CONCIERGE



NOTE: Database Concierge requires a Flight Stream 510 and a compatible navigator.

Database Concierge is a tool for updating databases for compatible Garmin navigators. Updating databases should be accomplished with the aircraft on the ground. Database Concierge aims to make this task as easy as possible by using the Wi-Fi capabilities of your Android device, as well as integration with a personalized flyGarmin account.

By default, Database Concierge is disabled. This accommodates pilots who wish to use Garmin Pilot without Database Concierge. This is also useful to pilots who use multiple Garmin Pilot devices in the cockpit. Pilots can enable Database Concierge on only one of their Garmin Pilot devices, nominating that device to download and transmit updates to their avionics.

Once set up, the ideal usage of Database Concierge is to allow Garmin Pilot to download updates while connected to the internet. Once Garmin Pilot has downloaded all of its updates, take the Android device to the aircraft. The Android device will connect to the compatible system using the Wi-Fi provided by the Flight Stream 510, and navigator updates will commence.

Adding aircraft to your flyGarmin account:


- 1) Visit <https://fly.garmin.com>
- 2) Enter the email address and password for your Garmin Account. This is the same information used for Garmin Pilot subscriptions.
- 3) Click the **Aircraft** tab.
- 4) Click **Add a new aircraft**.
- 5) Enter the information for the aircraft and click **Add Aircraft**.
- 6) Click **Add a new aircraft device**.
- 7) Select the Garmin compatible system in the combo box.
- 8) Enter the System ID for the navigator. Click **Where is my System ID?** for assistance locating the system ID. Click **Add Device** when complete.

Garmin GTN series navigators use different databases than Garmin Pilot. In other words, subscriptions for Garmin Pilot do not provide databases for GTN navigators. As such, it may be necessary to purchase database subscriptions through the flyGarmin website, if not already done.



NOTE: Ensure the Flight Stream 510 is paired to the Android device. Refer to the 'Flight Stream' section for information on pairing the Flight Stream 510 via Bluetooth or WiFi.

Enabling Database Concierge and Selecting an Aircraft:


- 1) With the Flight Stream 510 paired to the Android device, touch **Home** >  > **Database Concierge**.
- 2) Touch **Enable Database Concierge**.
- 3) Verify that Garmin Pilot is showing the correct aircraft and aircraft device.
- 4) Touch **Continue**.
- 5) If desired, touch to disable Auto-Download Database Updates or Delete Downloads After Installation. Touch **Continue**.
- 6) Touch **Accept** on the database license agreement.


Once Database Concierge has at least one aircraft with a compatible Garmin navigator, it automatically downloads database information. Database Concierge will automatically check for updates when the Garmin Pilot device is connected to the internet.

Managing database downloads:

From any screen, touch **Home** >  > **Database Concierge** > **Go to Downloads**.


Or:

From any screen, touch **Home** > 

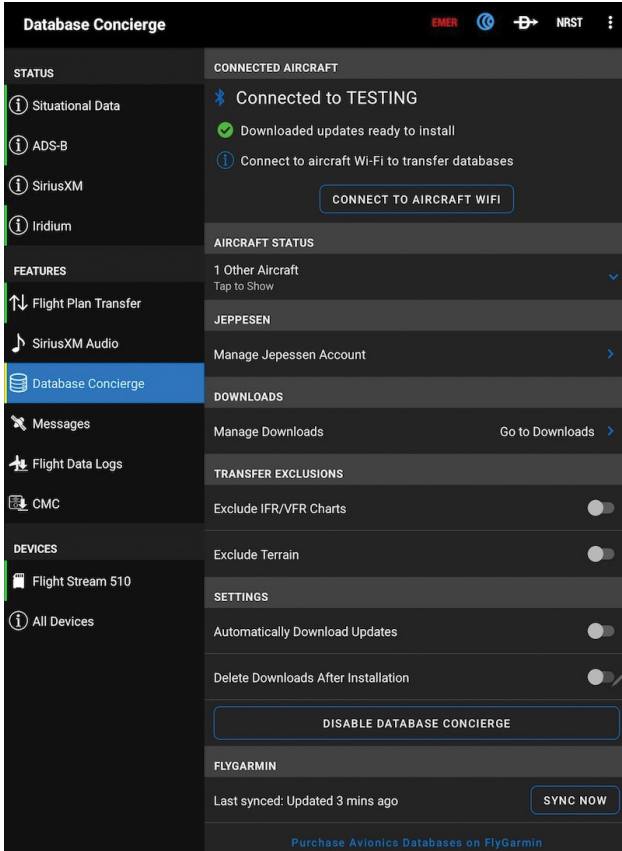

Database Concierge

Installing Downloaded Updates on a GTN Navigator:

- 1) Power on aircraft avionics.
- 2) The GTN navigator detects Flight Stream 510. The Flight Stream's Wi-Fi network is shown on the navigator screen.
- 3) On the Android device, connect to the indicated Wi-Fi network.
- 4) On the Android device, start Garmin Pilot and touch **Home** >  > **Database Concierge**.
- 5) The GTN navigator shows detected updates. Touch the **Start** button to begin updating.



Tap to View
Wi-Fi Network
& Password

Database Concierge Updates Available on GTN 750



Flight Stream 510 Wi-Fi Network as Shown On GTN 750


Installing Downloaded Updates on G1000 NXi:



NOTE: NXi will only provide a WiFi connection if new databases have been detected for download on Garmin Pilot via a valid Bluetooth connection. If there are no database updates required NXi will not provide a WiFi signal.




NOTE: If the Android device has previously connected to the FS510, and is not connected to another WiFi source, the Android device should connect automatically to the FS510. If the Android device is connected to another WiFi source (e.g. hangar wifi), then the FS510 will not connect automatically.

- 1) On the Android device, start Garmin Pilot and tap **Home** >  > **Database Concierge**.
- 2) Power on aircraft avionics.
- 3) On the Android device, connect via Bluetooth to the Flight Stream 510.
- 4) Navigate to **AUX** page on the **MFD**.
- 5) Turn the **FMS** knob to display the **Connex Setup** page. Verify the Android device is connected via Bluetooth.
- 6) Ensure that **WiFi Database Import** is **Enabled** on the **Connex Setup** page.
- 7) On the Android device, connect to the indicated SSID Wi-Fi network on the **Aux > Connex Setup** page.
- 8) The G1000 NXi shows detected updates on a pop up box on the lower right corner of the **MFD** screen. Press the **Update** softkey to begin updating.
- 9) Database update status can be monitored on the Database page on the **MFD** by selecting the small **MFD** knob.
- 10) Once the database transfers are complete the system will display a prompt to restart the avionics to finish the database transfer process.



NOTE: The **Restart** soft key is only enabled when the aircraft is on the ground with engines not running.

- 11) Press the **Restart** softkey.
Or:
Cycle the avionics power.
- 12) Verify the databases are current on the systems start-up screen or via the Auxiliary Group Databases page.

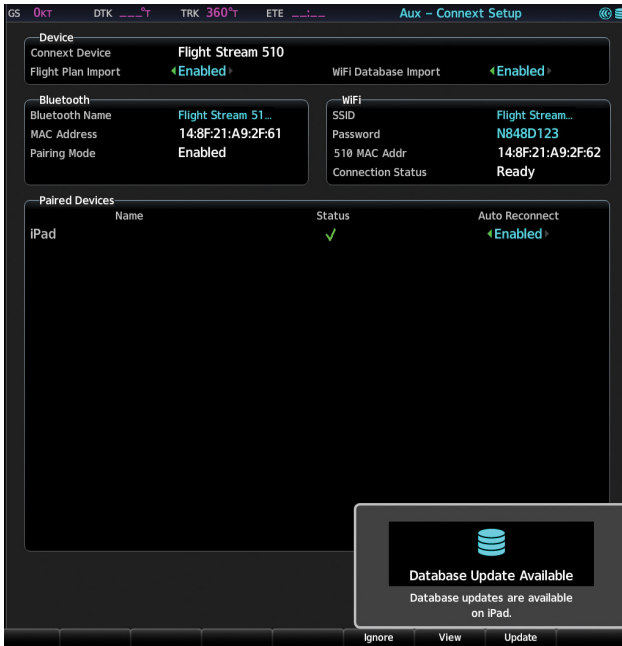

Database Concierge Updates Available as shown on G1000 NXi

Installing Downloaded Updates on to G3000/5000 with GDU Software 20.60 or later:



NOTE: G3000/5000 will only provide a WiFi connection if new databases have been detected for download on Garmin Pilot via a valid Bluetooth connection. If there are no database updates required, the G3000/5000 will not provide a WiFi signal.



NOTE: If the Android device has previously connected to the FS510, and is not connected to another WiFi source, the Android device should connect automatically to the FS510. If the Android device is connected to another WiFi source (e.g. hangar wifi), then the FS510 will not connect automatically.


- 1) Power on aircraft avionics.
- 2) From **Home** on the Touchscreen Controller, touch **Utilities > Setup > Connex Setup**.

- 3) Touch the **Functions** tab to ensure the **WiFi Database Import** is **Enabled** on the **Connex Setup** screen.




Connex Setup Page as Shown on G3000/5000

- 4) On the Android device, connect via Bluetooth to the Flight Stream 510.

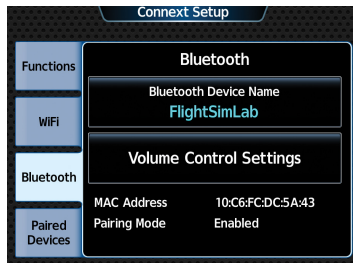

Bluetooth Setup Page as Shown on G3000/5000

- 5) On the Android device, start Garmin Pilot and tap **Home** >  > **Database Concierge**.
 - a) With a Garmin Pilot database ready to be uploaded, the G3000/5000 Connex message icon will flash.
 - b) Tap the Connex message icon.
 - c) Tap the Connex database message, which should read that database(s) are ready to upload.
 - d) The 'Start Transfer' button will now be highlighted. Touch the **Start Transfer** button on the **Database Status** screen.

Or:


- 6) From the **Home** screen, touch **Utilities** > **Setup** > **Database Status** > **Device Database(s)** until Active Databases is displayed.
- 7) The 'Start Transfer' button will now be highlighted. Touch the **Start Transfer** button on the **Database Status** screen.

- 8) On the Android device, connect to the indicated SSID Wi-Fi network on the **Connex Setup** screen.




WiFi Setup Page as Shown on G3000/5000

- 9) The database update status will appear in the status window at the top of the page. The load is complete when 'Databases Ready' is displayed.

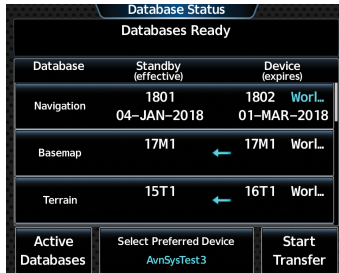

Database Concierge Updates Available as Shown on G3000/5000

- 10) A cyan double arrow will appear between the Standby and Active columns to show which standby databases will be transferred to Active at the next power cycle.

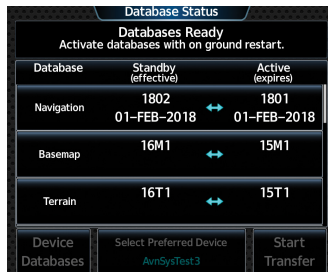

Databases Transfer Complete Status as Shown on G3000/5000

- 11) Database update status can be monitored on the **Database Status** screen or on **Database Concierge** within the Garmin Pilot app.

- 12) Once the database transfers are complete, the system will display a prompt to restart the avionics on the ground to finish the database transfer process.
- 13) Verify the databases are current on the **Database Status** screen or on the **Detailed Database Information** screen.

DEVICES


PAIRING A DEVICE

- 1) Touch **Home** > .
- 2) Touch the desired device tab.
- 3) Touch **VIEW INSTRUCTIONS**.
- 4) Follow the instructions to pair the device to the Android.

TROUBLESHOOTING A DEVICE

If a Bluetooth connection cannot be established, it may be necessary to remove the device from the list of available devices on the Android and repeat the pairing instructions.

Removing Device From List of Available Devices:

- 1) On the Android device, go to **Settings** > **Bluetooth**. Ensure Bluetooth is **On**.
- 2) In the list of devices, touch the  next to the device to be removed.
- 3) Touch **Forget this Device**.
- 4) Repeat the pairing instructions.


GARMIN PILOT COMPATIBLE WATCH

Garmin Pilot can share Flight Plans with a Garmin Pilot compatible watch via Bluetooth connection. When a Garmin Pilot compatible Watch is in 'Share Mode' it will automatically pair with an Android device.



NOTE: *Route sharing can be displayed on a Garmin Pilot compatible watch with Android devices that support Bluetooth 4.0 +.*


Sending User Waypoints to a Garmin Pilot Compatible Watch:


- 1) From any page touch **Home** >  > **All Devices**.
- 2) Scroll down to the Other Devices section, if necessary, and select the desired watch.
- 3) Ensure the Garmin Pilot compatible watch is in 'Share Mode'. Touch **Send** next to the desired waypoint to send. Waypoints that have been shared with the watch will momentarily display a green check mark.

Sending Flight Plans to Garmin Pilot Compatible Watch:

From any page touch **Home** >  > **Menu** > **Share Flight Plan**. Ensure the watch is in 'Share Mode' to receive flight plan data.

Or:

- 1) From any page touch **Home** >  > **All Devices**.
- 2) Scroll down to the Other Devices section, if necessary, and select the desired Watch.
- 3) Touch **Send** next to the desired flight plan to send.

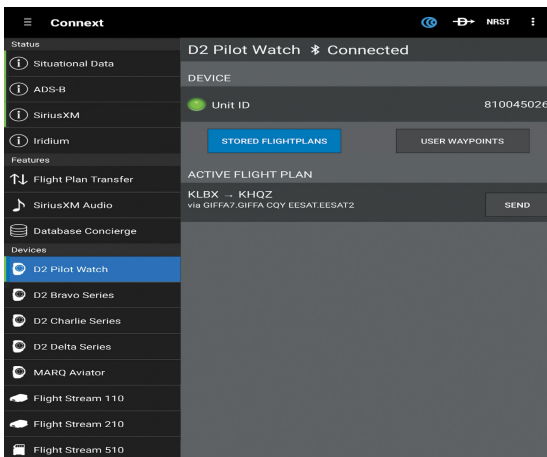

Connex Page (D2 Pilot Watch Tab)

FLIGHT STREAM

Flight Stream is a wireless Bluetooth gateway that integrates pre-flight and in-flight activities by enabling bi-directional communication between Garmin avionics and Garmin Pilot. When Garmin Pilot is paired with a Flight Stream 110/210/510 connected to a compatible ADS-B device, the app will display a pop-up window and play an audible alert to notify users of nearby ADS-B traffic.

Flight Stream & Remote Capabilities	Flight Stream 110	Flight Stream 210	Flight Stream 510
GPS (Position, Velocity, and Time)	✓	✓	✓
ADS-B Weather and Traffic	✓	✓	✓
SXM Weather	✓	✓	✓
SXM Audio Remote Control	✓	✓	✓
Attitude Information		✓	✓
Two-way Flight Plan Transfer		✓	✓
GDL 88 and GDL 69/69A Compatible	✓	✓	
GTN Series, GNS 430W/530W, G1000 NXi, and G3000/5000 Compatible		✓	✓
Database Concierge			✓

Flight Stream 110/210/510 Capabilities



NOTE: Up to four mobile devices can be simultaneously connected to a Flight Stream.

Flight Stream 110 enables the following communication between Garmin avionics and Garmin Pilot:

- The GDL 88 shares weather and traffic with Garmin Pilot.
- The GDL 69 shares SXM weather with Garmin Pilot.
- A compatible GPS Navigator shares GPS information with Garmin Pilot.
- Remotely control SiriusXM satellite radio from Garmin Pilot.

Flight Stream 210 enables all of the previous communications including:

- Flight plan transfer to and from a compatible GPS Navigator.
- Adding of victor airways into flight plans from Garmin Pilot to a compatible GPS Navigator.
- Shares attitude information to the Garmin Pilot's Synthetic Vision and panel displays.

Flight Steam 510 enables all of the above communications including:

- Database Concierge functionality that updates databases for compatible systems, in addition to loading upcoming database cycles for automatic transition as the cycle becomes active.



NOTE: *It will be necessary to disconnect from previous Wi-Fi hotspots to connect to a Flight Stream 510 over Wi-Fi.*



NOTE: *When connected to a Flight Stream 510 over Bluetooth, if new database downloads are available and Garmin Pilot has previously connected to the Flight Stream 510, Garmin Pilot will automatically and temporarily connect over Wi-Fi to download the new databases, then switch back to Bluetooth.*


GDL 39


The GDL 39 is a Bluetooth[®] enabled receive-only data link radio with on-board GPS, 978 MHz (Universal Access Transceiver frequency band), and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and Traffic Information Service-Broadcast (TIS-B) traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth[®]. The GDL 39 Tab displays the GDL 39 Bluetooth connection status, GDL 39 firmware version, Pressure and Geometric Altitude. The Traffic information includes the number and source (e.g., ADS-B air-to-air, or TIS-B) of traffic the GDL 39 is currently tracking. The Weather information provides the age of weather products received through (FIS-B). The GDL 39 also has a pressure altitude sensor to aide in displaying the relative altitude of received traffic information.




NOTE: Update the GDL 39 firmware in order to take advantage of the Bluetooth connectivity improvements in Garmin Pilot.

Updating GDL 39 / GDL 39 3D Firmware:

- 1) Ensure the tablet and the GDL 39 / GDL 39 3D are connected to a reliable external power source.
- 2) From any page, touch **Home** > .
- 3) Touch the **GDL 39** Tab.
- 4) Touch **Update Firmware**. (The 'Update Firmware' button is only displayed when an update is available.) The **Release Notes** Window is displayed.
- 5) After reading the release notes touch **Continue**.

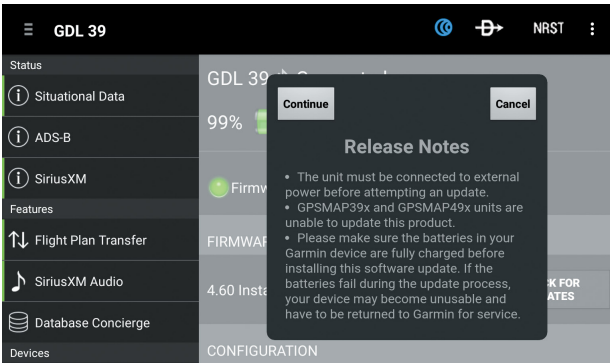

GDL 39 Release Notes

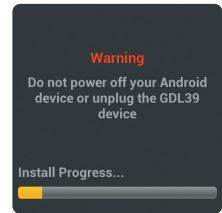


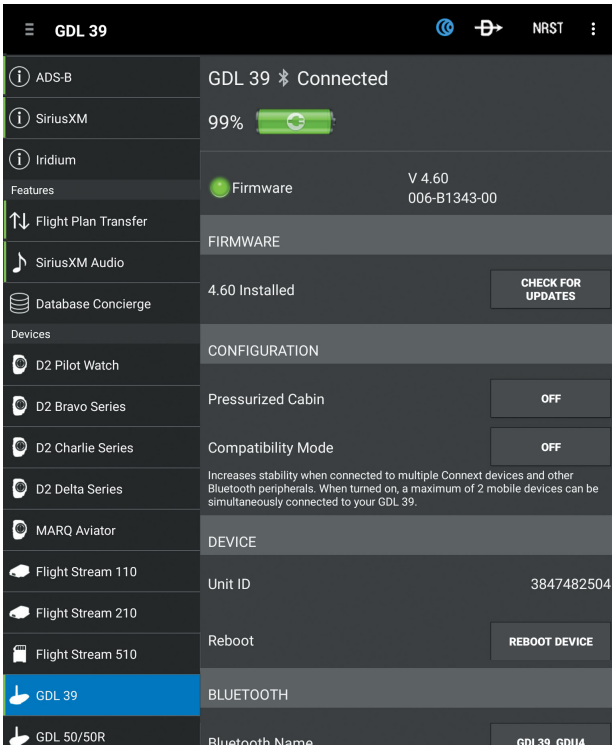
GDL 39 Firmware Warning



CAUTION: Never remove power from the GDL 39 or power off the Android device during a GDL 39 firmware update. If power is removed from the GDL 39 during a firmware update it will be rendered inoperable and service will be required.

Configuring the GDL 39 / GDL 39 3D for a Pressurized or Non-Pressurized Aircraft:

- 1) From any page, touch **Home** > .
- 2) Touch the **GDL 39** Tab.
- 3) Touch Pressurized Cabin to select/deselect.



Connex Page (GDL 39 Tab)



NOTE: When connected to a GDL 39, the device GPS information is replaced with GDL 39 GPS information. The GDL 39 GPS receiver is capable of updating position information at a much higher frequency, thus providing more accurate GPS position information.

GDL 51/51R

The GDL 51 is a Bluetooth[®] enabled portable receiver that receives internal WAAS enabled GPS, SiriusXM weather/audio, attitude and pressure information to compatible displays and audio devices via Bluetooth[®] wireless technology. The GDL 51/51R tab displays the GDL 51 Bluetooth connection status and GDL 51 firmware version. The rechargeable lithium-ion battery in the GDL 51 allows the unit to receive SiriusXM data for up to 7 hours on a single charge.

The GDL 51R remote mount version can be hard wired or be wirelessly connected to G3X Touch, and aera 660/760/795/796, while also wirelessly connecting to Garmin Pilot. These products will request this information over a Connex data connection.

GDL 52/52R

The GDL 52 is a Bluetooth[®] enabled portable receiver receives internal WAAS-enabled GPS, SiriusXM weather/audio, ADS-B traffic and weather, attitude and pressure information to compatible displays and audio devices via Bluetooth[®] wireless technology and/or over wired connections. The GDL 52 receives traffic (ADS-B/ADS-R, air-to-air, or TIS-B) on both Universal Access Transceiver (UAT) frequency band, and 1090 MHz Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air, and Traffic Information Service-Broadcast (TIS-B) traffic information), and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth[®]. The GDL 52/52R tab displays the GDL 52 Bluetooth connection status and GDL 52 firmware version. The Traffic information includes the number and source (e.g., ADS-B/ADS-R, air-to-air, or TIS-B) of traffic the GDL 52 is currently tracking. The rechargeable lithium-ion battery in the GDL 52 allows the unit to operate for up to 5 hours on a single charge.

The GDL 52R remote mount version can be hard wired or be wirelessly connected to G3X Touch, and aera 660/760/795/796, while also wirelessly connecting to Garmin Pilot. These products will request this information over a Connex data connection.

GDL 60

The GDL 60 provides LTE and Wi-Fi connectivity capabilities to and from an aircraft, allowing the user to view an aircraft's data and location remotely via the Garmin Pilot app on a mobile device.

Compatible Devices with GDL 60 Datalink PlaneSync Technology			
G3000	G700 TXi	GTN 625Xi	GTN 725Xi
G500 TXi	GI 275	GTN 635Xi	GTN 750Xi
G600 TXi	GI 275 EIS	GTN 650Xi	TXi EIS

GDL 60 Compatible Devices

PLANESYNC™

When properly connected and configured with a compatible GTN Xi navigator and select flight decks, the GDL 60 is the datalink that enables the PlaneSync™ technology, which facilitates the following functionality:

- Automatic database downloads via 4G LTE cellular or Wi-Fi.
- Real-time aircraft status via the Aircraft Dashboard.
- Upload flight plans to a compatible navigator.
- Interface in-flight with portable devices, apps, avionics, a GDL 69A SXM satellite receiver, and a GSR 56 satellite transceiver via Connex services.
- Upon completion of a flight, EIS data and other info are uploaded into cloud storage for review and/or documentation.



REMOTE AIRCRAFT STATUS



With a properly installed, configured, and connected GDL 60, Garmin Pilot will display the Aircraft Dashboard page, which allows the user to check the status of an active/standby database, Hobbs/Tach time, fuel quantity, battery voltage, Outside Air Temperature (OAT), oil temperature, and GPS location of the aircraft.

When Garmin Pilot is paired to the GDL 60, select the **Aircraft** page to view the Remote Aircraft Status.

The screenshot shows the Aircraft Dashboard interface with the following callouts and data:

- Touch to Select Aircraft Last Database Update & Status:** Points to the aircraft selection area showing "N0003X - Test 3" and "CIRRUS SR-22".
- Last Sync:** Points to the "Updated 2 mins ago" text.
- Sync Progress:** Points to the "PlaneSync" progress indicator.
- Touch to Sync:** Points to the circular sync button.
- Touch to View:** Points to the "SHOW DETAILS" button.
- Aircraft Info:** Points to the main data cards:
 - Hobbs: 1000 HRS
 - Tach: 1946.1 HRS
 - Fuel: 90 GAL (45-45)
 - Battery: 28.3 V
 - Oxygen: 1500 PSI
 - TKS: 4 GAL TKS1, 4 GAL TKS2
 - OAT: 70 °F
 - Oil: 81 °F
- Airport Info:** Points to the METAR and KFCM data:
 - METAR: KFCM 10:53 CDT
 - KFCM: FLYING CLOUD
 - Winds: 110°@6615kt
 - Ceiling: Unlimited
 - Visibility: 10SM
 - Temp/Dew: 66°r / 52°r
 - Altimeter: 29.85IN
- Aircraft Position:** Points to the red location pin on the Google Maps satellite view.
- Touch to View in Google Maps:** Points to the Google Maps icon in the bottom right corner.

Connex Page - GDL 60 - Aircraft Dashboard

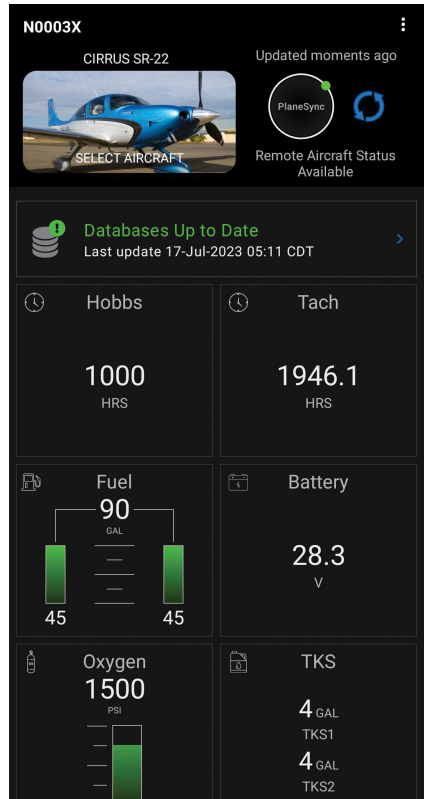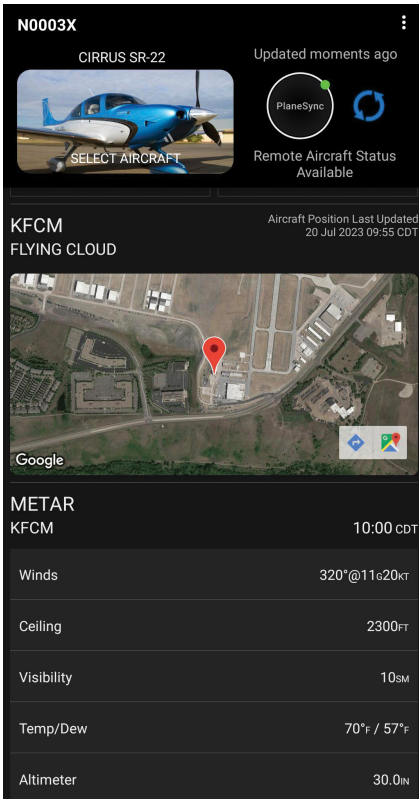

Connex Page - GDL 60 - Aircraft Dashboard - Android Phone

GLO

GLO receives position information from both GPS and GLONASS satellite constellations. This allows GLO to connect to up to 24 more satellites and updates its position information up to 10 times more often than devices that rely on GPS alone. As such, when connected to GLO, the Android GPS information is replaced with GLO GPS information.

AERA 660/760

The aera 660/760 is a handheld touchscreen GPS navigator. Pairing an Android device with an aera 660/760 enables wireless transfer of flight plans to/from an Android device (using Garmin Pilot).

G3X TOUCH



NOTE: *Interfacing with Android devices requires a Connex configuration module for proper Bluetooth operation. Without this configuration module the G3X Touch/Garmin Pilot authentication will not complete. Refer to the G3X Touch Installation Manual for more information.*



NOTE: *In a multiple display G3X Touch system, Connex Bluetooth connections to Garmin Pilot devices should only be made to the PFD1.*

The G3X Touch is a large-format flight display with a wireless Bluetooth gateway that can be used to enable bi-directional communication between the G3X Touch and Garmin Pilot.

Pairing an Android device with G3X Touch enables the following communication between G3X Touch and Garmin Pilot:

- Wireless transfer of flight plans to/from an Android device (using Garmin Pilot) to the G3X Touch.
- An Android device (with Garmin Pilot) paired with both a G3X Touch and compatible ADS-B device, shares GPS, attitude, traffic, and weather data.




Connex Bluetooth pairing recommendations:

- Only use the Bluetooth interface on PFD1 for Connex data sharing with Android devices using Garmin Pilot.
- Do not attempt to pair the G3X Touch displays to each other in a multiple display installation.
- Turn off any display's Bluetooth transceiver which is not in use.



NOTE: *In general, one or two devices running Garmin Pilot may be connected as shown below. Due to the wide variability of these devices, the best user experience may, in some cases, be limited to a single mobile device connected to the system components.*

Connex Bluetooth Supported Configurations
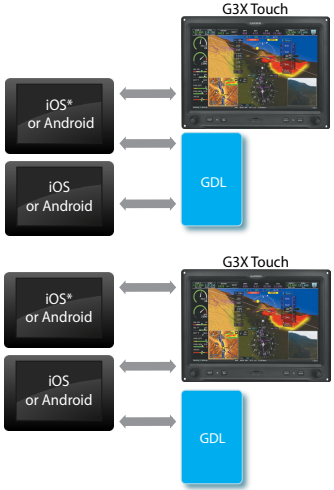
<p>One or two Android or iOS devices may be connected to the G3X Touch</p>	
<p>One Android or iOS* device may be connected to both a GDL and a G3X Touch.</p>	
<p>A second Android or iOS* device may be connected to either the GDL or the G3X Touch, but not both.</p>	

*iOS Garmin Pilot 7.2+ with location data disabled

GTX 345/45R

The GTX 345/45R is a Bluetooth[®] enabled receive-only data link radio with on-board GPS, Universal Access Transceiver, and Extended Squitter (1090 ES) receivers. It is designed to receive, process, and output traffic (ADS-B air-to-air and Traffic Information Service-Broadcast (TIS-B) traffic information) and weather (Flight Information Service-Broadcast (FIS-B)) information to Garmin Pilot wirelessly through Bluetooth[®]. The GTX 345/45R Tab displays the Bluetooth connection status, GTX 345/45R firmware version, pressure and geometric altitude. The Traffic information includes the number and source (e.g., ADS-B air-to-air, or TIS-B) of traffic the GTX 345/45R is currently tracking. The Weather information provides the age of weather products received through (FIS-B). The GTX 345/45R also has a pressure altitude sensor to aid in displaying the relative altitude of received traffic information.



NOTE: *When connected to a GTX 345/45R, the device GPS information is replaced with GTX 345/45R GPS information. The GTX 345/45R GPS receiver is capable of updating position information at a much higher frequency, thus providing more accurate GPS position information.*

GPS 175/GNC 355/GNX 375

The GPS 175, GNC 355, & the GNX 375 are 2" by 6.25" panel mount navigators with full color capacitive touchscreen technology.

The GPS 175 is a GPS/WAAS navigator with en route, terminal, and precision/non-precision approach capabilities. The GNC 355 combines the functionality of the GPS 175 with a built-in 10-watt Comm radio. The GNX 375 combines the functionality of the GPS 175 with a mode S transponder.

Each unit is Bluetooth compatible, providing flight plan, traffic, weather, and position data to an available portable device.

GI 275

The GI 275 is an electronic flight instrument that directly replaces legacy primary flight instruments in the cockpit. The GI 275 is suitable as a direct replacement for a variety of instruments, including an attitude indicator, attitude directional indicator (ADI), course deviation indicator (CDI), horizontal situation indicator (HSI), multi-function display (MFD) and engine indication system (EIS). Capable of serving as a 4-in-1 flight instrument with attitude, airspeed, altitude, and heading information, the GI 275 can also be installed as a standby to a number of glass flight displays and is available with a 60-minute back-up battery.


The GI 275 boasts a standard 3.125" form factor and rear-mount design that minimizes panel modification. Several variants of the GI 275 are available to meet the needs of many business and general aviation aircraft models. Units can be configured in many different ways to display flight plan, traffic, terrain, weather, and position data to an available portable device thanks to Bluetooth connectivity. For additional information, please refer to the GI 275 Pilot's Guide.

VIRB[®] ACTION CAMERAS

Garmin Pilot allows the user to remotely control any VIRB[®] action camera to start and stop video recording as well as take still photos. Videos and photos taken with VIRB[®] action cameras are stored on the VIRB[®] device itself, not on the phone or tablet running Garmin Pilot. VIRB[®] videos and photos can be accessed using the Garmin VIRB app.

Connecting a VIRB[®] Action Camera:


- 1) On the VIRB[®] camera, select **MODE** > **SETUP** > **WiFi**.
- 2) Change WiFi to **On**. The camera's SSID and password will appear on the camera display.
- 3) On the Android device, go to **Settings** > **Wi-Fi**. Ensure Wi-Fi is **On** and select the camera's SSID from the list.
- 4) On the Android device, enter the password as shown on the camera's display.
- 5) In Garmin Pilot, touch **Home** > **Connex** > **VIRB**.
- 6) Touch **Connect**.

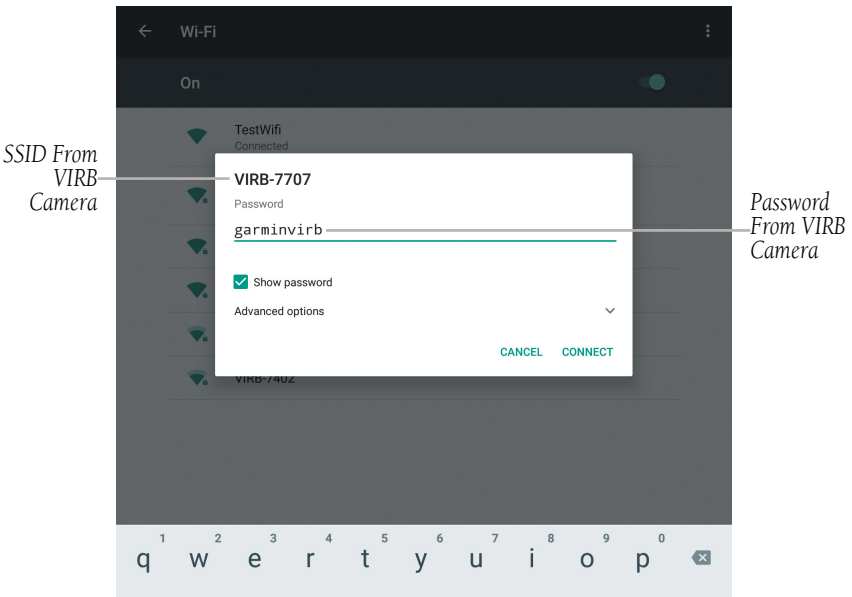

Connecting To VIRB Over Wi-Fi


The Camera Settings provided by Garmin Pilot match the settings available in the Garmin VIRB app, allowing full control of recording without switching apps.

Configuring Camera Settings:

- 1) From any page touch **Home** >  > **VIRB**.
- 2) Touch **Configure Camera Settings**.

Configuring Auto-Attach VIRB photos to logbook entry:

- 1) From any page, touch **Home** >  > **VIRB** Tab.
- 2) Touch **Configure Camera Settings**.
- 3) Touch **Auto-Attach VIRB Photos to Logbook Entry** switch On.

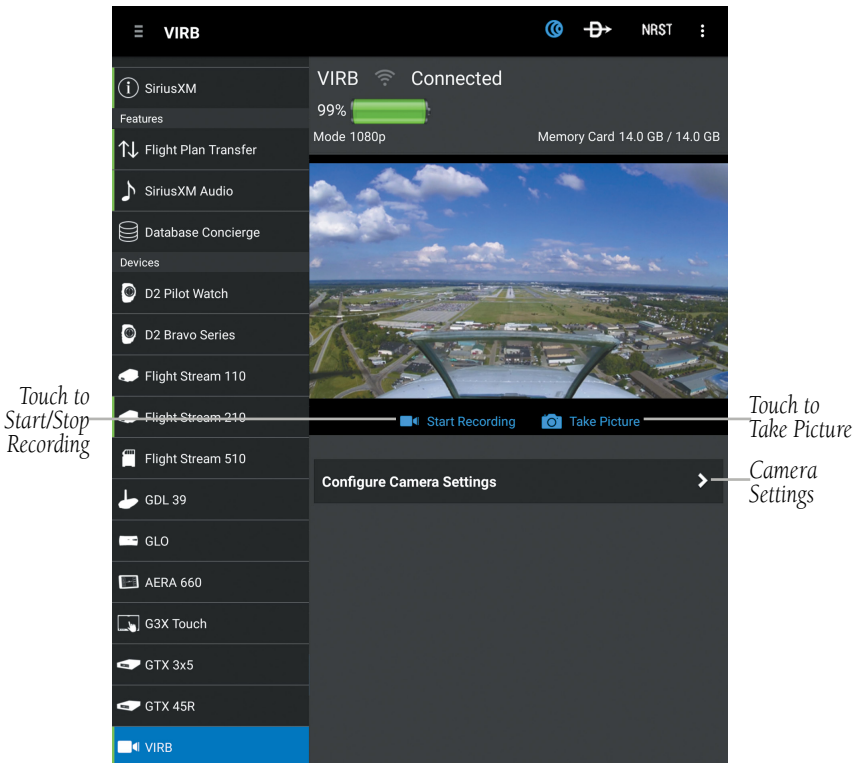


Connex Page - VIRB Elite Tab


Recording using a VIRB® Action Camera:

- 1) From any page touch **Home** >  > **VIRB**.
- 2) Touch **Start Recording/Stop Recording**.

Taking a photo with a VIRB® Action Camera:

- 1) From any page touch **Home** >  > **VIRB**.
- 2) Touch **Take Picture**.

Using the VIRB® Widget in Split-Screen Mode:

- 1) From any page, touch **Home** > .
- 2) Touch **Menu** > .
- 3) Touch the **VIRB** tab to access the VIRB Widget.




VIRB Widget (Split-Screen)

SUBSCRIPTIONS

Garmin Pilot offers the ability to purchase two additional subscriptions. First, Geo-referenced FliteCharts show aircraft position on over 11,000 approach plates. Second, Garmin's SafeTaxi shows runways, taxiways, FBOs and hangers, geo-referenced with the current location.

GEO-REFERENCED FLITECHARTS

If a FliteCharts subscription has been purchased, ensure that Garmin Pilot log-in information has been entered in the subscriptions tab of the Settings Page. Geo-referenced FliteCharts will be active on all available approach charts.

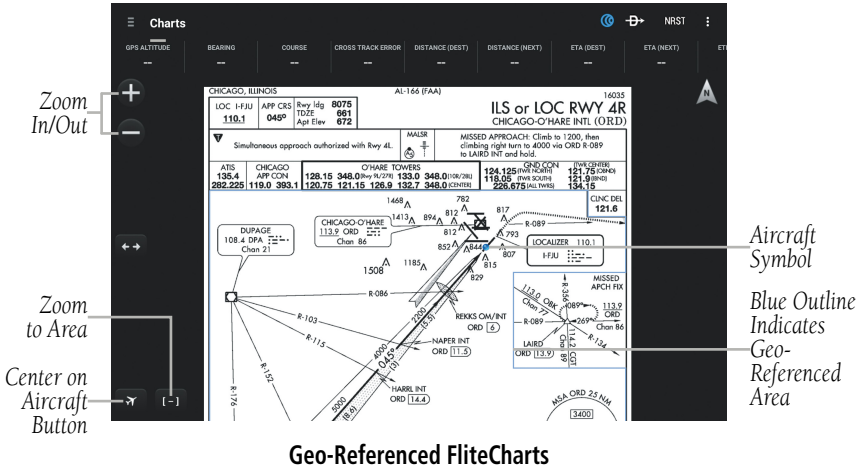

SAFETAXI

SafeTaxi is an enhanced feature that gives an airport diagram with greater map detail. SafeTaxi diagrams showing taxiways with identifying letters, runway numbers, airport Hot Spots, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges.

APPENDIX A: LICENSE AGREEMENT AND WARRANTY

CONTACT GARMIN

Contact Garmin Product Support at flygarmin.com if you have any questions while using Garmin Pilot.

END-USER LICENSE AGREEMENT

Garmin Pilot™ by Garmin application and data (the “Application”) are licensed, not sold. The Application is provided under the following license and is subject to the following terms and conditions, which are agreed to by End User (“you” or “your”), on the one hand, and Garmin, International, Inc. and its affiliates (collectively, “Garmin”) on the other hand.

IMPORTANT: CAREFULLY READ THIS LICENSE BEFORE USING THIS APPLICATION. USING THIS APPLICATION INDICATES YOUR ACKNOWLEDGMENT THAT YOU HAVE READ THIS LICENSE AND AGREE TO ITS TERMS. IF YOU DO NOT AGREE, THEN YOU MUST NOT USE THE APPLICATION.

LICENSE TERMS AND CONDITIONS

Garmin grants you a limited, non-exclusive license to use the Application in accordance with the terms of this Agreement. You agree not to reproduce, copy, modify, decompile, disassemble, reverse engineer or create derivative works of any portion of the Application, and you may not transfer or distribute it in any form, for any purpose. Garmin reserves the right to anonymously collect and report non-personally identifiable information related to your use of the Application, such as the frequency with which you use the Application.

Restrictions. You are prohibited from selling, renting or leasing the Application to any other person or third party. You acknowledge the Application should be used only for general information purposes and you should not rely on the Application for any life or death situation. The Application should not be relied upon as a sole source of navigation.

No Warranty. This Application is provided to you “as is,” and you agree to use it at your own risk. Garmin makes no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, merchantability, fitness for a particular purpose, usefulness, use or results to be obtained from the Application, or the Application will be uninterrupted or error-free.

Advertisements. If the Application is partially or fully supported by advertisements you will receive advertisements on your mobile device when you use the Application. Garmin might also share on an anonymous basis the location of your mobile device with the third party supplier of advertisements so the supplier can provide you with advertisements that are relevant to the location of your device.

Meteo France Weather Data. Weather data provided and/or displayed by Meteo France in connection with the Application, hereafter called "Meteo France Weather Data", only indicates the measurement or the most probable evolution of a set of elements. You therefore acknowledge that Meteo France shall not be liable for the accuracy of Meteo France Weather Data made available to you, whether such data are produced by Meteo France or by third-parties. Meteo France, moreover, cannot be held responsible for events that may result from the interpretation and/or utilization by you, directly or indirectly, of the Meteo France Weather Data made available. Meteo France cannot be held liable for the absence of observation data in the set of Meteo France Weather Data provided to you in the case of absence or delay in availability to Meteo France of data produced and owned by national meteorological services (NMS), via ECOMET or EUMETSAT, or via the Global Transmission System (GTS). Consequently, you refrain from pursuing either Meteo France or Meteo France's own providers for events relating to any interpretation of the information contained in the Meteo France Weather Data made available to you, or for missing data. You acknowledge that you have been fully informed of the restrictions of use of such Meteo France Weather Data, of the exclusions and/or of the limitations of liability regarding such Meteo France Weather Data and of the date of validity of Meteo France Weather Data provided and/or displayed by Meteo France, if any. The Meteo France Weather Data is provided on an "as is" basis, without any warranties or conditions, express or implied, including, but not limited to, any implied warranty arising by law, statute, usage of trade, or course of dealing. You assume all responsibility and risk for the use of the Meteo France Weather Data and Meteo France disclaims all liability for any loss, injury or damage, resulting from the use of the Meteo France Weather Data, whether direct or indirect, and whether or not Meteo France has been advised of or has knowledge of the possibility of such loss, injury or damage. In no event shall Meteo France have any liability to you or any other person or entity for any compensatory, indirect, incidental, special, consequential or exemplary damages whatsoever, including, but not limited to, loss of revenue or profit, or other commercial or economic loss, even if Meteo France has been advised of the possibility of such damages, or they are foreseeable.

Disclaimer of Warranty. GARMIN AND ITS AFFILIATES DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY GARMIN SHALL CREATE A WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability. GARMIN AND ITS AFFILIATES SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE APPLICATION, ANY DEFECT IN THE APPLICATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF GARMIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. GARMIN'S AND ITS AFFILIATES' TOTAL AGGREGATE LIABILITY WITH RESPECT TO ITS OBLIGATIONS UNDER THIS AGREEMENT OR OTHERWISE WITH RESPECT TO THE APPLICATION SHALL NOT EXCEED \$1.00. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You agree not to export from anywhere any part of the Application provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Indemnity. You agree to indemnify, defend and hold Garmin and its affiliates free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of the Application.

Entire Agreement. These terms and conditions constitute the entire agreement between Garmin and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. THE ABOVE TERMS AND CONDITIONS SHALL BE GOVERNED BY THE LAWS OF KANSAS, WITHOUT GIVING EFFECT TO ITS CONFLICT OF LAWS PROVISIONS. YOU AGREE TO SUBMIT TO THE JURISDICTION OF KANSAS FOR ANY AND ALL DISPUTES, CLAIMS AND ACTIONS ARISING FROM OR IN CONNECTION WITH THE APPLICATION PROVIDED TO YOU HEREUNDER.



WARNING: *For VFR use only as an aid to prudent navigation. All information is presented for reference only. You assume total responsibility and risk associated with using the AOPA Airport Directory.*

AOPA AIRPORT DIRECTORY NOTICE

AOPA MEMBERSHIP PUBLICATIONS, INC. AND ITS RELATED ORGANIZATIONS (HEREINAFTER COLLECTIVELY "AOPA") EXPRESSLY DISCLAIM ALL WARRANTIES, WITH RESPECT TO THE AOPA INFORMATION INCLUDED IN THIS DATA, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE INFORMATION IS PROVIDED "AS IS" AND AOPA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING ITS ACCURACY, RELIABILITY, OR OTHERWISE. UNDER NO CIRCUMSTANCES INCLUDING NEGLIGENCE, SHALL AOPA BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR RELATED DOCUMENTATION, EVEN IF AOPA OR AN AOPA AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. USER AGREES NOT TO SUE AOPA AND, TO THE MAXIMUM EXTENT ALLOWED BY LAW, TO RELEASE AND HOLD HARMLESS AOPA FROM ANY CAUSES OF ACTION, CLAIMS OR LOSSES RELATED TO ANY ACTUAL OR ALLEGED INACCURACIES IN THE INFORMATION ARISING OUT OF GARMIN'S USE OF THE INFORMATION IN THE DATASETS. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF IMPLIED WARRANTIES OR LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

SIRIUSXM SATELLITE RADIO SERVICE AGREEMENT

SiriusXM Satellite Radio Inc.

Hardware and required monthly subscription sold separately. Subscription fee is consumer only. Other fees and taxes, including a one-time activation fee may apply. All programming fees and weather data subject to change. SiriusXM WX weather data displays and individual product availability vary by hardware equipment. Reception of the SiriusXM signal may vary depending on location. Subscriptions subject to Customer Agreement included with the SiriusXM Welcome Kit and available at siriusxm.com. Available only in the 48 contiguous United States. SiriusXM WX is a trademark of SiriusXM Satellite Radio Inc.

Contact SiriusXM Satellite Radio by phone at 800.985.9200 to subscribe to SiriusXM Weather and/or SiriusXM Radio.

WEATHER DATA WARRANTY

THE WEATHER DATA SOFTWARE PRODUCT IS PROVIDED "AS IS." ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OF NON-INFRINGEMENT ARE HEREBY EXCLUDED.

USER SAFETY

If you use SiriusXM Services it is your responsibility to exercise prudent discretion and observe all safety measures required by law and your own common sense. You assume the entire risk related to your use of the Services. SiriusXM and Garmin assume no responsibility for accidents resulting from or associated with use of the Services. Your Radio Service includes traffic and weather information, and you acknowledge that such information is not for "safety for life", but is merely supplemental and advisory in nature, and therefore cannot be relied upon as safety-critical in connection with any aircraft, sea craft or automobile usage. This information is provided "as is" and SiriusXM and Garmin disclaim any and all warranties, express and implied, with respect thereto or the transmission or reception thereof. SiriusXM and Garmin further do not warrant the accuracy, reliability, completeness or timeliness of the traffic and weather information disclosed on the Radio Service. In no event will SiriusXM and Garmin, their data suppliers, service providers, marketing/distribution, software or Internet partners or hardware manufacturers be liable to you or to any third party for any direct, indirect, incidental, consequential, special, exemplary or punitive damages or lost profits resulting from use of or interruptions in the transmission or reception of the Services.

LIMITS ON OUR RESPONSIBILITY

a) DISCLAIMERS.

EXCEPT AS EXPRESSLY PROVIDED HEREIN, WE MAKE NO WARRANTY OR REPRESENTATION, EITHER EXPRESS OR IMPLIED, REGARDING THE RADIO SERVICE. YOUR USE OF THE SERVICE IS AT YOUR SOLE RISK. THE CONTENT AND FUNCTIONALITY OF THE SERVICE IS PROVIDED "AS IS" WITHOUT ANY WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. ALL SUCH WARRANTIES OR REPRESENTATIONS (INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT) ARE HEREBY DISCLAIMED.

b) LIMITATIONS OF LIABILITY.

WE ARE NOT RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES RELATING TO THE USE OF THE RADIO SERVICE, WHETHER BASED ON NEGLIGENCE OR OTHERWISE. OUR TOTAL LIABILITY TO YOU AND ANY OTHER PERSONS RECEIVING OUR SERVICES, REGARDLESS OF THE CAUSE, WILL IN NO EVENT EXCEED THE AMOUNTS THAT YOU HAVE PAID TO US FOR THE SERVICE THAT YOU RECEIVED DURING THE SIX (6) MONTH PERIOD IMMEDIATELY PRIOR TO THE SPECIFIC EVENT THAT GAVE RISE TO THE APPLICABLE DAMAGE OR LOSS. THIS ALLOCATION OF RISK IS REFLECTED IN OUR PRICES. YOU MAY HAVE GREATER RIGHTS THAN DESCRIBED ABOVE UNDER YOUR STATE'S LAWS

This product was developed using DAFIF™, a product of the National Geospatial-Intelligence Agency.

This product has not been endorsed or otherwise approved by the National Geospatial-Intelligence Agency, or the United States Department of Defense (10 U.S.C. 425)

a. Under 10 U.S.C. 456, no civil action may be brought against the United States on the basis of the content of a navigational aid prepared or disseminated by either the former Defense Mapping Agency (DMA), National Imagery and Mapping Agency (NIMA), or the National Geospatial-Intelligence Agency (NGA).

b. The DAFIF™ product is provided "as is," and no warranty, express or implied, including, but not limited to the implied warranties of merchantability and fitness for particular purpose or arising by statute or otherwise in law or from a course of dealing or usage in trade, is made by NGA as to the accuracy and functioning of the product.

c. Neither NGA nor its personnel will be liable for any claims, losses, or damages arising from or connected with the use of this product. The user agrees to hold harmless the United States National Geospatial-Intelligence Agency. The user's sole and exclusive remedy is to stop using the DAFIF product.

INDEX

A

Accelerometers 3
ADS-B 2 50 58
Advanced Map Settings 28 200
aera 335 338
AHRS 310
Aircraft Information 7 9 42 44 45 62 80 171 172
AIRMET 213 267
Airway 26 114 171 332
Alert 16 18 29 31 39 153 201 280 290 295 312
Altimeter 24 47 161 238 263 310
Altitude 24 56 64 84 134 135 136 140 161 165 176 178 209 236 237 239 242 262 271 274 275 286 287 288 289 290 291 295 296 310 332
Amend 171
Attitude Indicator 242 243 310 342
Autoroute 179 180 181 184

B

Base Map 25 193 211
Bearing 24 209 234 236 285
Binder 157 297 298 300 301 302 303
Brightness 3 15

C

Cancel 18 65 72 74 81 171 172 191
Chart Overlay 27 200 303 304 305 306
Clone 80 81 187
Cloud Cover 260 270 276
Cross Track Error 24 209 236

D

D2 330

Database Concierge 55 321 322 323 324 325 326 327 328 331 332

Dewpoint 161 263

E

Eurocontrol 180

European 41 171 179 180 181 182 183 184 185

F

FBO 12 34 148 149 155 157 159 160 161 169

Flight Conditions 264

Flight Plan Transfer 314 315 316 331

Flight Stream 56 58 250 321 322 323 324 325 327 331 332

FSS 172

Fuel Prices 1 129 140 141 145 159 202 203

G

G3X Touch 56 335 339 340

Garmin Pilot Compatible Watch 329 330

Garmin Weather Data Services 48 192 249

GI 275 342

Glide Range Ring 21 23 207

GLO 2 50

Google Maps 46 140 141 147 224 305

Ground Speed 24 135 136 186 209 237 239 310

H

Hot Spot 157 347

I

Icing 53 168 247 262 266 267 270 272

IFR 109 168 171 172 175 177 180 181

Infrared 1 260 261

J

Jet 140 145

K

Keyboard 4 28 42 44 110 111 113 114 115 172 176 177 200 210 300

L

Latitude 24 47 111 209 237
Lightning 109 272 276
Logbook Auto-Logging 68
Logbook Photos 67
Logbook Tracks 69 70 213
Longitude 24 111 238

M

METAR 24 161 162 238 263 266 276
MVFR 263 264 265

N

Nav Aids
 Nav aids 12 28 29 34 197 200 201
NavTrack 109 170 251 254
NOTAM 12 25 26 30 34 48 146 148 149 155 156 157 158 159 161 1
 69 192 193 212 213 215 216 217 218 219 220 221 222 223 27
 9 280

O

Observation Age 264
Obstacle 202 206 213 279 290 294 296 303
Ownship 23 194 203 204 206 207

P

Panel Mode 5
Performance Data 85 133 177 186
Pinch Zoom 3 4
PlaneSync 336–Index-6
Pre-flight Planning 109
Push-Pin 254

R

Radar 189 194 202 203 256 258 261 266
Radial Menu 192 212 213 214 215 216 223 225 230 232 267 268 276
305
Recent 35
Rotation lock 3
Rotation Lock 3
Rubber-Band 112 173

S

SafeTaxi 5 25 28 31 39 140 141 146 192 193 201 203 208 235 346 3
47
Scratch Pad 12 32 34 307 308
Split-Screen 5 21 25 26 70 170 192 193 217 235 236 243 244 245 24
7 248 249 251 252 278 279 345 347
Stadium TFR 269
STAR 232 297 302
Station ID 263 265
Stopwatch 13 14

T

Terrain 12 21 22 23 34 56 57 59 60 61 63 83 84 128 206 237 250 2
81 290 291 292 296 303 342
Traffic Alerts 40 312
Traffic Pattern 155

U

Units 13 35 47 342
Universal Access Transceiver 281 332 335 341
User Waypoint 19 46 112 173 212 213 228
US Instrument Procedures 101

V

- Velocity 24 237 282
- Vertical Speed 5 24 56 64 84 134 135 136 209 238
- VFR 1 7 26 27 28 43 109 172 175 177 194 200 201 211 263 264 265 350
- VIRB 5 67 235 342 343 344 345
- Visibility 24 28 29 30 43 47 140 161 163 164 196 197 198 199 200 201 205 209 216 219 238 263 264 265 267 276
- Visited Airports 74 76

W

- Waypoint Identifier 110 111 113 114 115 172
- Weather Briefing 1 189 190
- Weather Synopsis 189
- Widget 5 30 38 70 170 216 252 254 256 277 278 279 345
- Wind Barb 273 274
- Wind Gust 265
- Winds Aloft 1 5 48 161 165 189 202 203 213 246 247 248 273 275 286
- Wind Speed 24 43 238 263 265 273



Garmin International, Inc.
1200 East 151st Street
Olathe, Kansas 66062, U.S.A.

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park,
Southampton, Hampshire SO40 9LR U.K.

Garmin Corporation
No. 68, Zhangshu 2nd Road
Xizhi District, New Taipei City, Taiwan

flygarmin.com